


Cruise control with headlight beam height control, all 5-cylinder engines and K-Motronic 103 kW (4-cylinder)


from June 1990

Positions of relays:
also see "Fitting Locations"

Relay plate with fuse holder:

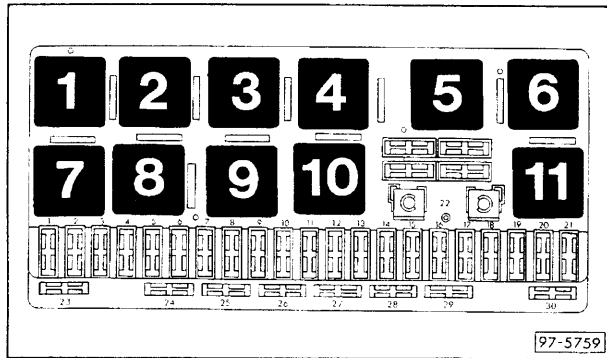

Auxiliary relay carrier

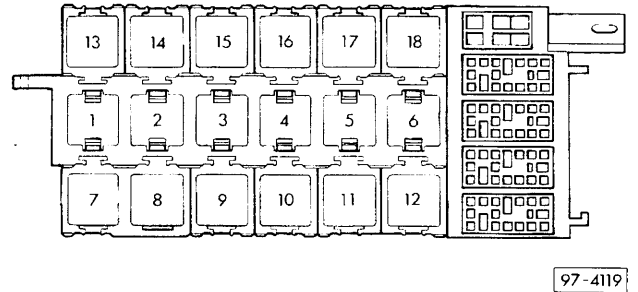


8 – Bridge connection for manual gearbox/relay for automatic gearbox

11 – Idle speed stabilization control unit
12 –

Fuse colours

- 30 A – green
- 25 A – white
- 20 A – yellow
- 15 A – blue
- 10 A – red
- 5 A – beige

Cruise control with headlight beam height control, all 5-cylinder engines and K-Motronic 103 kW (4-cylinder)

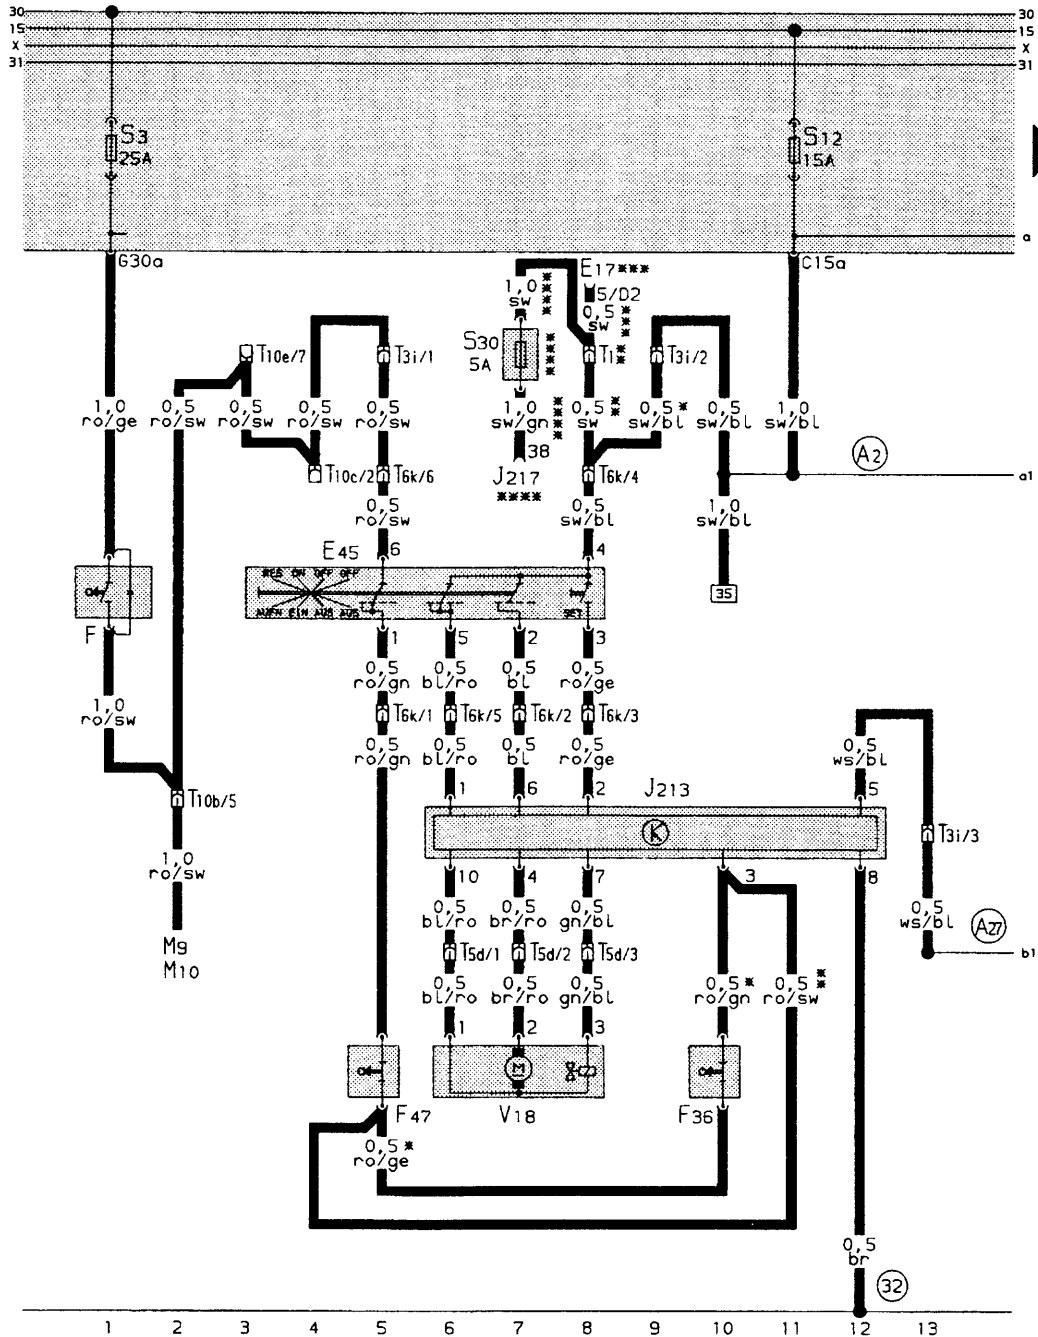

Wiring colours:


- bl = blue
- br = brown
- ge = yellow
- gn = green
- gr = grey
- li = purple
- ro = red
- sw = black
- ws = white

- E 17 – Starter inhibitor and reversing lights switch
- E 45 – Cruise control switch
- F – Brake light switch
- F 36 – Cruise control clutch pedal switch
- F 47 – Brake pedal switch for cruise control
- J 213 – Control unit for cruise control
- J 217 – Control unit for automatic gearbox
- M 9 – Brake light bulb, left
- M 10 – Brake light bulb, right
- S 30 – Separate fuse for cruise control
- T 1 – Connector single, behind dash panel
- T 3i – Connector 3 pin, blue, behind dash panel, left
- T 5d – Connector 5 pin, blue, behind dash panel
- T 6k – Connector 6 pin, behind trim on steering column
- T 10b – Connector 10 pin, brown, connector point in aux. relay carrier
- T 10c – Connector 10 pin, green, connector point in aux. relay carrier

- T 10e – Connector 10 pin, blue, connector point in aux. relay carrier
- V 18 – Vacuum pump for automatic cruise control
- Ⓢ2 – Earth point, behind dash panel, left
- Ⓐ2 – Positive (+) connection (15a), in dash panel wiring loom
- Ⓐ27 – Connection (speed signal), in dash panel wiring loom
- * – Only in vehicles with manual gearbox
- ** – Only in vehicles with automatic gearbox
- *** – Only in vehicles with three-speed automatic gearbox
- **** – Only in vehicles with four-speed automatic gearbox

97-6731


Cruise control with headlight beam height control, all 5-cylinder engines and K-Motronic 103 kW (4-cylinder)

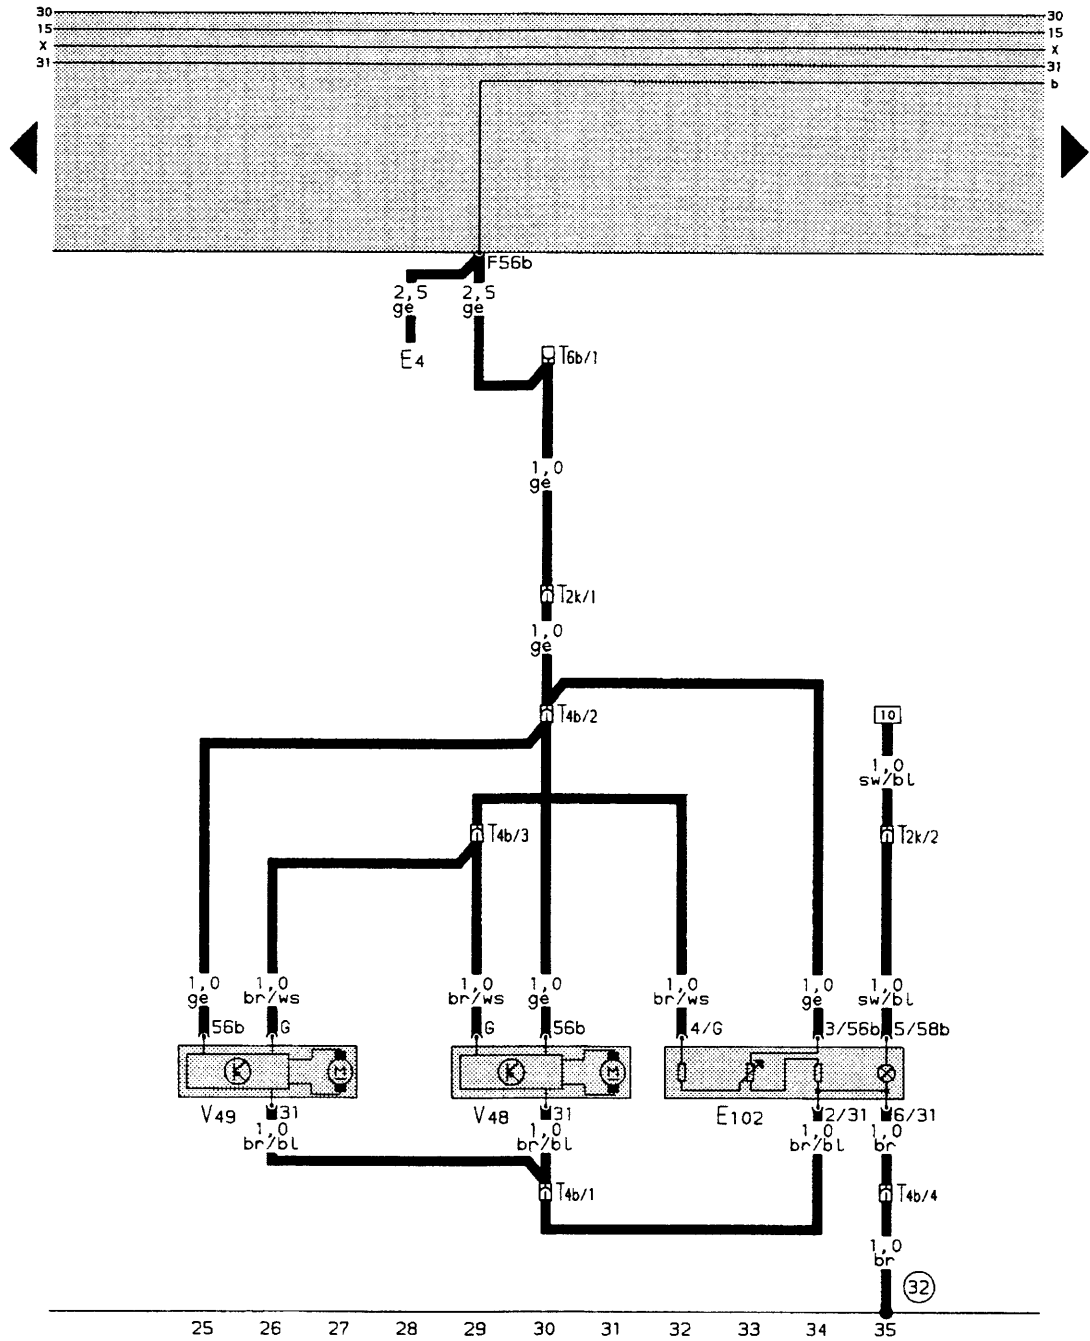

87-6733

- E 4 – Headlight dipper/flasher switch
- E 102 – Headlight beam adjuster
- T 2k – Connector 2 pin, black, behind dash panel, left
- T 4b – Connector 4 pin, black, behind dash panel
- T 6b – Connector 6 pin, coding plug connection for fog lights, behind dash panel, left
- V 48 – Motor left for beam adjustment
- V 49 – Motor right for beam adjustment
- Ⓣ – Earth point, behind dash panel, left

Cruise control with headlight beam height control, all 5-cylinder engines and K-Motronic 103 kW (4-cylinder)

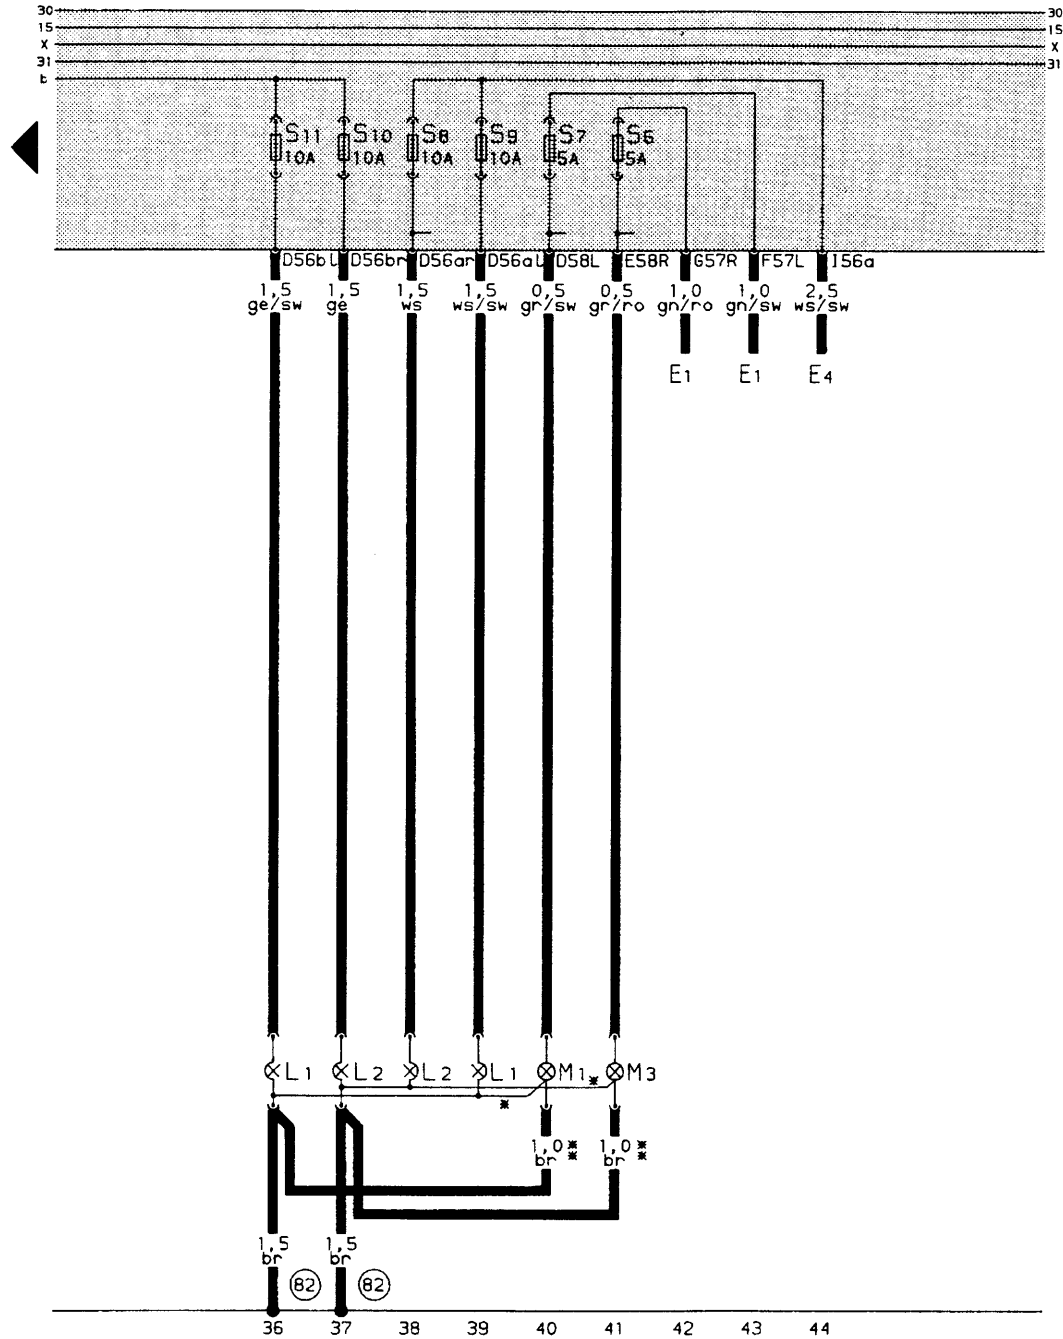

Wiring colours:

- bl = blue
- br = brown
- ge = yellow
- gn = green
- gr = grey
- li = purple
- ro = red
- sw = black
- ws = white

- E 1 – Lighting switch
- E 4 – Headlight dipper/flasher switch
- L 1 – Twin filament bulb, for left headlight
- L 2 – Twin filament bulb, for right headlight
- M 1 – Side light bulb, left
- M 3 – Side light bulb, right
- ⊕ – Earth connection – 1 –, in front left wiring loom
- * – Only with 5-cylinder engines
- ** – Only with K-Motronic 103 kW (4-cylinder)

97-6734