



Stereo radio with active loudspeakers, Audi Coupé

from June 1990

Positions of relays:
also see "Fitting Locations"

Relay plate with fuse holder:


Auxiliary relay carrier

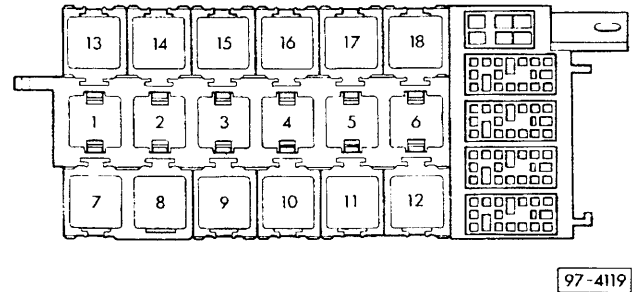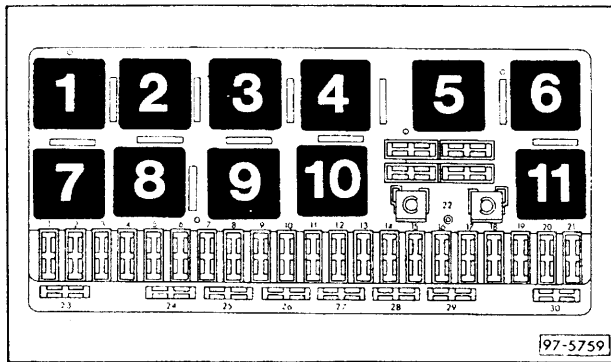

Fuse colours

- 30 A – green
- 25 A – white
- 20 A – yellow
- 15 A – blue
- 10 A – red
- 5 A – beige

Stereo radio with active loudspeakers, Audi Coupé

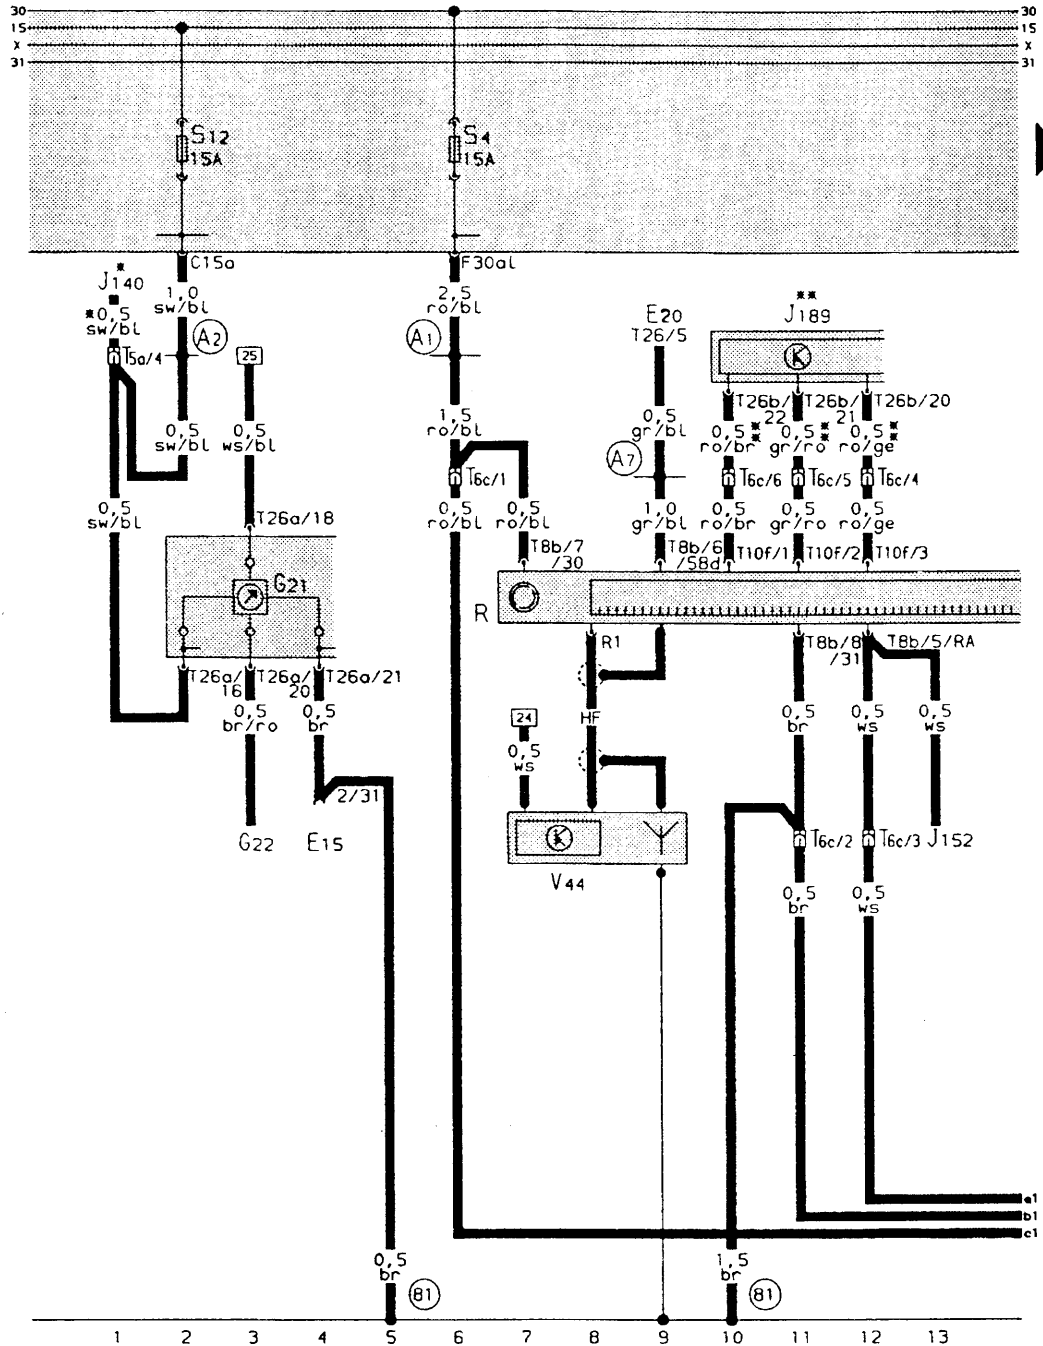

Wiring colours:

- bl = blue
- br = brown
- ge = yellow
- gn = green
- gr = grey
- li = purple
- ro = red
- sw = black
- ws = white

- E 15 – Heated rear window switch
- E 20 – Switches and instruments – lighting control
- G 21 – Speedometer
- G 22 – Speedometer sender
- J 140 – Switch unit for interior light delay
- J 152 – Buzzer for side lights and radio
- J 189 – Auto-check system
- R – Radio with incorporated fader control
- R 1 – Aerial connection
- T 5a – Connector 5 pin, brown, connector point in aux. relay carrier
- T 6c – Connector 6 pin, behind console
- T 8b – Connector 8 pin, on radio
- T 10f – Connector 10 pin, on radio
- T 26 – Connector 26 pin, yellow, dash panel insert
- T 26a – Connector 26 pin, blue, dash panel insert
- T 26b – Connector 26 pin, white, auto-check system display unit, dash panel insert
- V 44 – Electric aerial

- (81) – Earth connection – 1 –, in dash panel wiring loom
- (A1) – Positive (+) connection (30a), in dash panel wiring loom
- (A2) – Positive (+) connection (15a), in dash panel wiring loom
- (A7) – Positive (+) connection (58 D1), in dash panel wiring loom
- * – Only with interior light delay feature
- ** – Only with auto-check system

97-6757

Stereo radio with active loudspeakers, Audi Coupé

