


Electric window lifters (2-door)


from September 1991

Position of relays –
also see “Fitting Locations”
Relay plate with fuse holder:

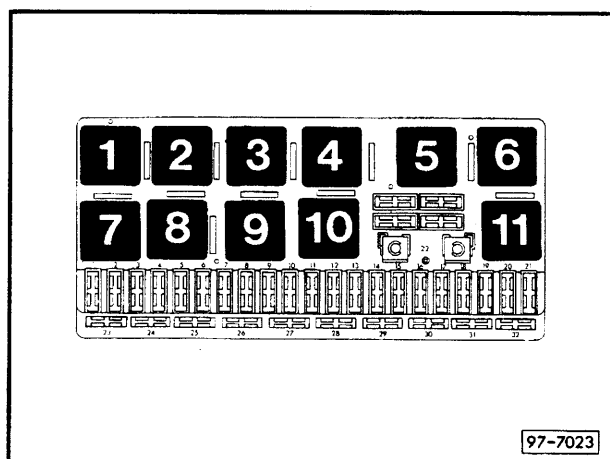

Relay positions:


Auxiliary relay carrier, front
(below dash panel, left)

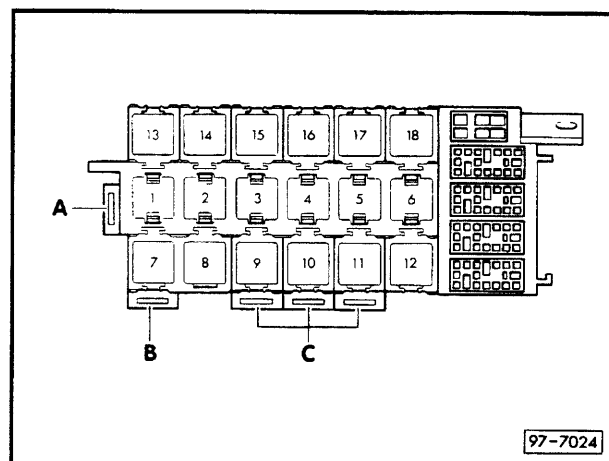

Relay positions:

- 5** } Control unit for electric window lifters
- 6** } (occupies two relay positions)

Auxiliary relay carrier, rear
(under rear seat, left)

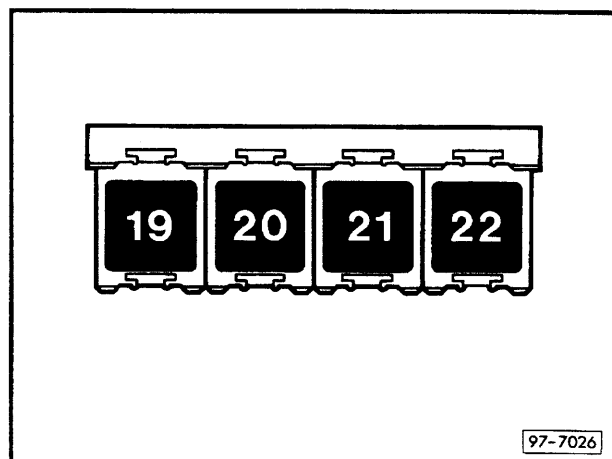


Relay positions:

Fuse colours

- 30 A – green
- 25 A – white
- 20 A – yellow
- 15 A – blue
- 10 A – red
- 5 A – beige

Electric window lifters (2-door)

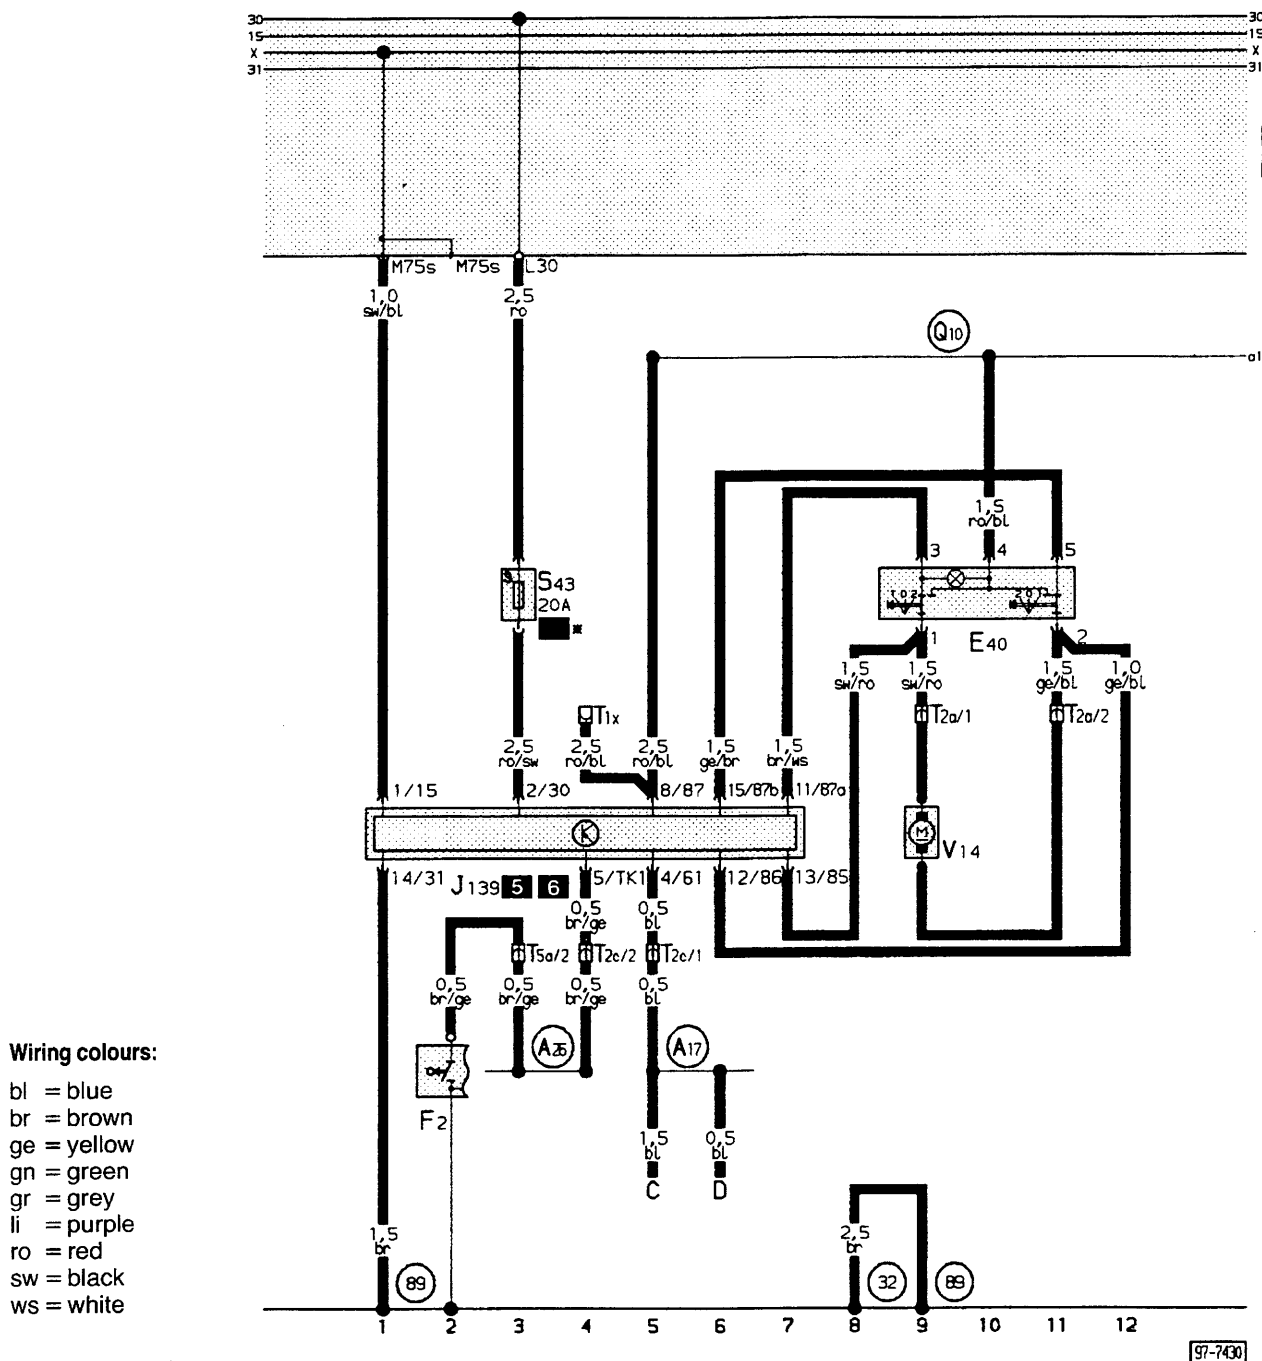

Electric window lifters (2-door)

