


Electrical seat adjustment


From September 1991

Position of relays – also see “Fitting Locations”
Relay plate with fuse holder:

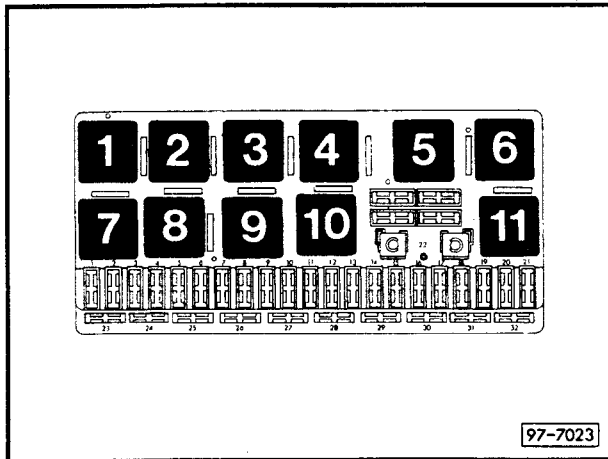

Position of relays:

Auxiliary relay carrier, front (under dash panel, left)

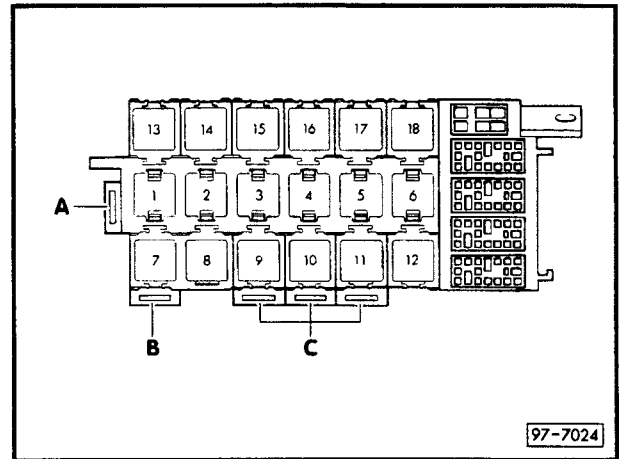


Position of relays:

Fuse colours


- 30 A – green
- 25 A – white
- 20 A – yellow
- 15 A – blue
- 10 A – red
- 5 A – beige

Auxiliary relay carrier, rear (under rear seat, left)

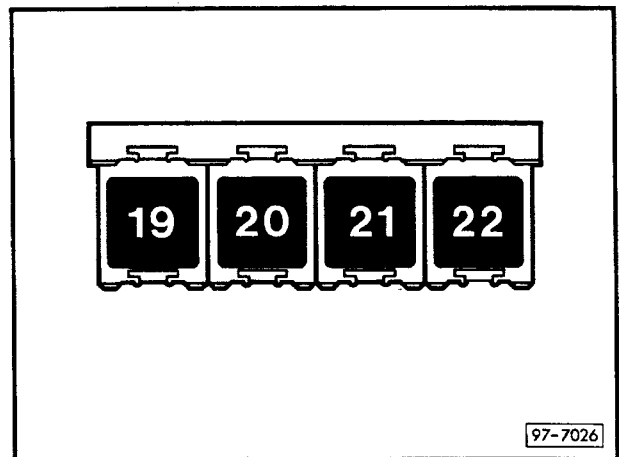

Position of relays:

Electrical seat adjustment


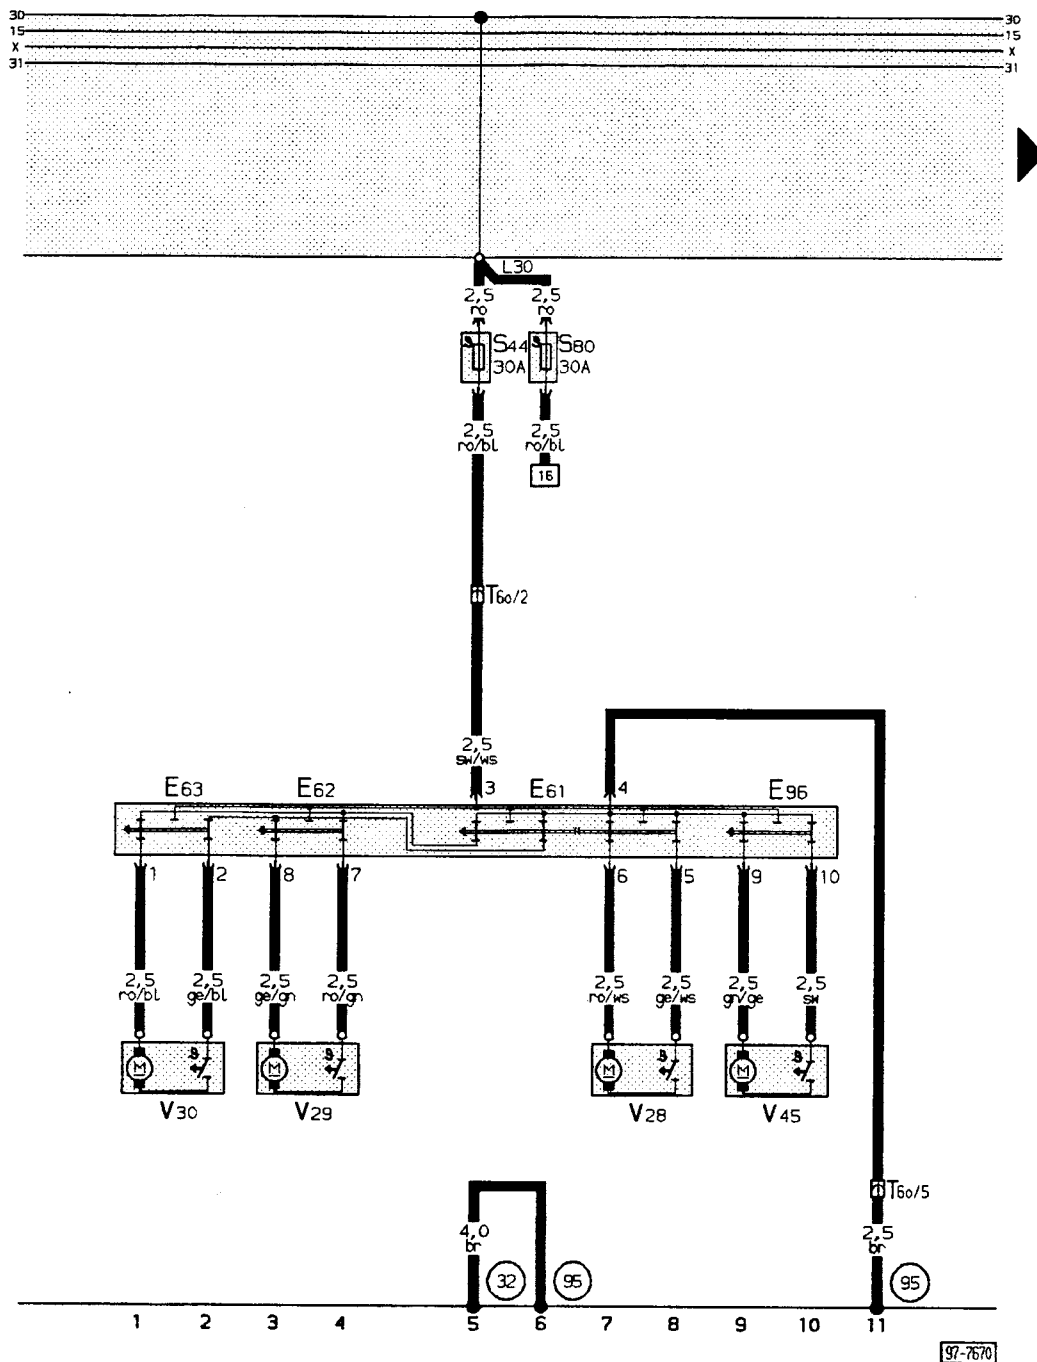


Wiring colours:

- ro = red
- sw = black
- br = brown
- ge = yellow
- gn = green
- bl = blue
- gr = grey
- ws = white
- li = purple

- E 61 – Switch for driver's seat height and longitudinal adjustment
- F 62 – Driver's seat front height adjustment switch
- E 63 – Driver's seat rear height adjustment switch
- E 96 – Switch for driver's seat backrest adjustment
- S 44 – Thermo fuse 1 for seat adjustment
- S 80 – Thermo fuse 2 for seat adjustment
- T 60 – Connector 6 pin, brown, under driver's seat
- V 28 – Motor for driver's seat fore and aft adjustment
- V 29 – Motor for driver's seat front height adjustment
- V 30 – Motor for driver's seat rear height adjustment
- V 45 – Motor for driver's backrest adjustment
- ⊕ – Earth point, behind dash panel, left
- ⊕ – Earth connection – 1 –, in wiring loom, seat adjuster

Electrical seat adjustment.

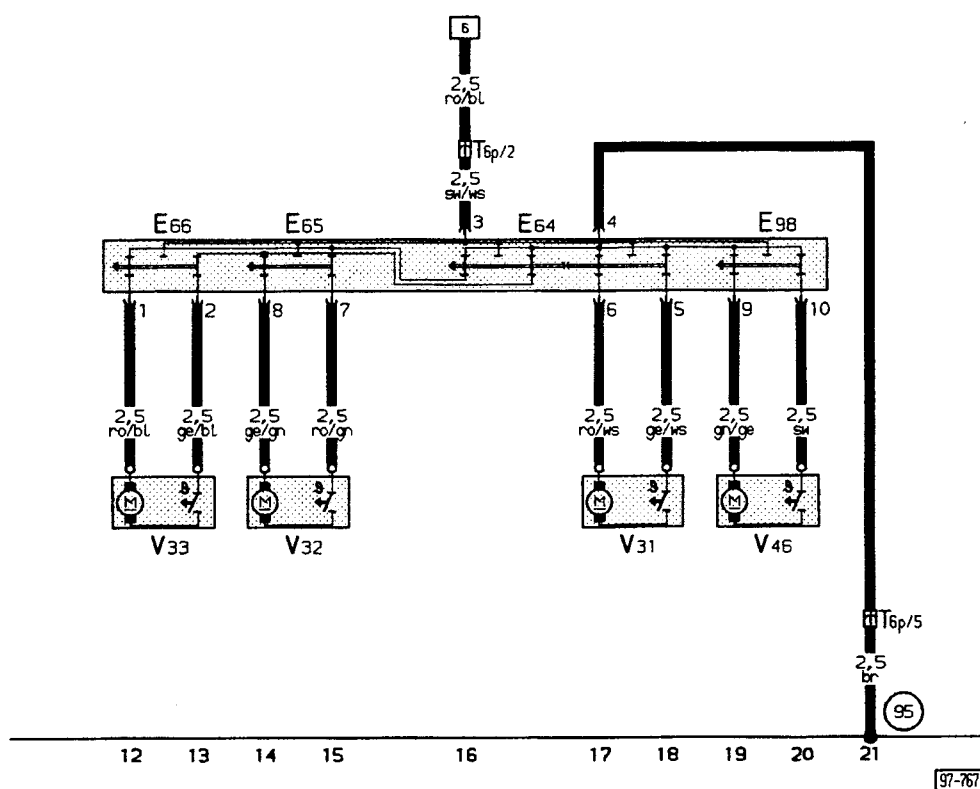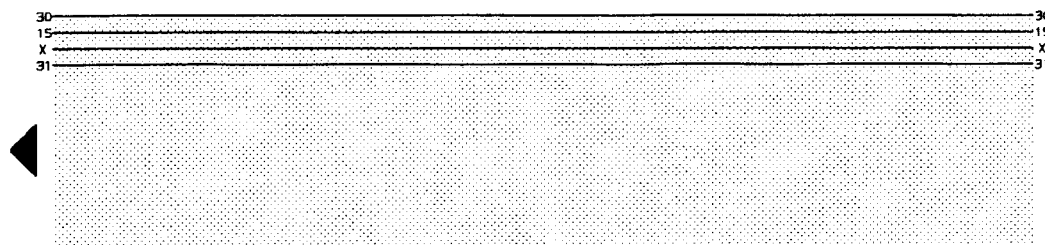

Wiring colours:

- ro = red
- sw = black
- br = brown
- ge = yellow
- gn = green
- bl = blue
- gr = grey
- ws = white
- li = purple

- E 64 – Passenger seat fore and aft adjustment switch
- E 65 – Passenger seat front height adjustment switch
- E 66 – Passenger seat rear height adjustment switch
- E 98 – Switch for backrest adjustment – passenger seat
- T 6p – Connector 6 pin, brown, under front passenger seat
- V 31 – Motor for passenger seat fore and aft adjustment
- V 32 – Motor for passenger seat front height adjustment
- V 33 – Motor for passenger seat rear height adjustment
- V 46 – Motor for backrest adjustment, passenger seat
- Ⓣ95 – Earth connection – 1 –, in wiring loom, seat adjuster