


Additional instruments


From September 1991

Position of relays – also see “Fitting Locations”
Relay plate with fuse holder:

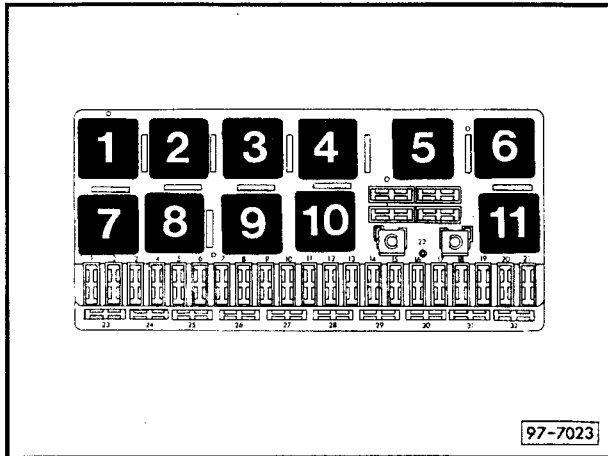

Position of relays:

Auxiliary relay carrier, front (under dash panel, left)

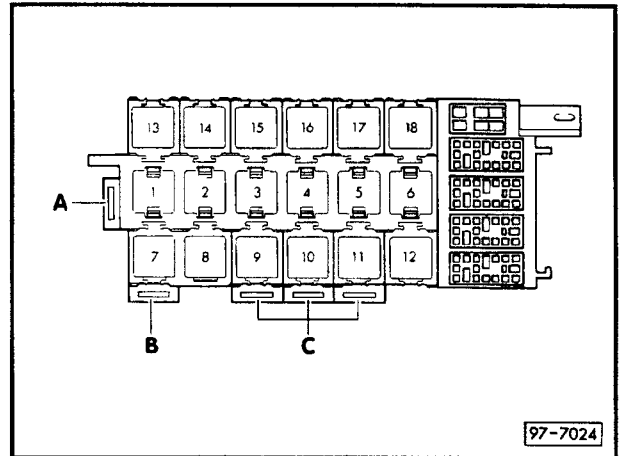


Position of relays:

Fuse colours


- 30 A – green
- 25 A – white
- 20 A – yellow
- 15 A – blue
- 10 A – red
- 5 A – beige

Auxiliary relay carrier, rear (under rear seat bench, left)

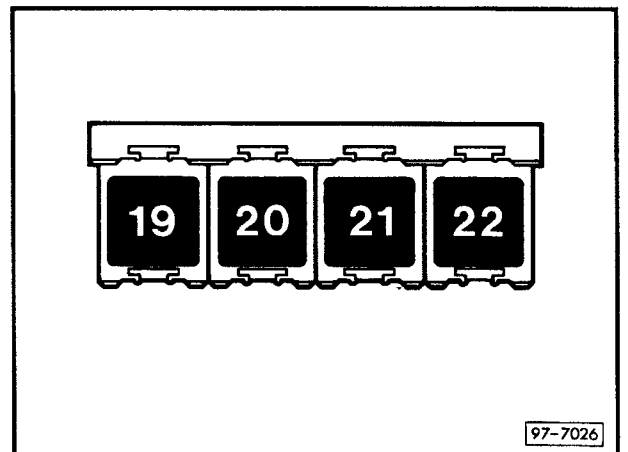

Position of relays:

Additional instruments

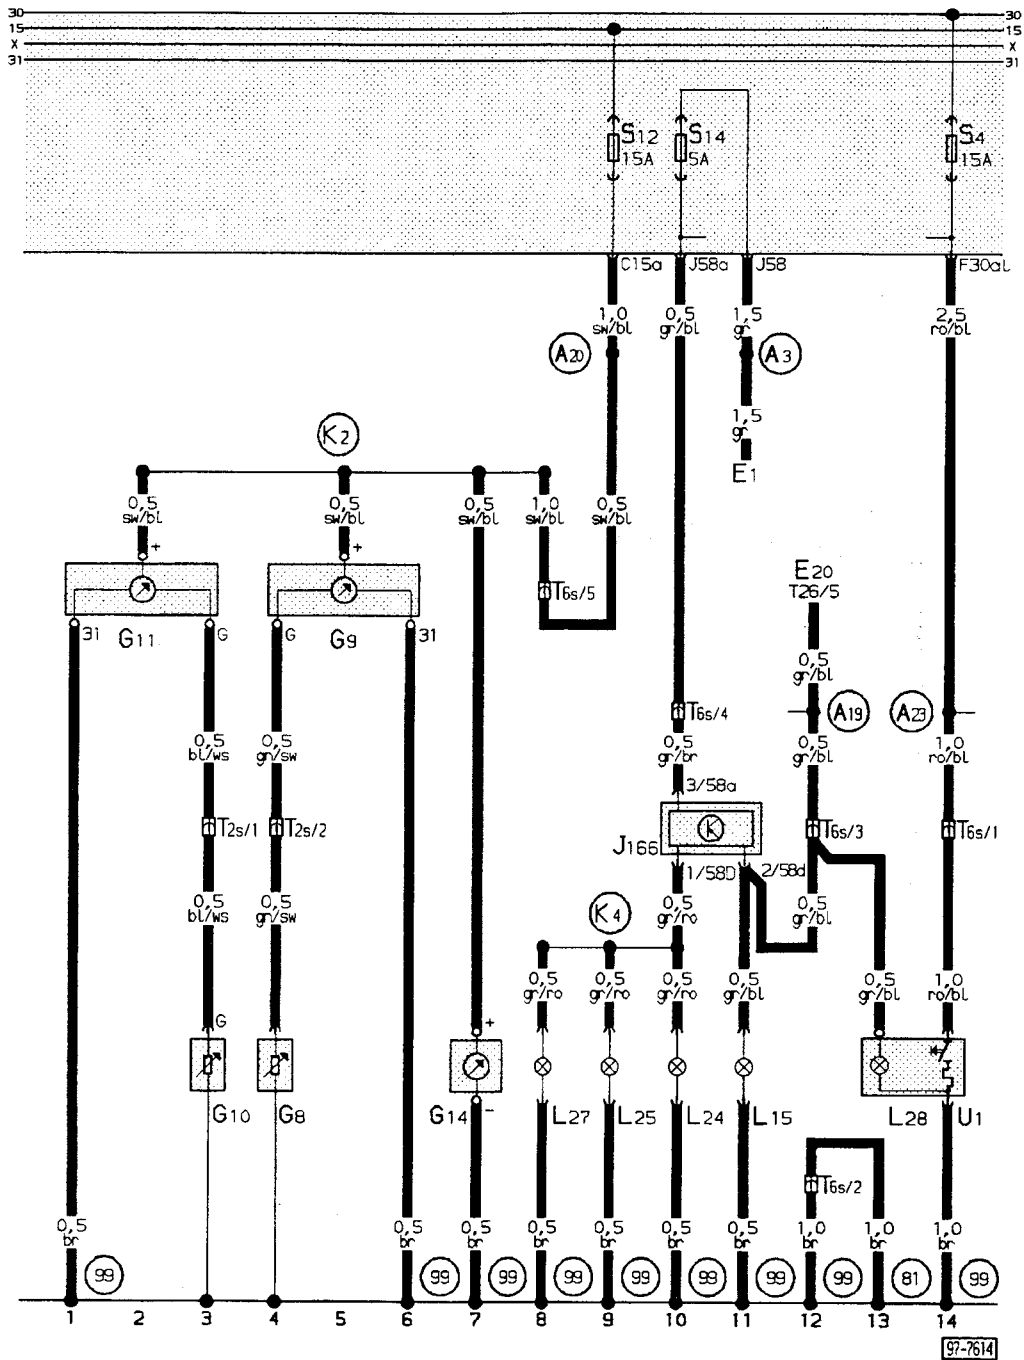

Wiring colours:

- ro = red
- sw = black
- br = brown
- ge = yellow
- gn = green
- bl = blue
- gr = grey
- ws = white
- li = purple

- E 1 – Lighting switch
- E 20 – Switches and instruments – lighting control
- G 8 – Oil temperature sender
- G 9 – Oil temperature gauge
- G 10 – Oil pressure sender
- G 11 – Oil pressure gauge
- G 14 – Voltmeter
- J 166 – Instrument lighting amplifier
- L 15 – Ashtray light bulb
- L 24 – Oil temperature gauge light bulb
- L 25 – Voltmeter light bulb
- L 27 – Oil pressure gauge light bulb
- L 28 – Cigarette lighter light bulb
- T 2s – Connector 2 pin, brown, behind console
- T 6s – Connector 6 pin, white, behind dash panel, centre
- T 26 – Connector 26 pin

- U 1 – Cigarette lighter
- (81) – Earth connection – 1 –, in dash panel wiring loom
- (99) – Earth connection, in console wiring loom
- (A3) – Positive (+) connection (58), in dash panel wiring loom
- (A19) – Connection (58d), in dash panel wiring loom
- (A20) – Connection (15a), in dash panel wiring loom
- (A23) – Connection (30a), in dash panel wiring loom
- (K2) – Positive (+) connection (15a), in console wiring loom
- (K4) – Positive connection (58d2), in console wiring loom