


Servotronic

From September 1991


Position of relays –
also see “Fitting Locations”

Relay plate with fuse holder:

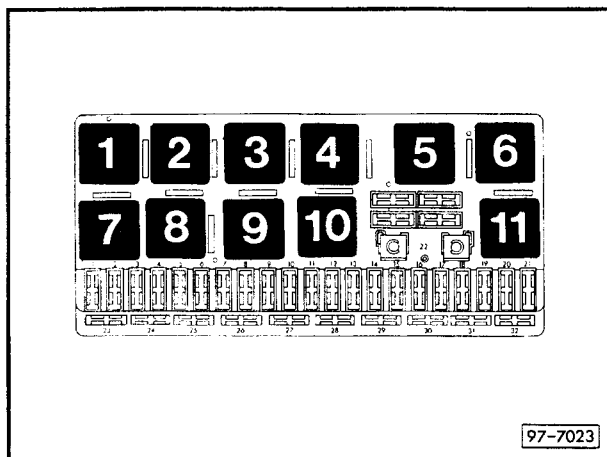

Position of relays:

Auxiliary relay carrier, front
(under dash panel, left)

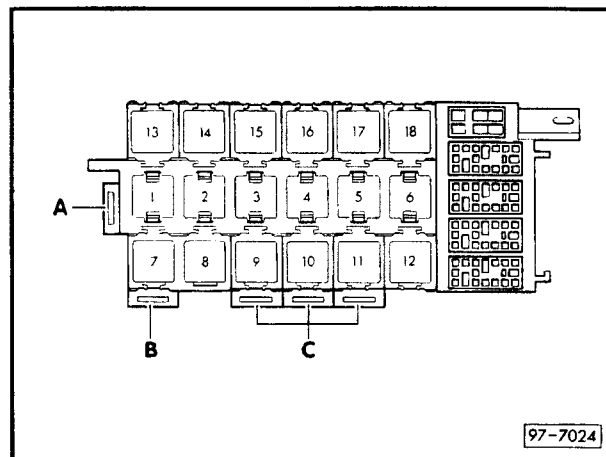


Position of relays:

Fuse colours:


- 30 A – green
- 25 A – white
- 20 A – yellow
- 15 A – blue
- 10 A – red
- 5 A – beige

Auxiliary relay carrier, rear
(under rear seat bench, left)

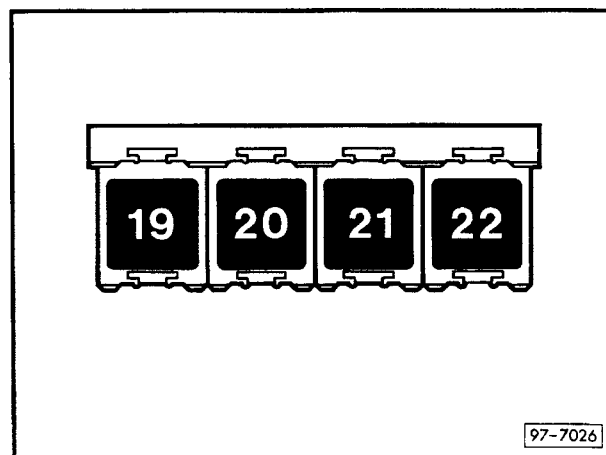

Position of relays:

Servotronic

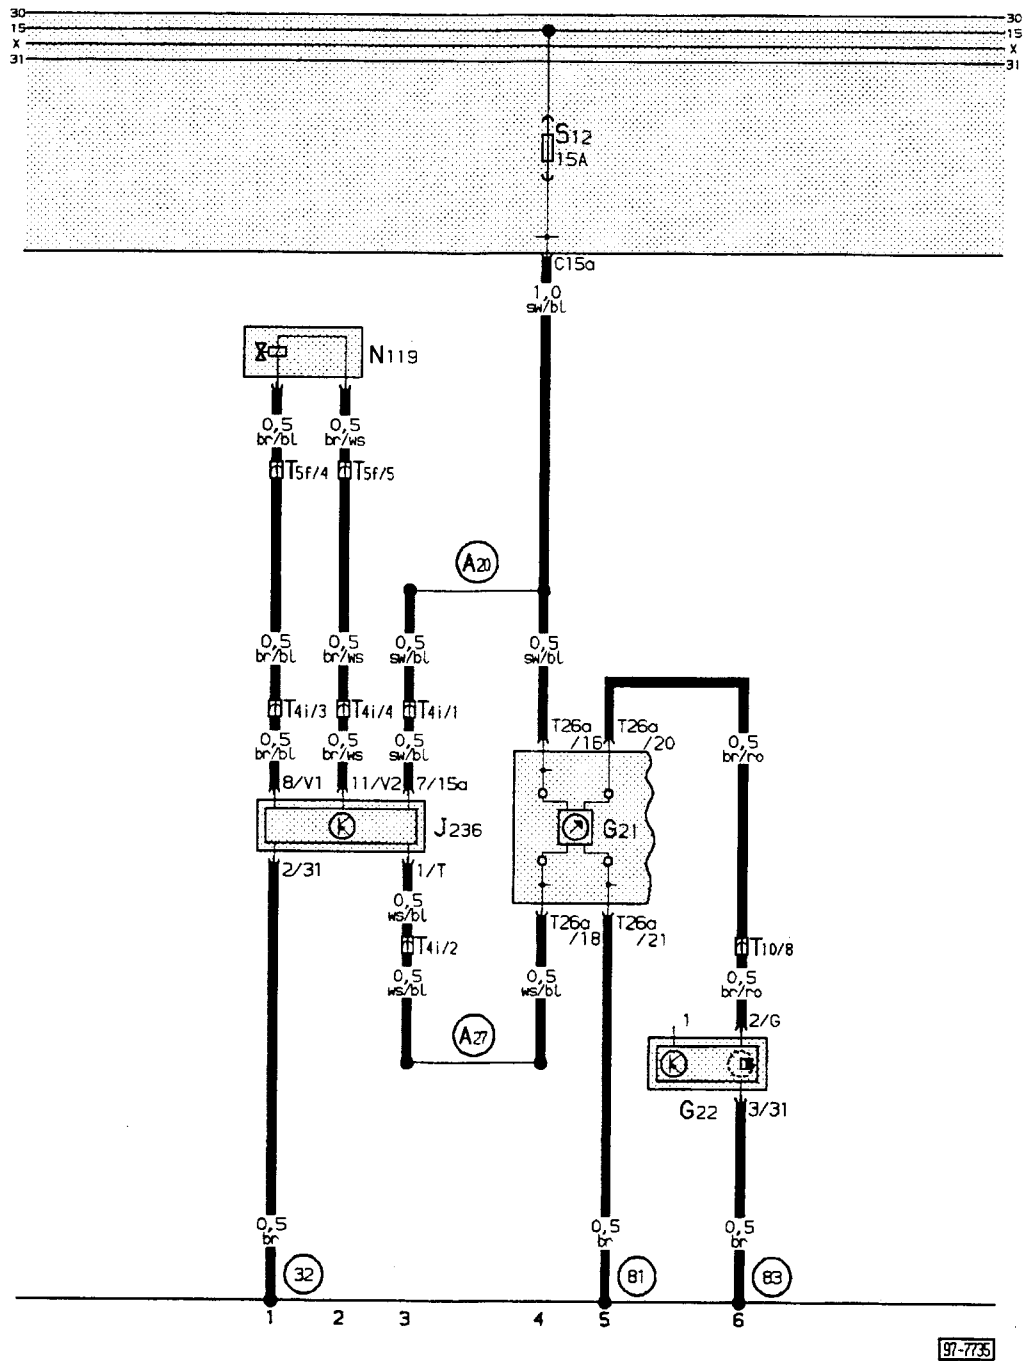

Wiring colours:

ro = red
 sw = black
 br = brown
 ge = yellow
 gn = green
 bl = blue
 gr = grey
 ws = white
 li = purple

- G 21 – Speedometer
 G 22 – Speedometer sender
 J 236 – Servotronic control unit
 N 119 – Servotronic solenoid valve
 T 4i – Connector 4 pin, green, behind dash panel
 T 5f – Connector 5 pin, blue, behind dash panel
 T 10 – Connector 10 pin, black, connector point in aux. relay carrier
 T 26a – Connector 26 pin, blue, on dash panel insert
 ③② – Earth point, behind dash panel, left
 ⑧① – Earth connection – 1 –, in dash panel wiring loom
 ⑧③ – Earth connection – 1 –, in front right wiring loom
 ①②① – Connection (15a), in dash panel wiring loom
 ①②⑦ – Connection (speed signal), in dash panel wiring loom