


Electronic fuel injection, Lambda probe

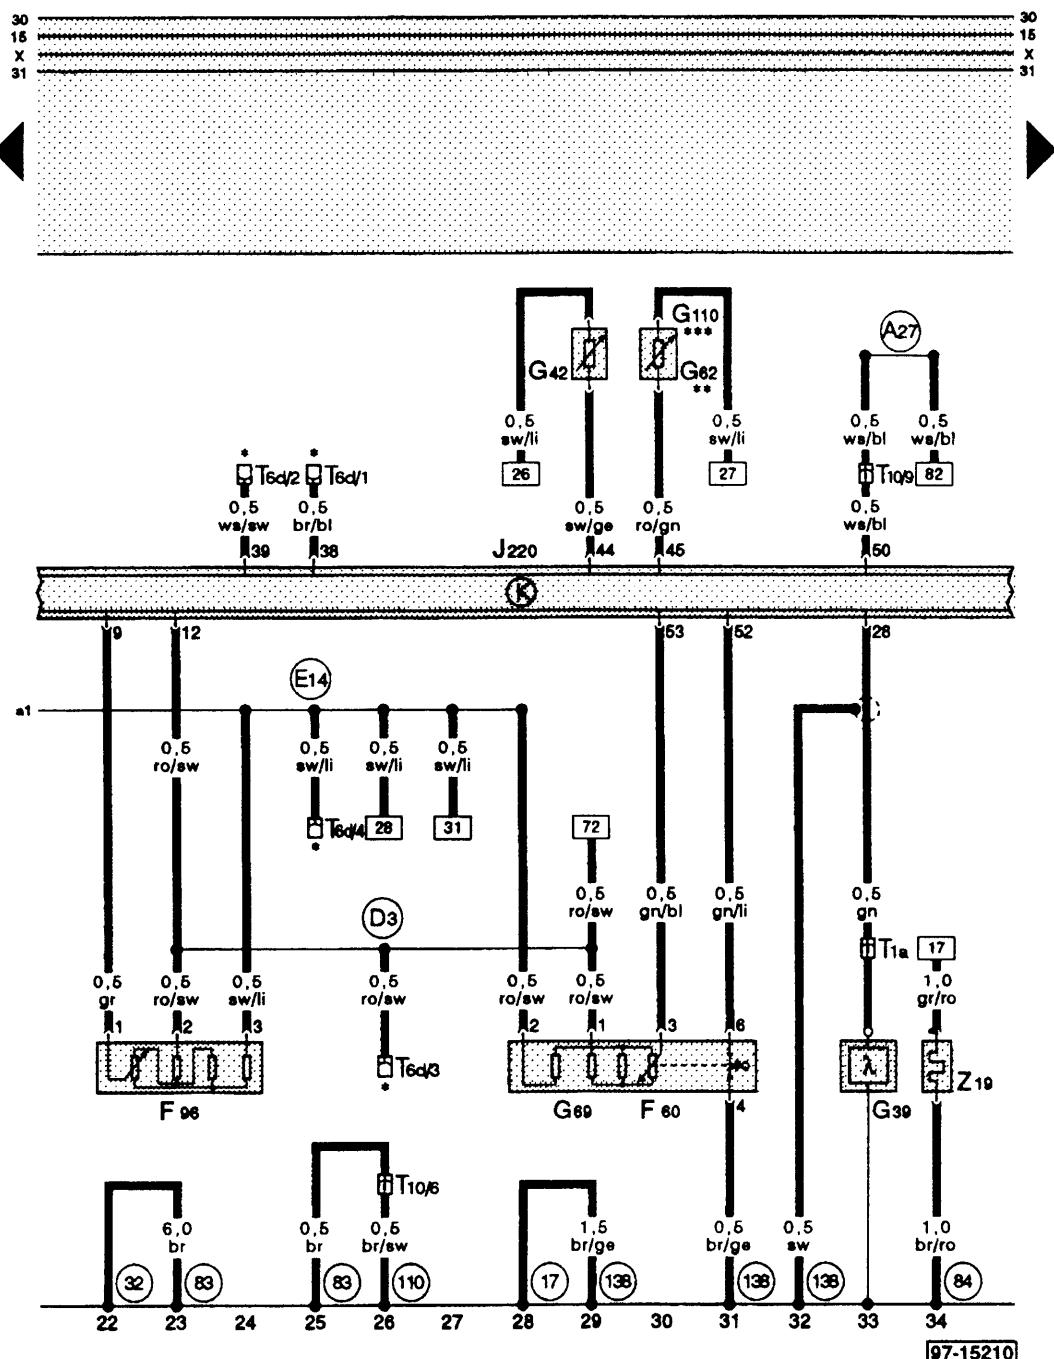

- F 60 – Idling switch
F 96 – Altitude sender
G 39 – Lambda probe
G 42 – Intake air temperature sender
G 62 – Sender for coolant temperature
G 69 – Throttle valve potentiometer
G 110 – Coolant temperature sender – air conditioner
J 220 – Control unit for Motronic
T 1a – Connector single, in engine compartment, right
T 6d – Connector 6 pin, black, behind dash panel
T 10 – Connector 10 pin, black, connector point in auxiliary relay carrier
Z 19 – Heating for Lambda probe
(17) – Earth point, on intake manifold
(32) – Earth point, behind dash panel, left
(83) – Earth connection – 1 –, in front right wiring loom

- (84) – Earth connection, engine block, in front right wiring loom
(110) – Earth connection – 2 –, in dash panel wiring loom
(138) – Earth connection (control unit), in Motronic wiring loom
(27) – Connection (speed signal), in dash panel wiring loom
(D3) – Connection (sender for consumption indicator, 5V), in front right wiring loom
(E14) – Connection in Motronic wiring loom
* – coding plug not used
** – only in vehicles without air conditioner
*** – only in vehicles with air conditioner