


Radio Gamma with active loudspeakers, Audi 80

from July 1992


**Position of relays –
also see “Fitting Locations”**

Relay plate with fuse holder:

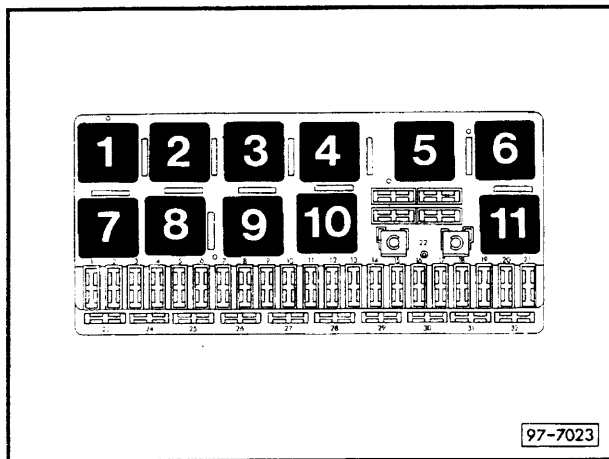

Position of relays:

**Auxiliary relay carrier, front
(under dash panel, left)**

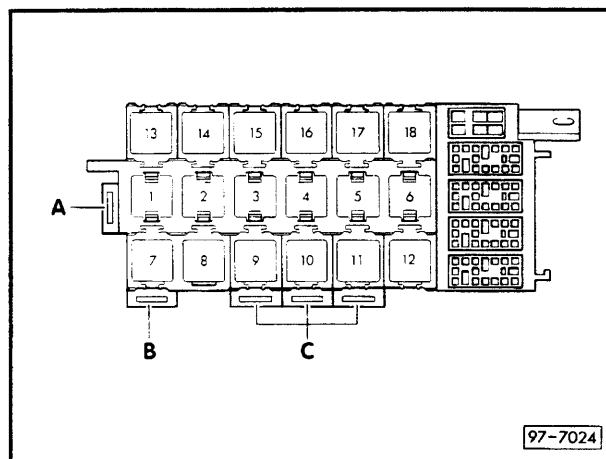


Position of relays:

Fuse colours


- 30 A – green
- 25 A – white
- 20 A – yellow
- 15 A – blue
- 10 A – red
- 5 A – beige

**Auxiliary relay carrier, rear
(under rear seat bench, left)**

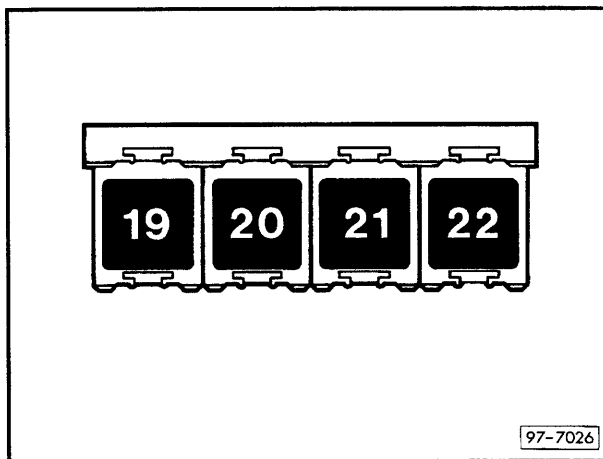

Position of relays:


Radio Gamma with active loudspeakers

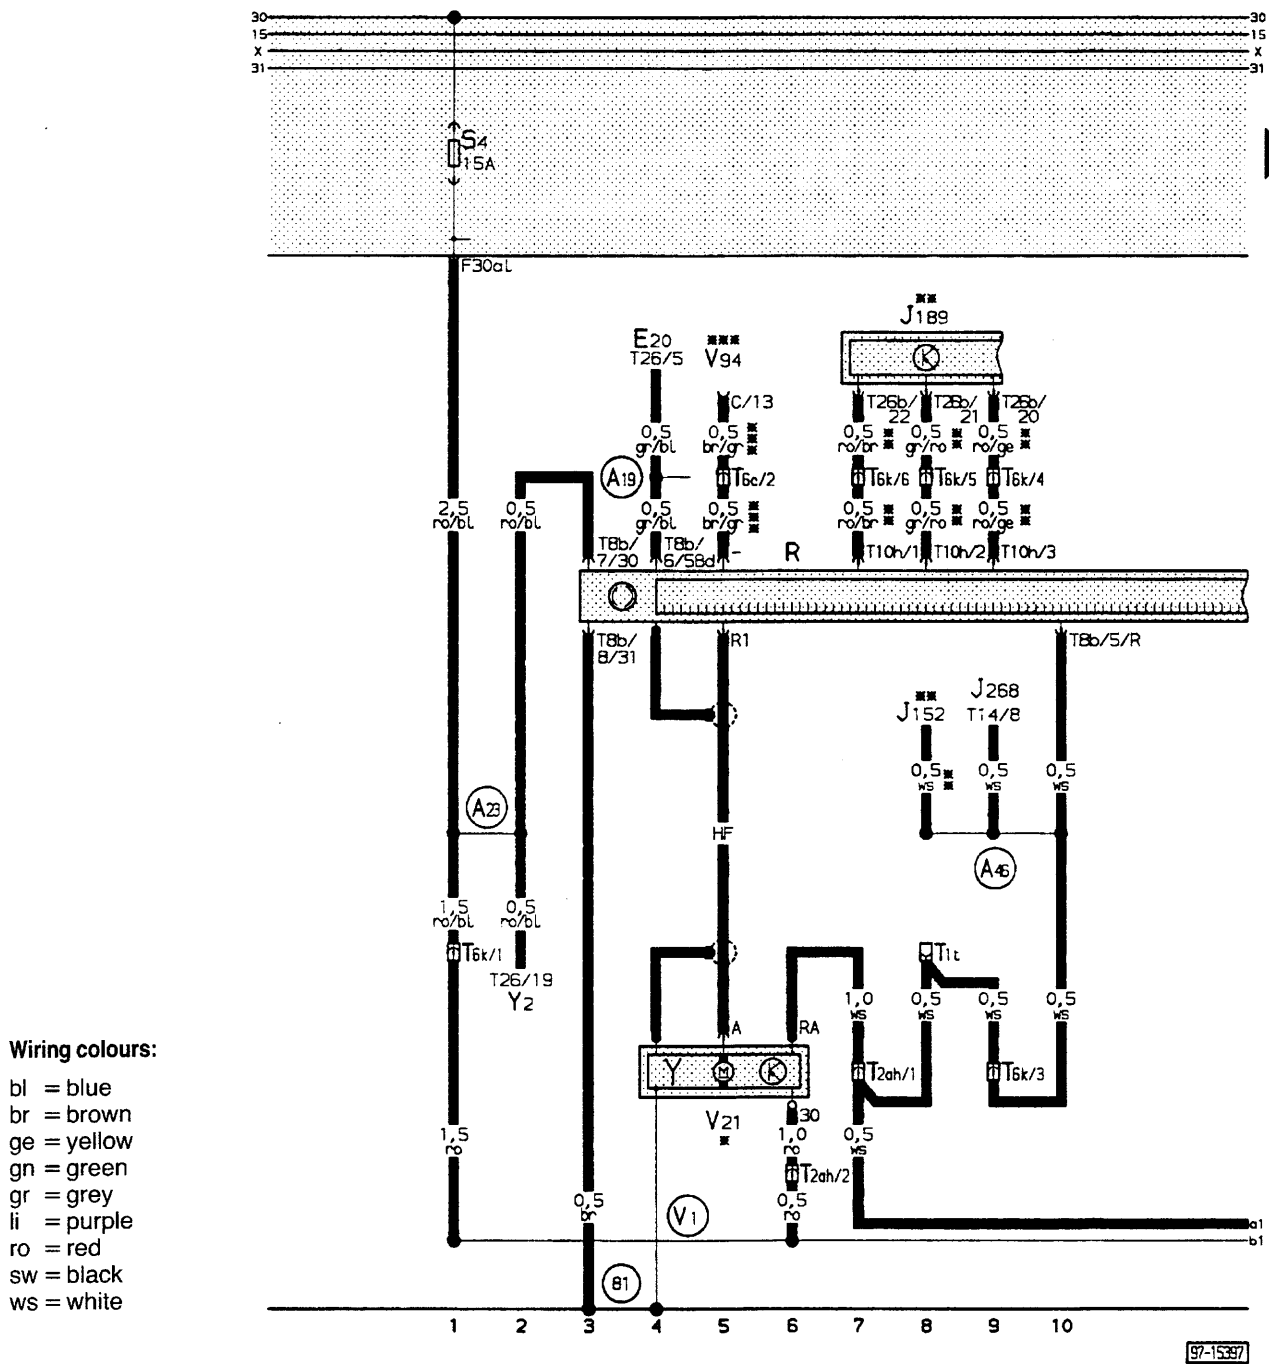

E 20 – Switches and instruments – lighting control
 J 152 – Buzzer for side lights and radio
 J 189 – Auto-check system
 J 268 – Control unit for mini-check system
 R – Radio
 T 11 – Connector single, red, in luggage boot, left
 T 2ah – Connector 2 pin, in luggage boot, left
 T 6c – Connector 6 pin, black, behind dash panel, left
 T 6k – Connector 6 pin, black, behind console
 T 8b – Connector 8 pin, on radio
 T 10h – Connector 10 pin, red, on radio
 T 14 – Connector 14 pin, white, on dash panel insert (mini-check system)
 T 26 – Connector 26 pin, yellow, on dash panel insert
 T 26b – Connector 26 pin, white, on dash panel insert (Auto-Check-System display unit)
 V 21 – Aerial motor
 V 94 – Motor for central locking with control unit for interior lights switch-off delay and anti-theft alarm system
 Y 2 – Digital clock

(B1) – Earth connection – 1 –, in dash panel wiring loom
 (A19) – Connection (58d), in dash panel wiring loom
 (A23) – Connection (30al), in dash panel wiring loom
 (A46) – Positive (+) connection (30 – from radio), in dash panel wiring loom
 (V1) – Positive (+) connection (30) in rear loudspeaker wiring loom
 * – Diagram shows automatic power aerial
 – For normal telescopic aerial see CFD for radio Alpha and radio Beta
 – For rear window aerial see CFD for radio Gamma with passive loudspeakers
 ** – only with auto-check system
 *** – only with anti-theft alarm system

Radio Gamma with active loudspeakers

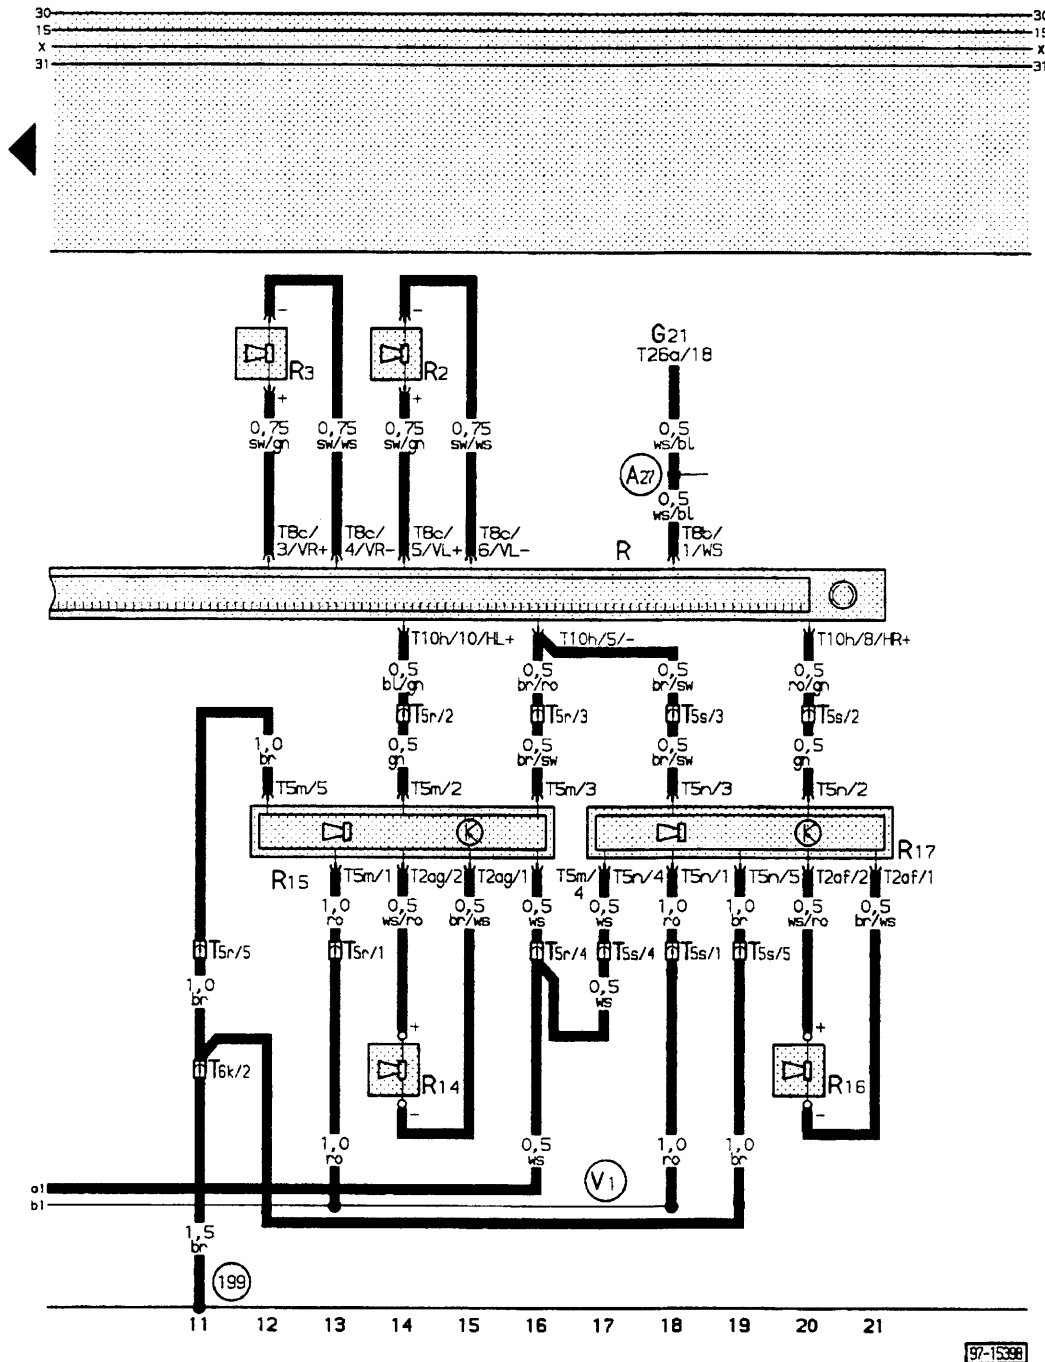

- G 21 – Speedometer
- R – Radio
- R 2 – Front left loudspeaker
- R 3 – Front right loudspeaker
- R 14 – Treble loudspeaker rear left
- R 15 – Bass loudspeaker rear left
- R 16 – Treble loudspeaker rear right
- R 17 – Bass loudspeaker rear right
- T 2af – Connector 2 pin, on loudspeaker, rear right
- T 2ag – Connector 2 pin, on loudspeaker, rear left
- T 5m – Connector 5 pin, on loudspeaker, rear left
- T 5n – Connector 5 pin, on loudspeaker, rear right
- T 5r – Connector 5 pin, in rear left door
- T 5s – Connector 5 pin, in rear right door
- T 6k – Connector 6 pin, black, behind console
- T 8c – Connector 8 pin, on radio
- T 10h – Connector 10 pin, red, on radio
- T 26a – Connector 26 pin, blue, on dash panel insert

- (199) – Earth connection – 3 –, in dash panel wiring loom
- (A27) – Connection (speed signal), in dash panel wiring loom
- (V1) – Positive (+) connection (30), in rear loudspeaker wiring loom