
Ellipsoidal headlights (twin headlamp) for 2.2 ltr. Motronic, 169 kW, 5-cylinder, -S2-

from July 1993


Relay locations also see "Fitting Locations"

Relay plate with fuse holder:

Front auxiliary relay carrier (under dash panel at left)

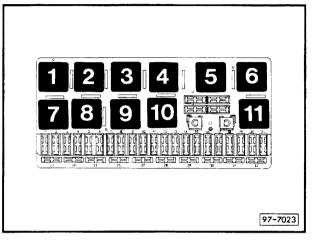

Relay locations:

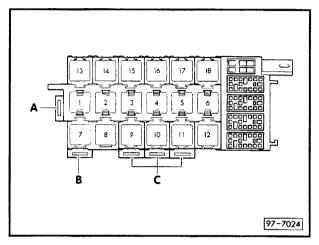

Relay locations:

Rear auxiliary relay carrier (under seat bench at left)

Fuse colours

30 A - green


25 A - white

20 A - yellow

15 A - blue


10 A - red

5 A - beige

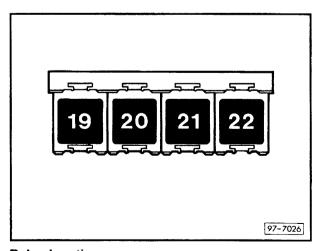

Relay locations:

Ellipsoidal headlights (twin headlamps) for 2.2 ltr. Motronic, 169 kW, 5-cylinder, -S2-

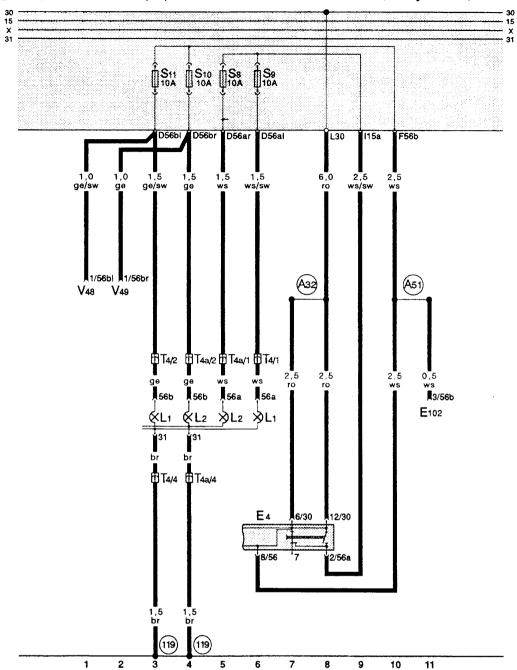

bl = blue br = brown ge = yellow gn = green gr = grey li = lilac ro = red sw = black

white

ws =

E 4 - Headlight dipper/flasher switch

E 102 - Headlight beam adjuster

L 1 - Single filament bulb for headlight, left

L 2 - Single filament bulb for headlight, right

T 4 - Connector, 4-pin, near headlight, left

T 4a - Connector, 4-pin, near headlight, right

V 48 - Left motor for beam adjustment

V_49 - Right motor for beam adjustment

- Earth connection -1-, in headlight wiring loom

- Positive (+) connection (30), in dash panel wiring loom

- Connection (56), in dash panel wiring loom

97-15587