


Airbag for driver (basic triggering unit)

from October 1993


Relay locations
also see "Fitting Locations"

Relay plate with fuse holder:

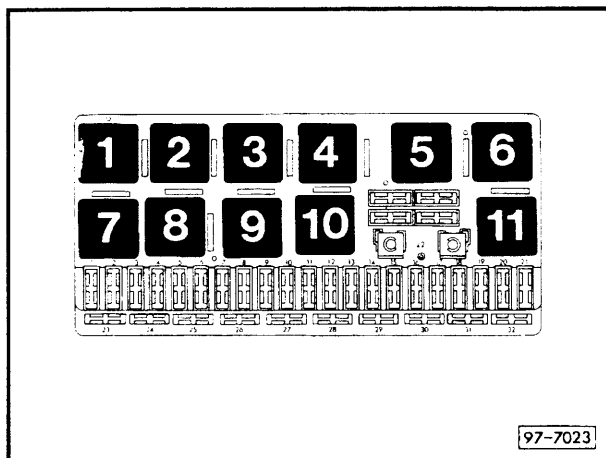

Relay locations:

Front auxiliary relay carrier
(under dash panel at left)

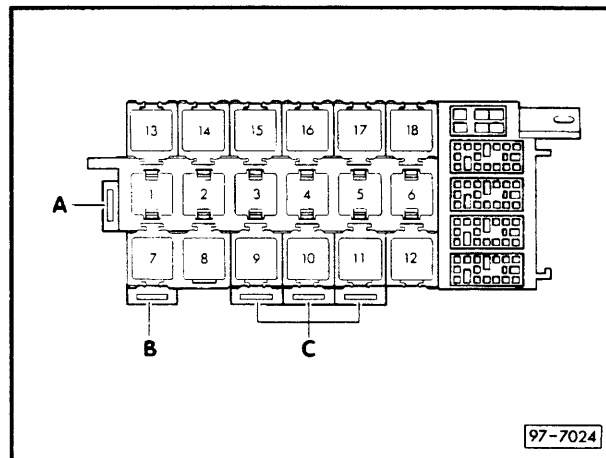


Relay locations:

Fuse colours

- 30 A - green
- 25 A - white
- 20 A - yellow
- 15 A - blue
- 10 A - red
- 5 A - beige

Rear auxiliary relay carrier
(under seat bench at left)

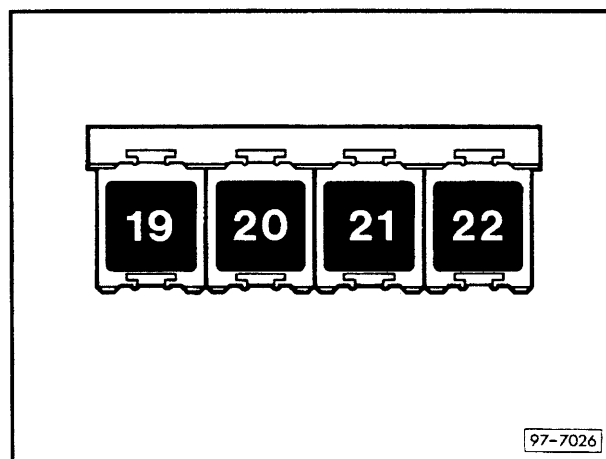

Relay locations:

