


Battery, starter, alternator

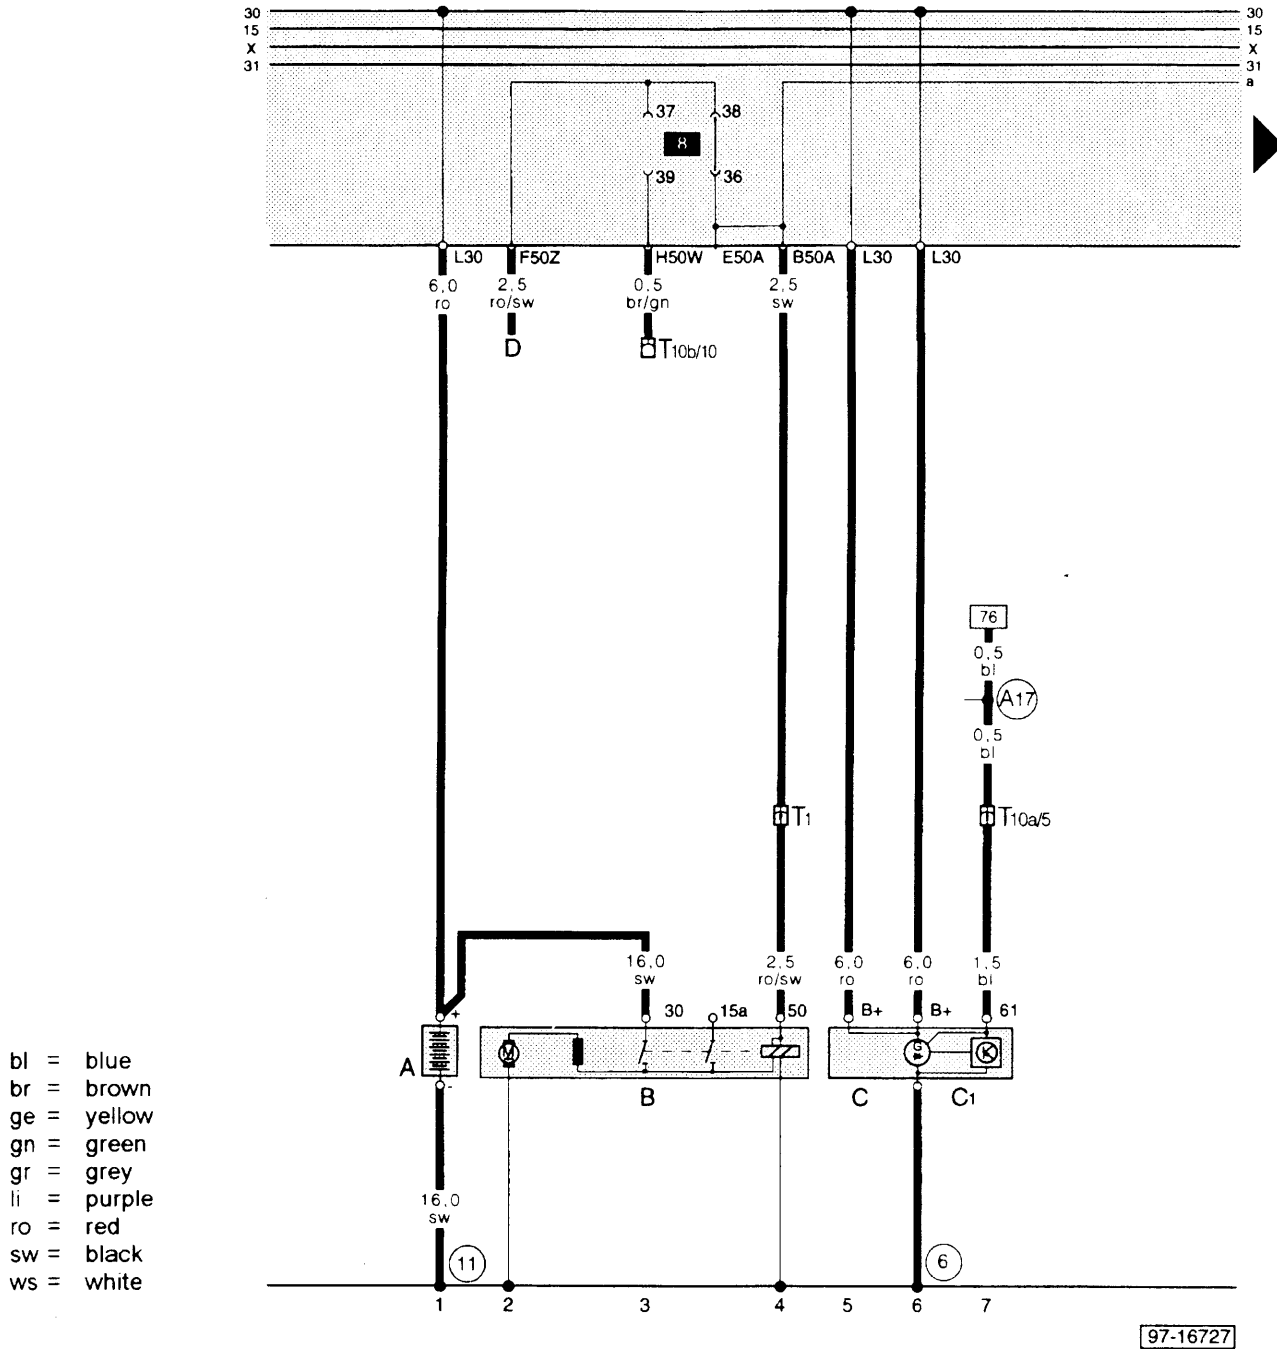

- A - Battery
- B - Starter
- C - Alternator
- C 1 - Voltage regulator
- D - Ignition/starter switch
- T 1 - Connector, single, on bulkhead, right
- T 10 a - Connector, 10-pin, yellow, connector point in aux. relay carrier
- T 10 b - Connector, 10-pin, brown, connector point in aux. relay carrier

- 6 - Earthing strap, engine - alternator
- 11 - Earth point, in battery box
- A17 - Connection (61), in dash panel wiring loom