


Electronic fuel injection, Lambda probe

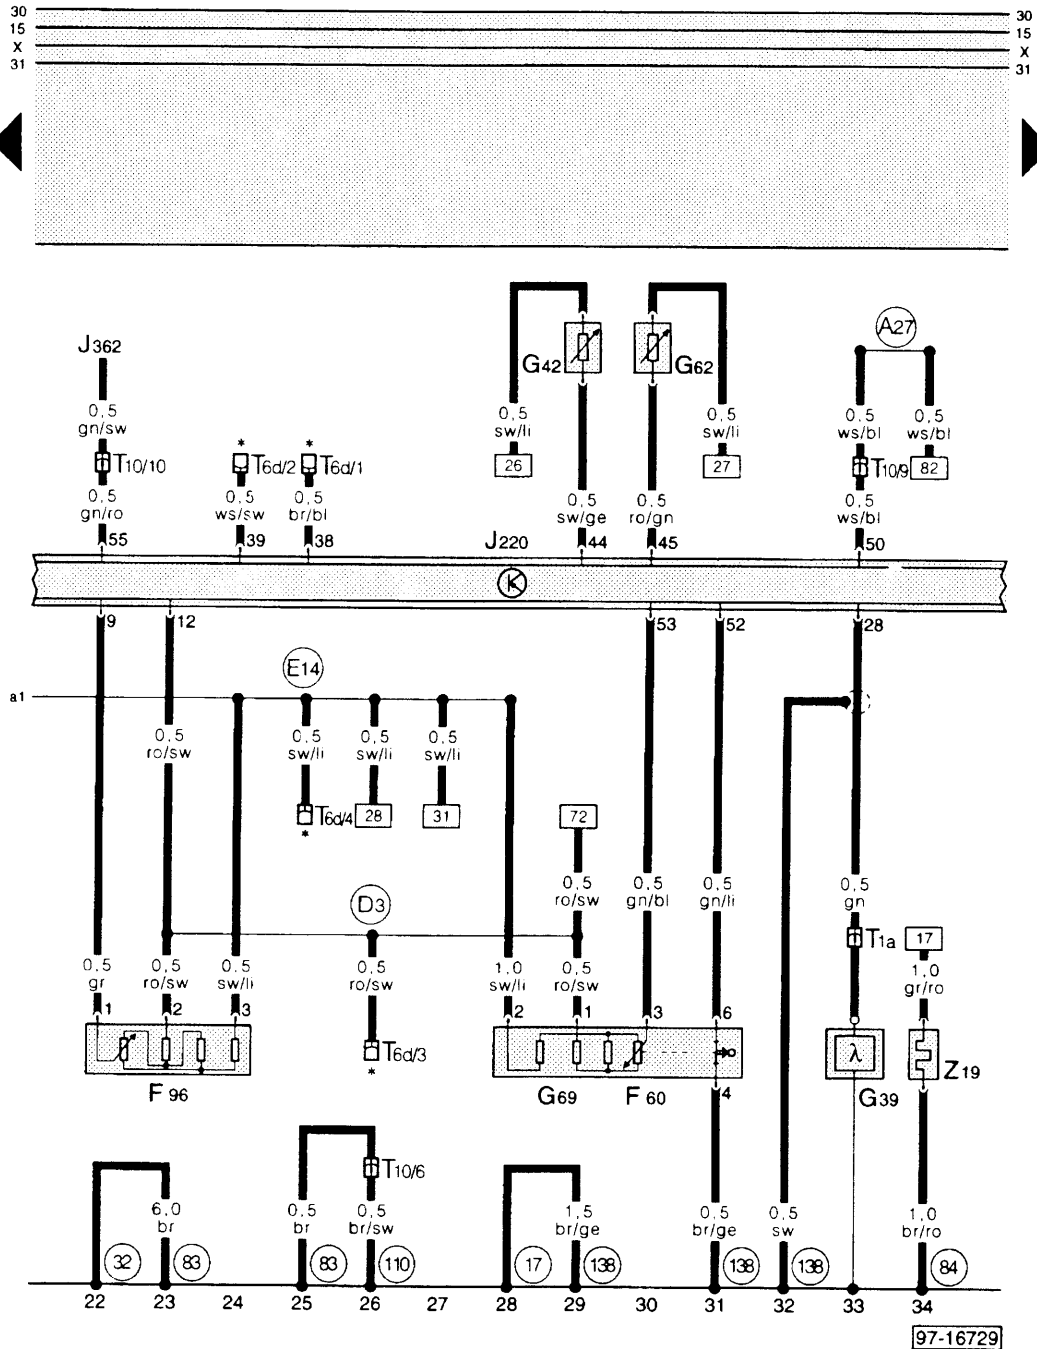

97-16729

- F 60 - Idling switch
- F 96 - Altitude sender
- G 39 - Lambda probe
- G 42 - Intake air temperature sender
- G 62 - Coolant temperature sender
- G 69 - Throttle valve potentiometer
- J 220 - Motronic control unit
- J 362 - Immobiliser control unit
- T 1 a - Connector, single, in engine compartment, right
- T 6 d - Connector, 6-pin, black, behind dash panel (coding plug)
- T 10 - Connector, 10-pin, black, connector point in aux. relay carrier
- Z 19 - Lambda probe heating

- (17) - Earth point, on intake manifold
- (32) - Earth point, behind dash panel, left

- (83) - Earth connection -1-, in front right wiring loom
- (84) - Earth connection, engine block, in front right wiring loom
- (110) - Earth connection -2-, in dash panel wiring loom
- (138) - Earth connection (control unit), in Motronic wiring loom
- (A27) - Connection (speed signal), in dash panel wiring loom
- (D3) - Connection (consumption display sender, 5V), in front right wiring loom
- (E14) - Connection -1-, in Motronic wiring loom
- * - Coding plug not in use