


Electronic fuel injection, ignition system

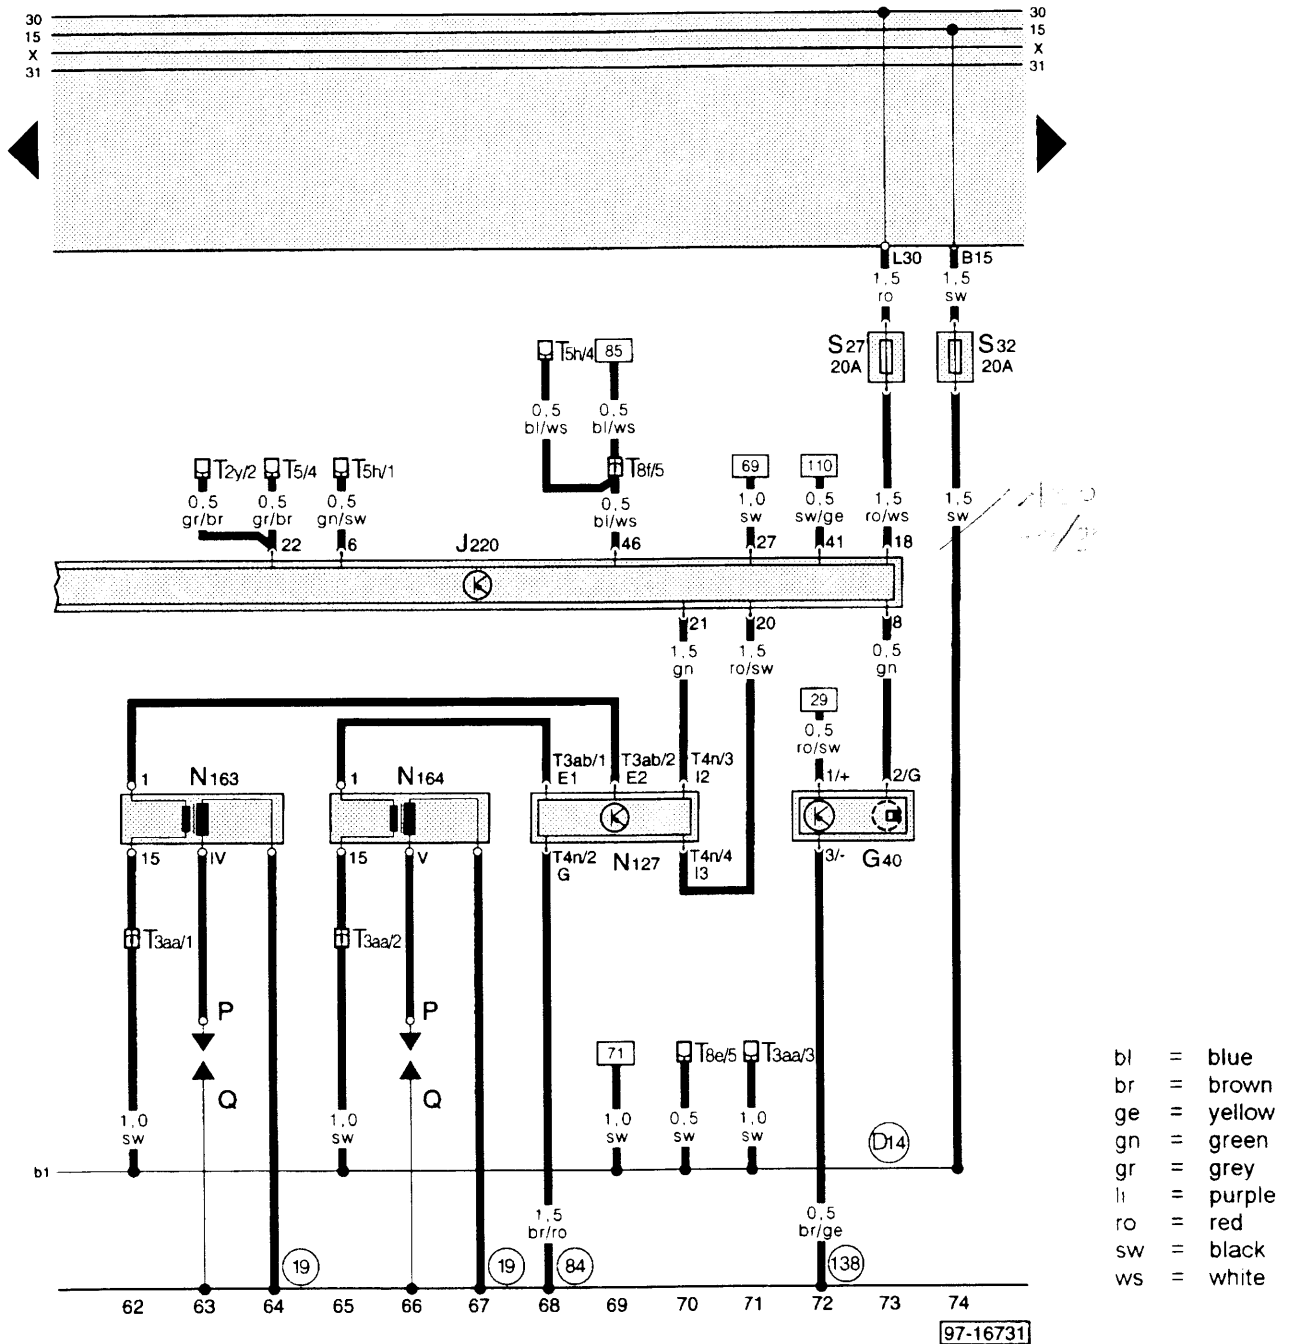

- G 40 - Hall sender
- J 220 - Motronic control unit
- N 127 - Ignition coil with power end stage 2
- N 163 - Ignition coil 4
- N 164 - Ignition coil 5
- P - Spark plug connector
- Q - Spark plugs
- S 27 - Fuse for engine management I (in aux. fuse box)
- S 32 - Fuse for engine management I and ignition coil, electric shut-off valve (in aux. fuse box)
- T 2 y - Connector, 2-pin, blue, in plenum chamber next to relay plate (diagnosis plug)
- T 3 aa - Connector, 3-pin, white, for ignition coils
- T 3 ab - Connector, 3-pin, for ignition end stage
- T 4 n - Connector, 4-pin, black, for ignition end stage
- T 5 - Connector, 5-pin, black, connector point in aux. relay carrier
- T 5 h - Connector, 5-pin, red, behind dash panel, left

- T 8 e - Connector 8-pin, in engine compartment, right
- T 8 f - Connector, 8-pin, in engine compartment, right
- (19) - Earth point, near ignition coil
- (84) - Earth connection, engine block, in front right wiring loom
- (138) - Earth connection (control unit), in Motronic wiring loom
- (D14) - Connection (ignition coil control unit), in front right wiring loom