


Dash panel insert, rev. counter, speedometer, coolant monitor, control unit for mini-check system

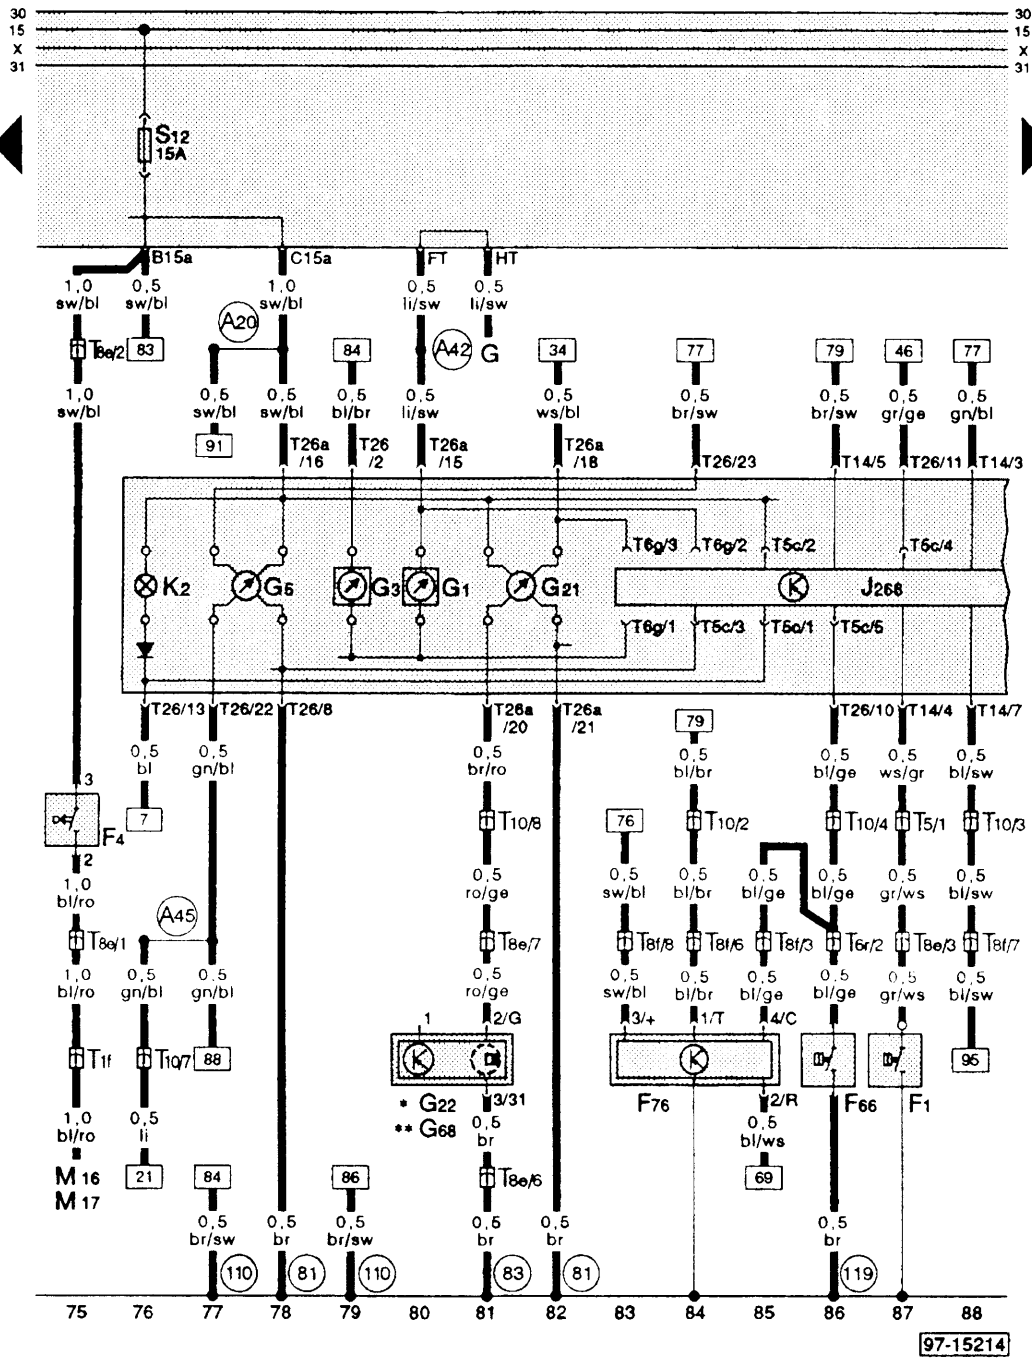

- bl = blue
- br = brown
- ge = yellow
- gn = green
- gr = grey
- li = purple
- ro = red
- sw = black
- ws = white

97-15214

- |  |  |
|--|--|
| <ul style="list-style-type: none"> <li>F 1 - Oil pressure switch (1.8 bar)</li> <li>F 4 - Reversing light switch</li> <li>F 66 - Coolant shortage indicator switch</li> <li>F 76 - Electronic thermo switch</li> <li>G - Fuel level sender</li> <li>G 1 - Fuel gauge</li> <li>G 3 - Coolant temperature gauge</li> <li>G 5 - Rev. counter</li> <li>G 21 - Speedometer</li> <li>G 22 - Speedometer sender (Hall sender, on gearbox)</li> <li>G 68 - Road speed sender</li> <li>J 268 - Control unit for mini-check system</li> <li>K 2 - Alternator warning lamp</li> <li>M 16 - Reversing light bulb, left</li> <li>M 17 - Reversing light bulb, right</li> <li>T 1 f - Connector, single, black, behind dash panel, left</li> <li>T 5 - Connector, 5-pin, black, connector point in aux. relay carrier</li> <li>T 5 c - Connector, 5-pin, on dash panel insert</li> <li>T 6 g - Connector, 6-pin, on dash panel insert</li> <li>T 6 r - Connector, 6-pin, black, behind dash panel, left</li> <li>T 8 e - Connector, 8-pin, in engine compartment, right</li> <li>T 8 f - Connector, 8-pin, in engine compartment, right</li> </ul> | <ul style="list-style-type: none"> <li>T 10 - Connector, 10-pin, black, connector point in aux. relay carrier</li> <li>T 14 - Connector, 14-pin, white, on dash panel insert (mini-check system)</li> <li>T 26 - Connector, 26-pin, yellow, on dash panel insert</li> <li>T 26 a - Connector, 26-pin, blue, on dash panel insert</li> <li>(81) - Earth connection -1-, in dash panel wiring loom</li> <li>(83) - Earth connection -1-, in front right wiring loom</li> <li>(110) - Earth connection -2-, in dash panel wiring loom</li> <li>(119) - Earth connection -1-, in headlight wiring loom</li> <li>(A20) - Connection (15a) in dash panel wiring loom</li> <li>(A42) - Connection (fuel gauge) in dash panel wiring loom</li> <li>(A45) - Connection (engine speed signal), in dash panel wiring loom</li> <li>.. - Up to 7/93</li> <li>.. - From 7/93</li> </ul> |
|--|--|