


Radiator fan

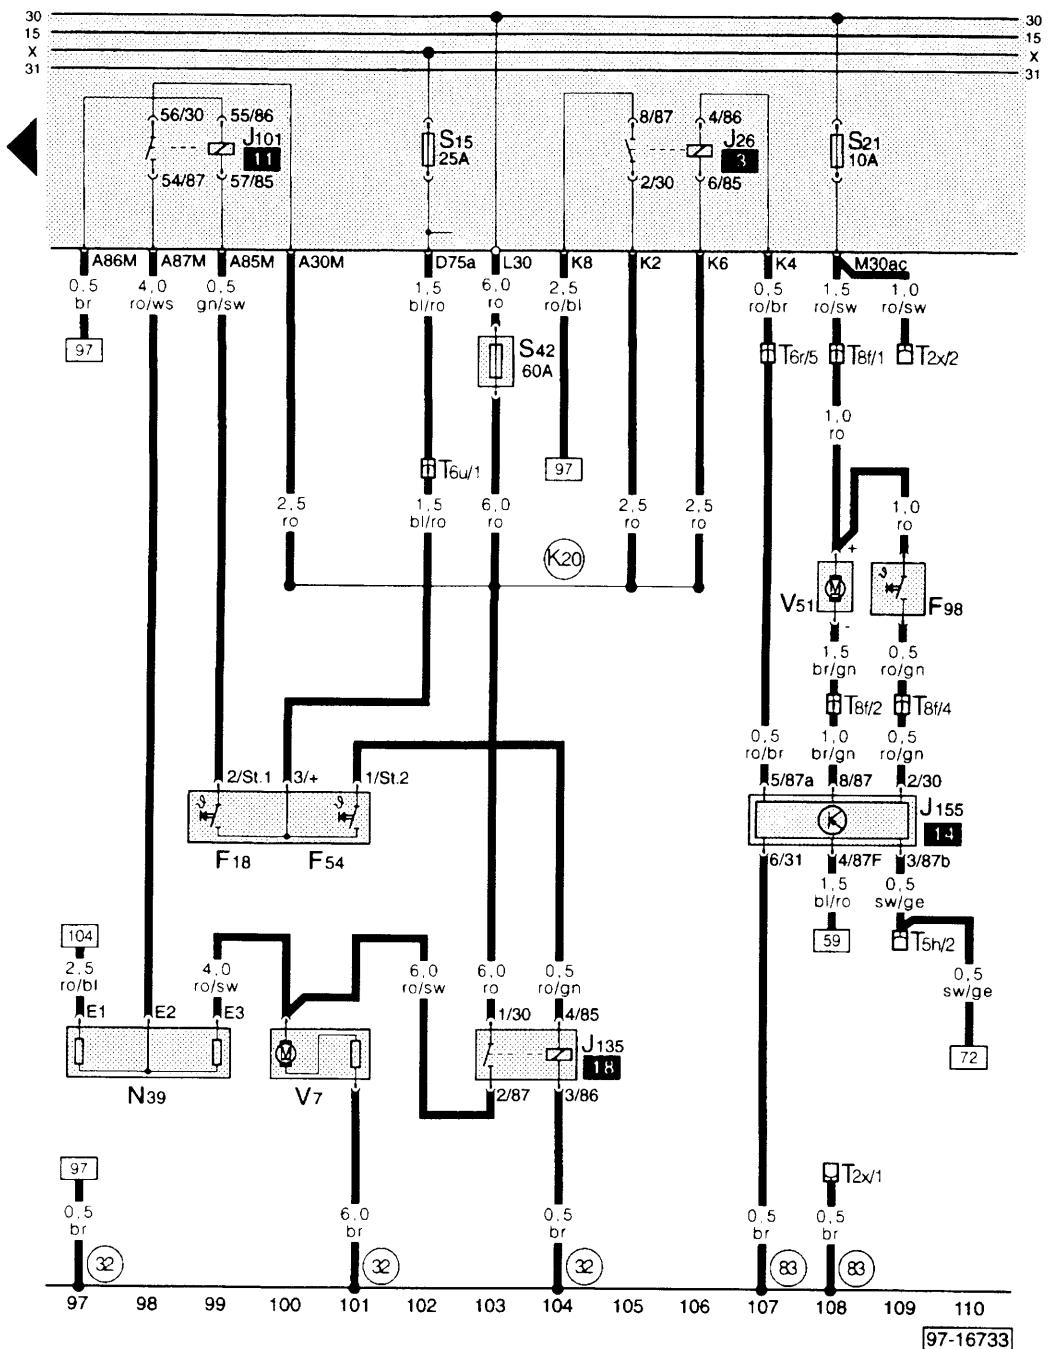

- bl = blue
- br = brown
- ge = yellow
- gn = green
- gr = grey
- li = purple
- ro = red
- sw = black
- ws = white

- F 18 - Radiator fan thermo switch
- F 54 - Radiator fan thermo switch
- F 98 - Thermo switch for coolant pump/turbocharger
- J 26 - Radiator fan relay
- J 101 - Radiator fan 2nd stage relay
- J 135 - Radiator fan 3rd stage relay
- J 155 - Control unit for coolant pump/turbocharger
- N 39 - Radiator fan series resistance
- S 42 - Separate fuse for radiator fan
- T 2 x - Connector, 2-pin, black, in plenum chamber near relay plate (diagnosis plug)
- T 5 h - Connector, 5-pin, red, behind dash panel, left
- T 6 r - Connector, 6-pin, black, behind dash panel, left
- T 6 u - Connector, 6-pin, green, behind dash panel, left
- T 8 f - Connector, 8-pin, in engine compartment, right
- V 7 - Radiator fan
- V 51 - Continued coolant circulation pump

- (32) - Earth point, behind dash panel, left
- (83) - Earth connection -1-, in front right wiring loom
- (K20) - Positive (+) connection (30), in radiator fan wiring loom