


Dash panel insert, mini-check system, oil pressure warning lamp, coolant monitor, handbrake warning system

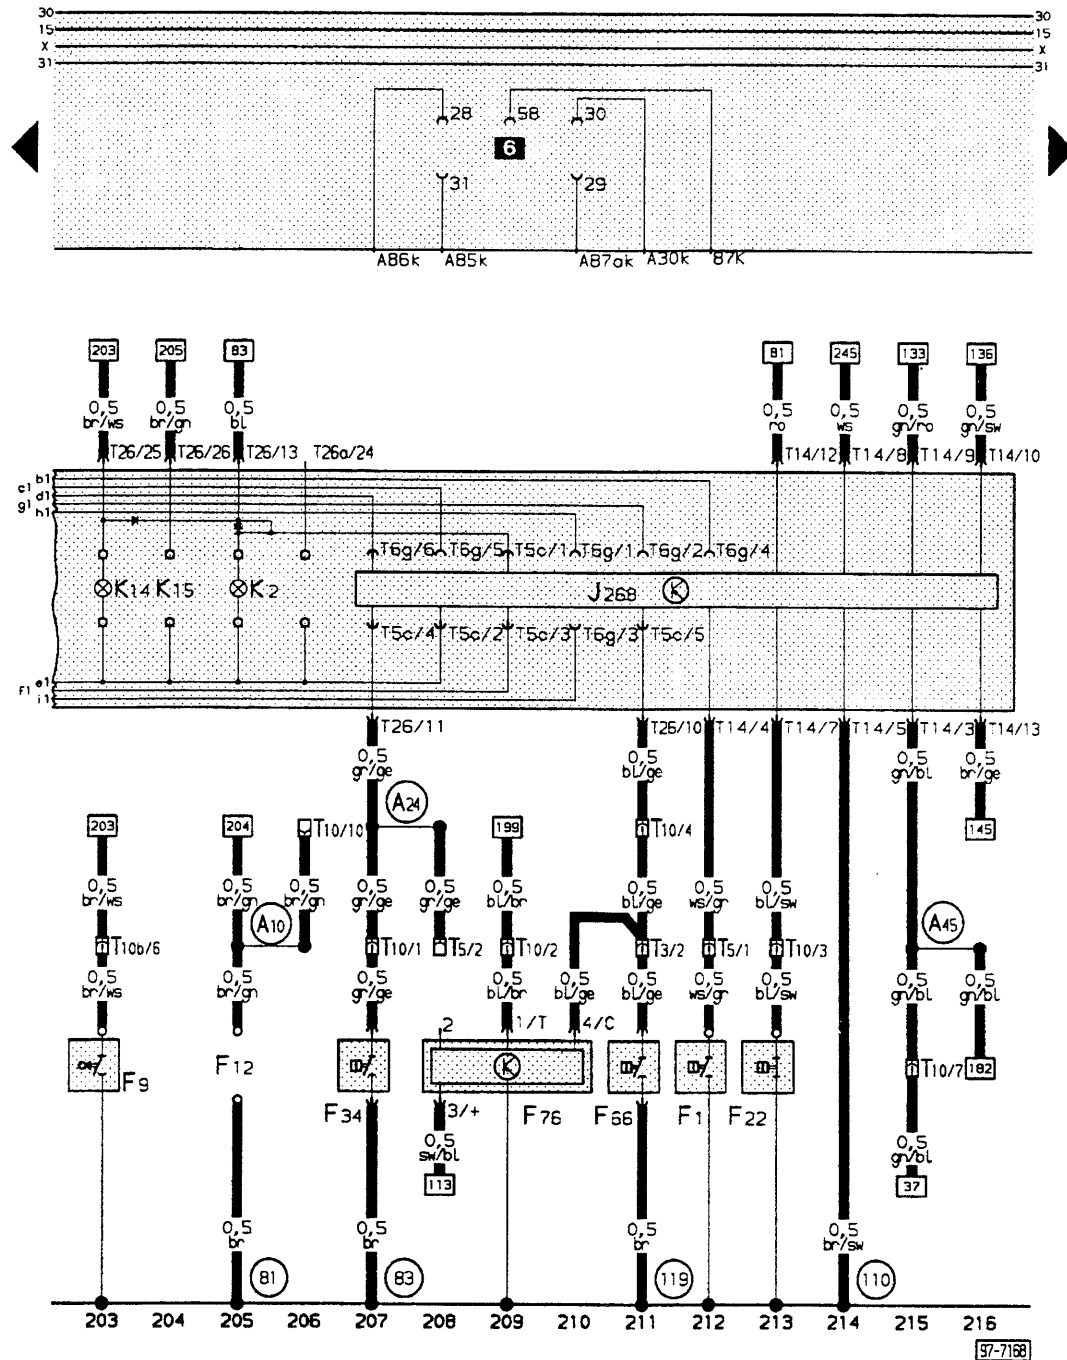

Wiring colours:

bl = blue
 br = brown
 ge = yellow
 gn = green
 gr = grey
 li = purple
 ro = red
 sw = black
 ws = white

- | | | | |
|-------|------------------------------------------------------------------|-------|---------------------------------------------------------------------|
| F 1 | – Oil pressure switch (1.8 bar) | T 10b | – Connector 10 pin, brown, connector point in aux. relay carrier |
| F 9 | – Handbrake warning system switch | T 14 | – Connector 14 pin, white, on dash panel insert (mini-check system) |
| F 12 | – Cold start warning system contact | T 26 | – Connector 26 pin, yellow, on dash panel insert |
| F 22 | – Oil pressure switch (0.3 bar) | T 26a | – Connector 26 pin, blue, on dash panel insert |
| F 34 | – Brake fluid level warning contact | (81) | – Earth connection – 1 –, in dash panel wiring loom |
| F 66 | – Coolant shortage indicator switch | (83) | – Earth connection – 1 –, in front right wiring loom |
| F 76 | – Electronic thermostwitch | (110) | – Earth connection – 2 –, in dash panel wiring loom |
| J 268 | – Control unit for mini-check-system | (119) | – Earth connection – 1 –, in headlight wiring loom |
| K 2 | – Alternator warning lamp | (A10) | – Connection (glow plug control) in dash panel wiring loom |
| K 14 | – Handbrake warning lamp | (A24) | – Connection (brake system monitoring), in dash panel wiring loom |
| K 15 | – Starting device warning lamp | (A45) | – Connection (engine speed signal), in dash panel wiring loom |
| T 3 | – Connector 3 pin, black, behind dash panel, left | | |
| T 5 | – Connector 5 pin, black, connector point in aux. relay carrier | | |
| T 5c | – Connector 5 pin, on dash panel insert | | |
| T 6g | – Connector 6 pin, on dash panel insert | | |
| T 10 | – Connector 10 pin, black, connector point in aux. relay carrier | | |