
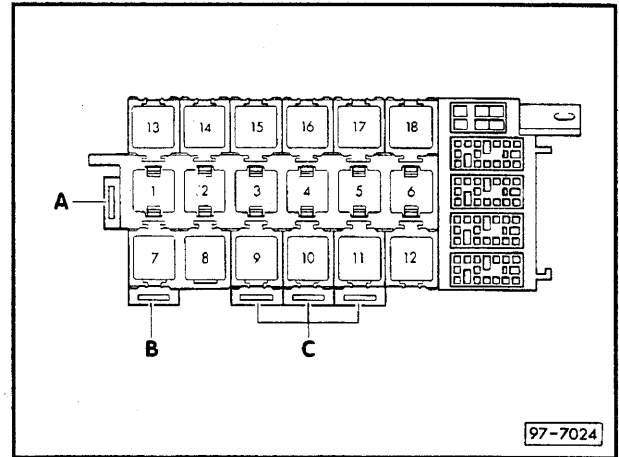


# Cruise control system with headlight beam height control

from Juli 1991

Position of relays,  
see also "Fitting Locations"  
Relay plate with fuse holder

Auxiliary relay carrier, front  
(under dash panel, left)

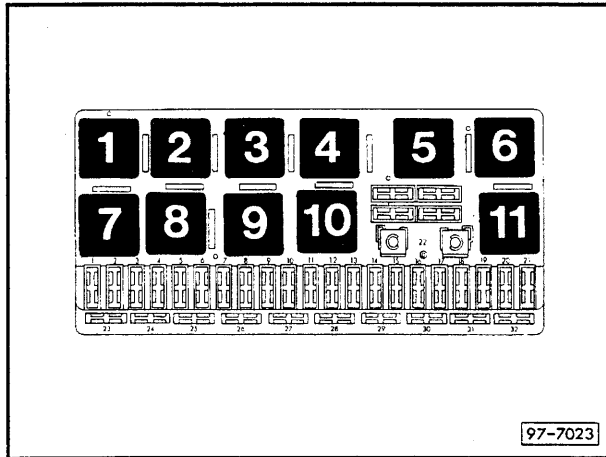


Position of relays:

Position of relays:

### Fuse colours

- 30 A – green
- 25 A – white
- 20 A – yellow
- 15 A – blue
- 10 A – red
- 5 A – beige

Cruise control system with beam height control

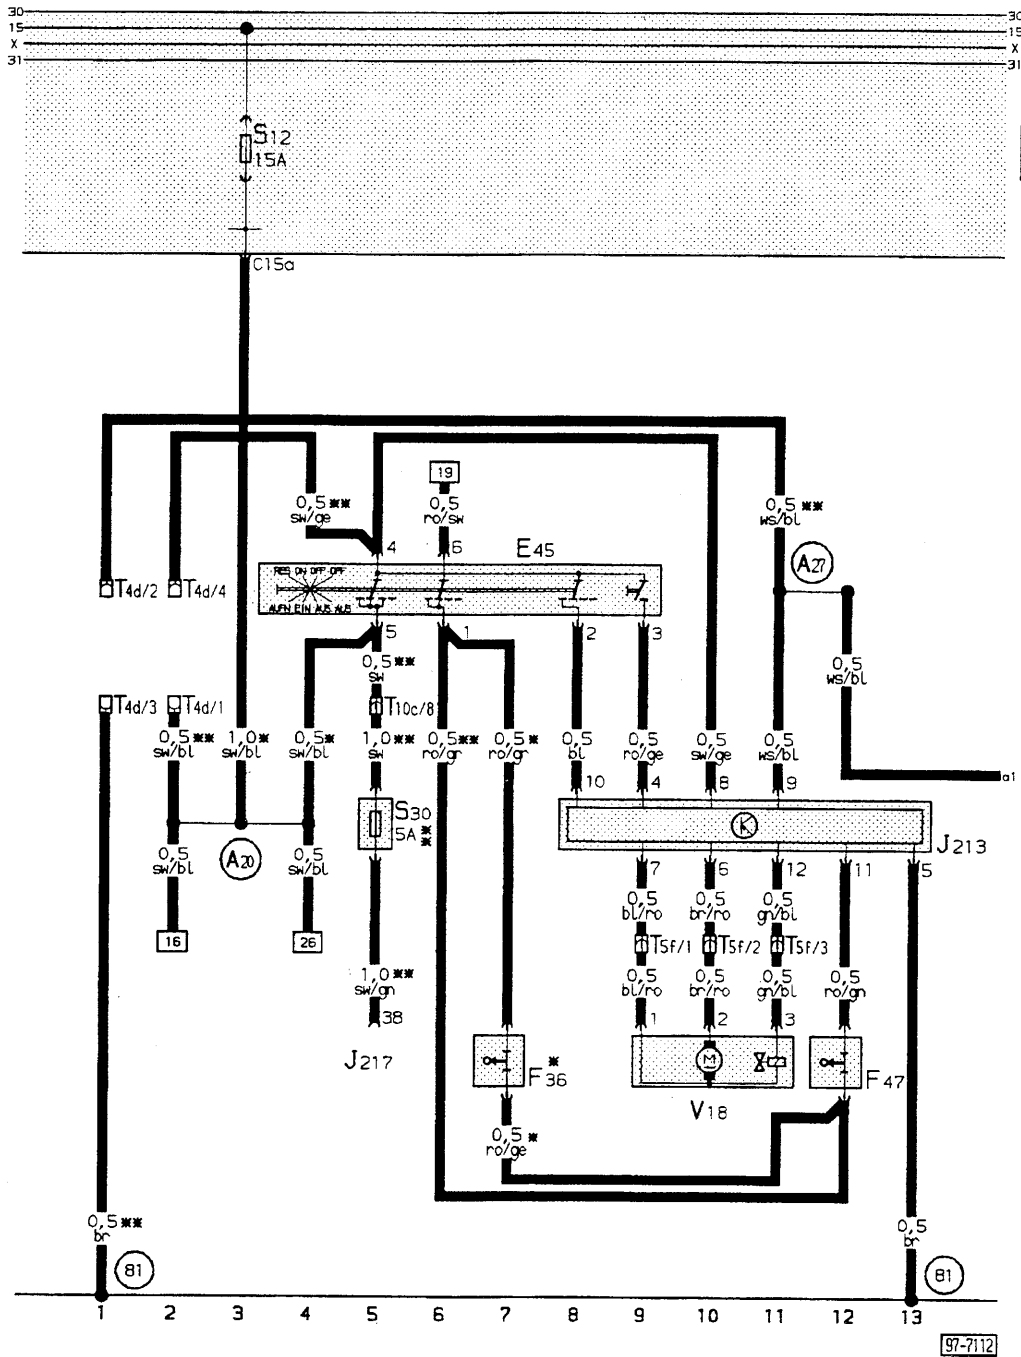


Wiring colours:

- bl = blue
- br = brown
- ge = yellow
- gn = green
- gr = grey
- li = purple
- ro = red
- sw = black
- ws = white

- E 45 – Cruise control switch
- F 36 – Clutch pedal switch for cruise control
- F 47 – Brake pedal switch for cruise control
- J 213 – Control unit for cruise control
- J 217 – Control unit for automatic gearbox
- S 30 – Fuse for cruise control with 4-speed automatic gearbox (in additional fuse holder)
- T 4d – Connector 4 pin, black, behind dash panel
- T 5f – Connector 5 pin, blue, behind dash panel
- T 10c – Connector 10 pin, green, connector point in aux. relay carrier
- V 18 – Vacuum pump for automatic cruise control

- (B1) – Earth connection – 1 –, in dash panel wiring loom
- (A20) – Connection (15a), in dash panel wiring loom
- (A27) – Connection (speed signal), in dash panel wiring loom
- \* – only in vehicles with manual gearbox
- \*\* – only in vehicles with automatic gearbox

Cruise control with headlight beam height control

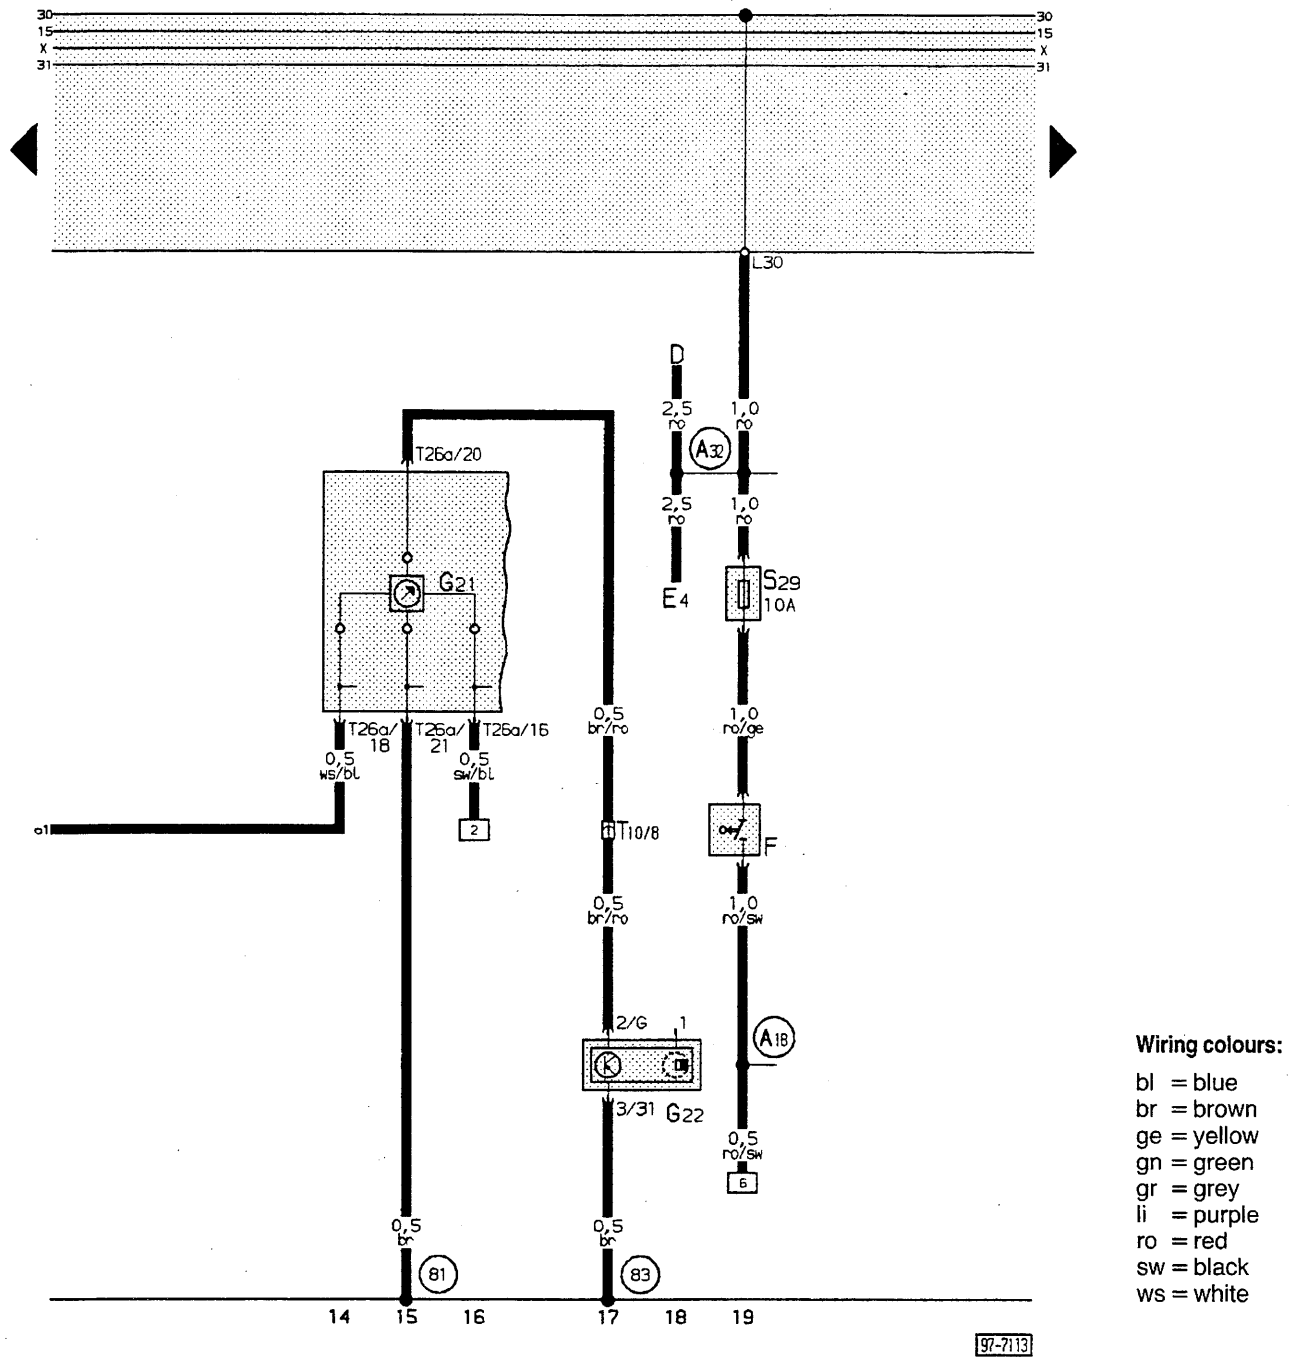


Wiring colours:

- bl = blue
- br = brown
- ge = yellow
- gn = green
- gr = grey
- li = purple
- ro = red
- sw = black
- ws = white

- D - Ignition/starter switch
- E 4 - Headlight dipper/flasher switch
- F - Brake light switch
- G 21 - Speedometer
- G 22 - Speedometer sender
- S 29 - Fuse for brake lights (in additional fuse holder)
- T 10 - Connector 10 pin, black, connector point in aux. relay carrier
- T 26a - Connector 26 pin, blue, on dash panel insert
- ⓑ1 - Earth connection - 1 -, in dash panel wiring loom
- ⓑ3 - Earth connection - 1 -, in front right wiring loom
- Ⓐ18 - Connection (54), in dash panel wiring loom
- Ⓐ32 - Positive connection (30), in dash panel wiring loom

97-7113

Cruise control system with headlight beam height control

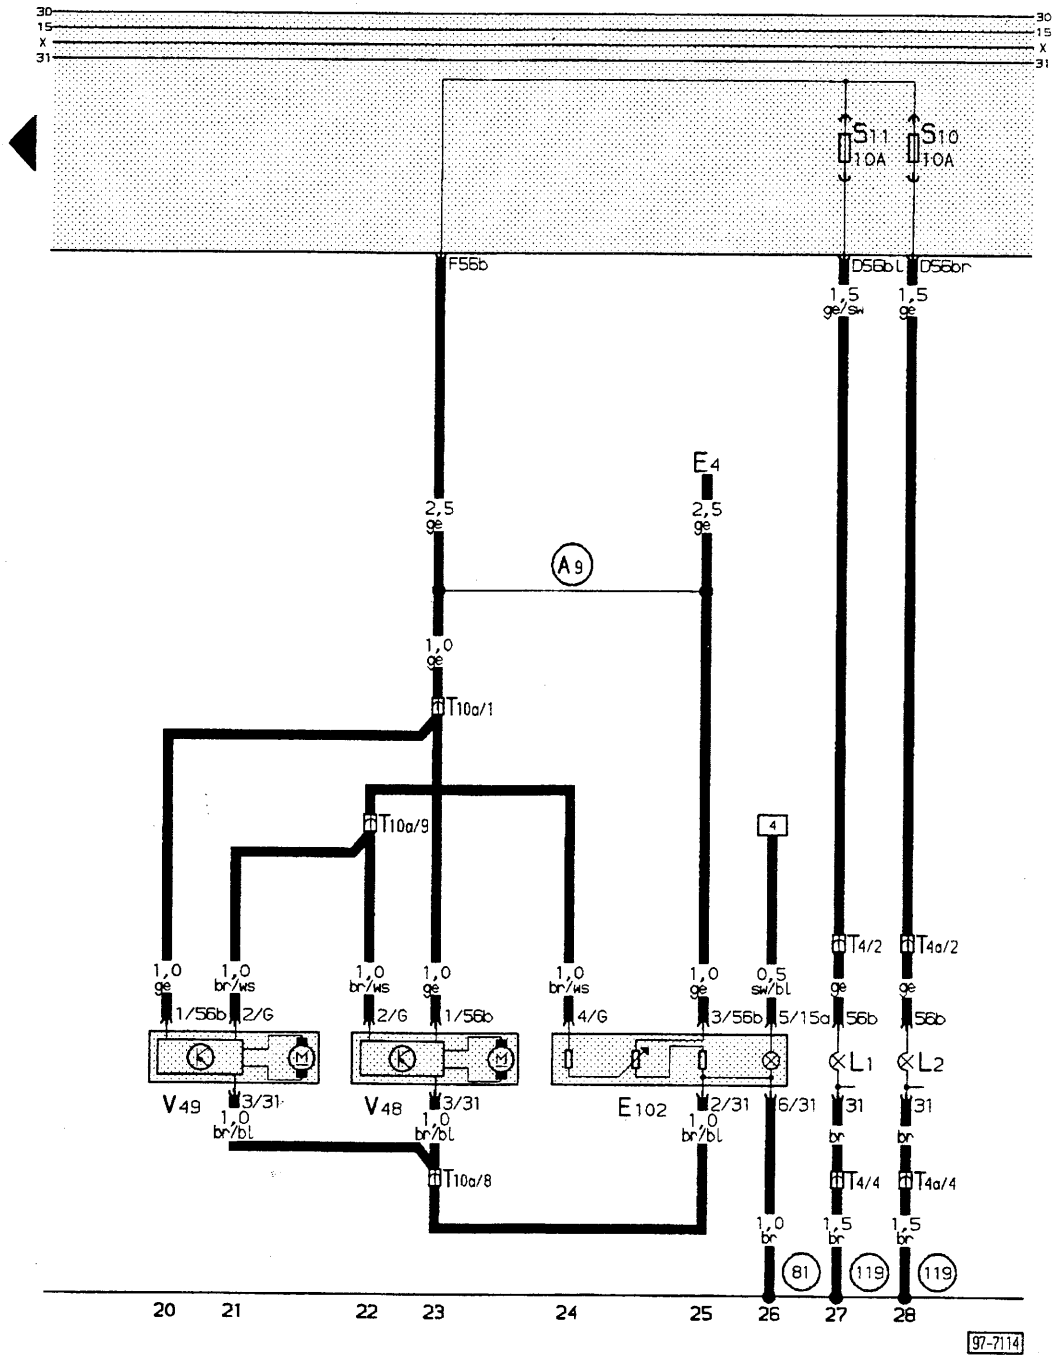

Wiring colours:

- bl = blue
- br = brown
- ge = yellow
- gn = green
- gr = grey
- li = purple
- ro = red
- sw = black
- ws = white

- E 4 – Headlight dipper/flasher switch
- E 102 – Headlight beam adjuster
- L 1 – Twin filament bulb, left headlight
- L 2 – Twin filament bulb, right headlight
- T 4 – Connector 4 pin, near headlight, left
- T 4a – Connector 4 pin, near headlight, right
- T 10a – Connector 10 pin, yellow, connector point in aux. relay carrier
- V 48 – Motor, left for beam adjustment
- V 49 – Motor, right for beam adjustment
- Ⓢ1 – Earth connection – 1 –, in dash panel wiring loom
- Ⓢ19 – Earth connection – 1 –, in headlight wiring loom
- Ⓢ9 – Positive (+) connection (56 b), in instruments wiring loom