


## Electronic fuel injection, fuel pump

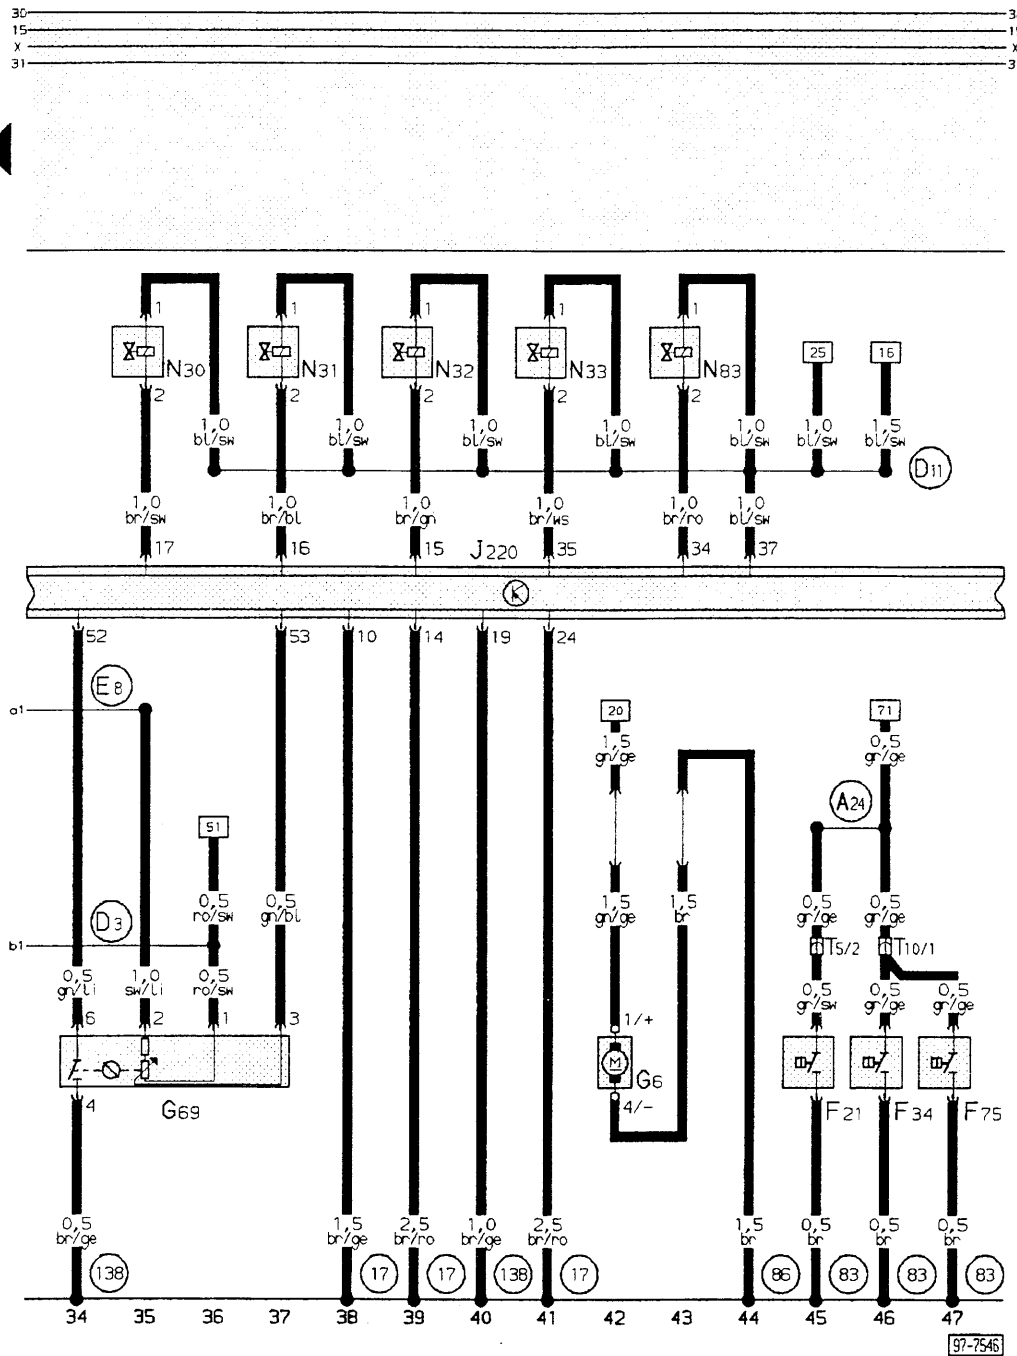

- F 21 – Hydraulic servo unit warning switch
- F 34 – Brake fluid level warning contact
- F 75 – Hydraulic fluid warning contact
- G 6 – Fuel pump
- G 69 – Throttle valve potentiometer
- J 220 – Control unit for motronic
- N 30 – Injector, cylinder 1
- N 31 – Injector, cylinder 2
- N 32 – Injector, cylinder 3
- N 33 – Injector, cylinder 4
- N 83 – Injector, cylinder 5
- T 5 – Connector 5 pin, black, connector point in aux. relay carrier
- T 10 – Connector 10 pin, black, connector point in aux. relay carrier

- (17) – Earth point, on intake manifold
- (83) – Earth connection – 1 –, in front right wiring loom
- (86) – Earth connection – 1 –, in rear wiring loom
- (138) – Earth connection (control unit), in Motronic wiring loom
- (A24) – Connection (brake system monitoring), in dash panel wiring loom
- (D3) – Connection (sender for consumption indicator 5 V), in front right wiring loom
- (D11) – Positive (+) connection (15) via fuse 28 in front right wiring loom
- (EB) – Connection (screening), in motronic wiring loom