
Infra-red receiver, central locking, anti-theft alarm system and interior light with delay feature, Audi Coupé


from July 1991

Position of relays, see also "Fitting Locations"

Relay plate with fuse holder:

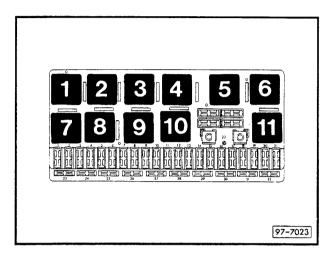

Auxiliary relay carrier, front (under dash panel, left)

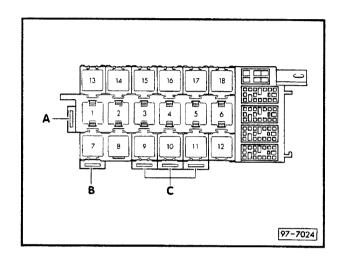


Position of relays:

8 - Relay for anti-theft alarm system (starter inhibitor)

Position of relays:

Auxiliary relay carrier, rear (under rear seat bench, left)

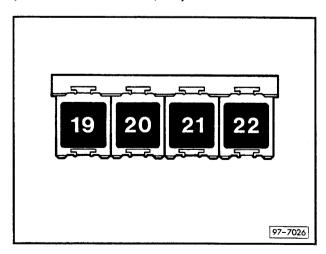

Position of relays:

Fuse colours

30 A - green

25 A - white


20 A - yellow

15 A - blue

10 A - red

5 A - beige

Infra-red receiver, central locking, anti-theft alarm system and interior light with delay feature

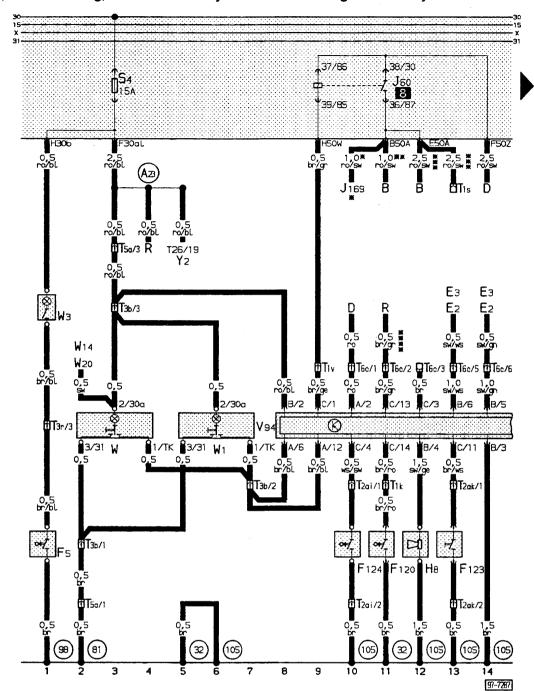

Wiring colours:

bl = blue

br = brown

ge = yellow

gn = green

gr = grey

= purple

ro = red

sw = black

ws = white

В	- Starter
D	 Ignition/starter switch
E2	- Turn signal switch
E 3	- Emergency light switch
F5	- Luggage boot light switch
F 120	Contact switch for anti-theft alarm
F 123	- Tailgate contact switch for anti-theft alarm
F 124	 Contact switch in lock cylinder for tailgate/anti-theft
,	alarm/central locking
H 8	- Horn for anti-theft alarm
J 60	- Automatic gearbox relay
J 169	- Control unit for Digifant
R	- Radio
T 1k	- Connector single, blue, behind dash panel
T1s	- Connector single, red, behind dash panel, left
T iv	Connector single, black, under rear seat, centre
T 2ai	- Connector 2 pin, black, in tailgate
T 2ak	- Connector 2 pin, black, in tailgate
Lan	- Cormector 2 pin, black, in taligate

T_{3b} Connector 3 pin, green, behind dash panel, left T3r - Connector 3 pin, white, in luggage boot, left T5a - Connector 5 pin, brown, connector point in aux. relay

- Connector 6 pin, black, behind dash panel, left T_{6c}

 Connector 26 pin, yellow, on dash panel insert
 Motor for central locking with control unit for interior lights switch-off delay and anti-theft alarm system
 Interior light, front T 26 V 94

W W 1 - Interior light, rear

Luggage boot light

W 3 W 14 W 20 Y 2 - Illuminated Make-up mirror (passenger's side) - Illuminated Make-up mirror (driver's side)

- Digital clock

32 - Earth point, behind dash panel, left

(81) - Earth connection - 1 -, in dash panel wiring loom

(98) - Earth connection, in tailgate wiring loom


105 - Earth connection - 1 -, in central locking wiring loom

@ - Connection (30al), in dash panel wiring loom

- only with 2.0 litre Digifant 85 kW 4-cylinder only with 2.0 litre Digifant 85 kW 4-cylinder and 5-cylinder fuel injection engines

- only with 6-cylinder fuel injection engines - only when equipped with radio

Infra-red receiver, central locking, anti-theft alarm system and interior light with delay feature

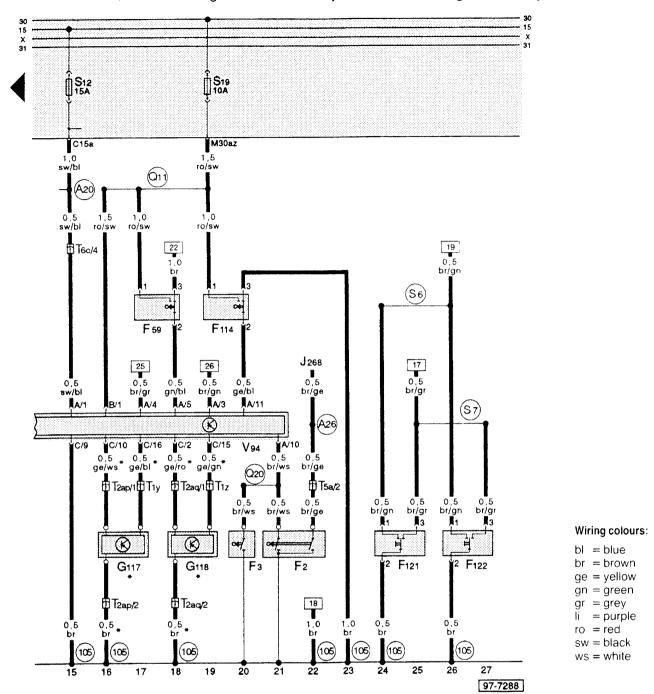

(A3C)

(A3)

- F 2 Front left door contact switch
- F 3 - Front right door contact switch F 59 - Switch for central locking (driver's side)
- Switch for central locking (passenger side) F 114
- F 121 Driver's door handle switch for anti-theft alarm
- Passenger door handle switch for anti-theft alarm F 122
- Infra-red sensor, left, for central locking G 117
- G 118 - Infra-red sensor, right, for central locking
- Control unit for mini-check system J 268
- Connector single, in driver's door T 1y
- T 1z - Connector single, in front passenger door
- Connector 2 pin, in driver's door T 2ap
- Connector 2 pin, in front passenger door T 2aq
- Connector 5 pin, brown, connector point in aux. T5a relay carrier
- T 6c - Connector 6 pin, black, behind dash panel, left
- Connector 14 pin, white, on dash panel insert T 14 (mini-check system)
- Motor for central locking with control unit for interior V 94 lights switch-off delay and anti-theft alarm system

- (105) Earth connection = 1 -, in central locking wiring loom
 - Connection (15a), in dash panel wiring loom
 - Connection (door contact switch/driver's side), in dash panel wiring loom
- (m) - Positive (+) connection (30az), in window lifter/central locking and door contact switch wiring loom
- (B) Connection - 1 - (door contact switch), in window lifter wiring loom
- (S6) Connection (A) - 1 -, in central locking system wiring loom
- (S7) Connection (A) - 2 -, in central locking system wiring loom
 - Only on vehicles with infra-red receiver