


Solar roof (without air conditioner), Audi Coupé

From February 1992


Position of relays –
also see “Fitting Locations”

Relay plate with fuse holder:

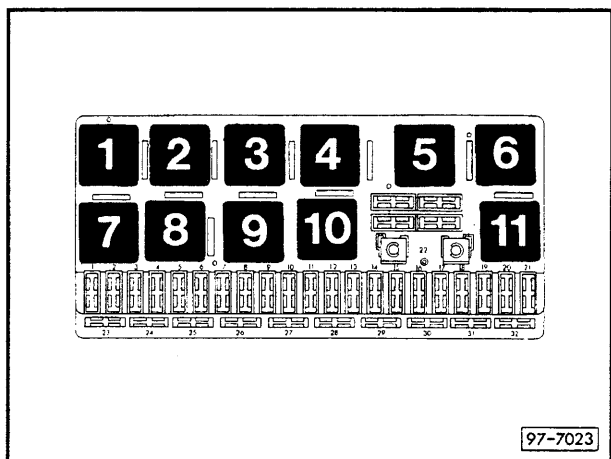

Position of relays:


Auxiliary relay carrier, front
(under dash panel, left)

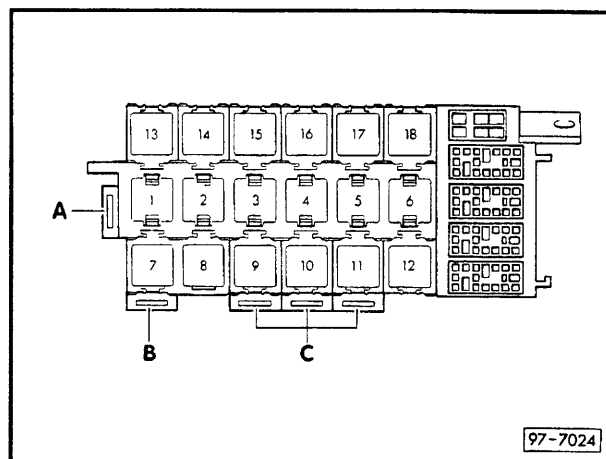

Position of relays:

17 – Cut-off relay for solar roof

Auxiliary relay carrier, rear
(under rear seat bench, left)

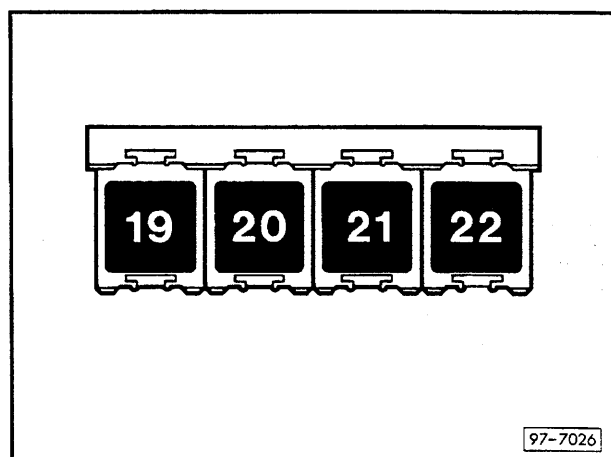


Position of relays:

Fuse colours

30 A – green
25 A – white
20 A – yellow
15 A – blue
10 A – red
5 A – beige

Solar roof (without air conditioner), Audi Coupé

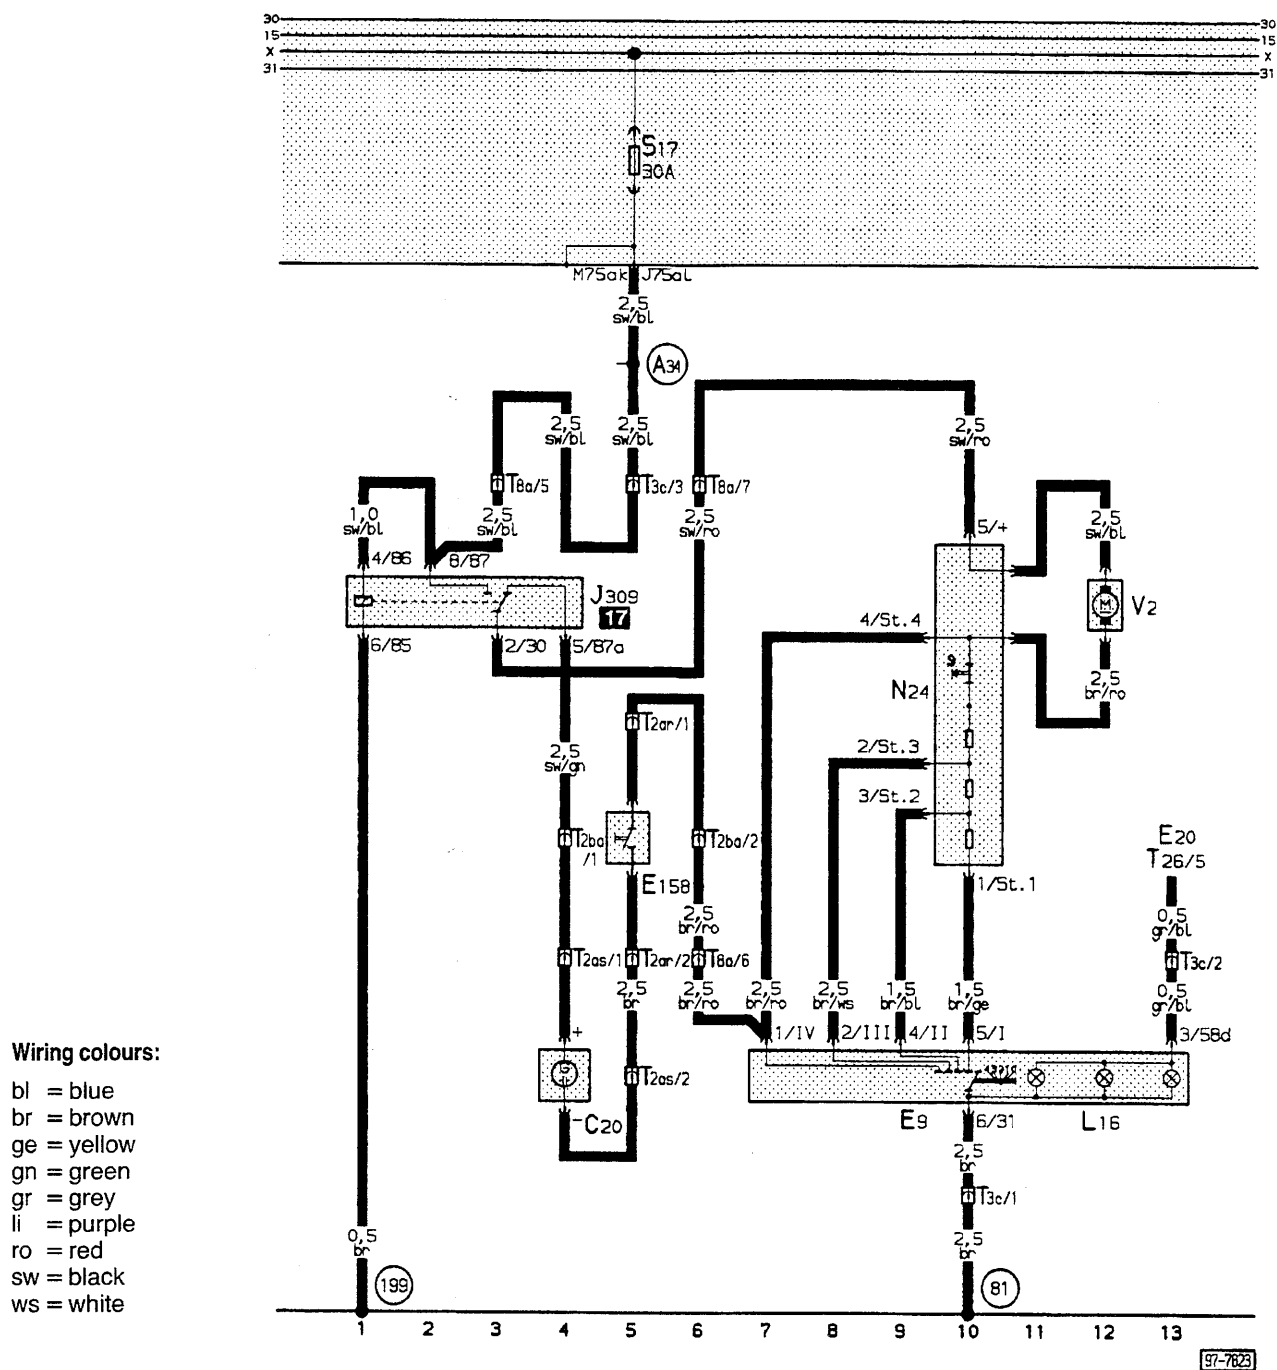

- C 20 – Solar cells
- E 9 – Fresh air blower switch
- E 20 – Switches and instruments – lighting control
- E 158 – Switch for solar cells
- J 309 – Solar cell separation relay
- L 16 – Fresh air controls light bulb
- N 24 – Series resistance for fresh air blower with overheating fuse
- T 2ar – Connector 2 pin, brown, near switch for solar roof
- T 2as – Connector 2 pin, blue, near solar generator
- T 2ba – Connector 2 pin, blue, behind dash panel, left
- T 3c – Connector 3 pin, brown, behind dash panel, centre
- T 8a – Connector 8 pin, red, behind dash panel, centre
- T 26 – Connector 26 pin, yellow, on dash panel insert
- V 2 – Fresh air blower
- Ⓔ – Earth connection – 1 –, in dash panel wiring loom
- Ⓕ – Earth connection – 3 –, in dash panel wiring loom
- Ⓐ – Connection (75x), in dash panel wiring loom