


# Electrically adjustable and heated outside mirrors, Audi Coupé

from July 1992


Position of relays –  
also see “Fitting Locations”

Relay plate with fuse holder:

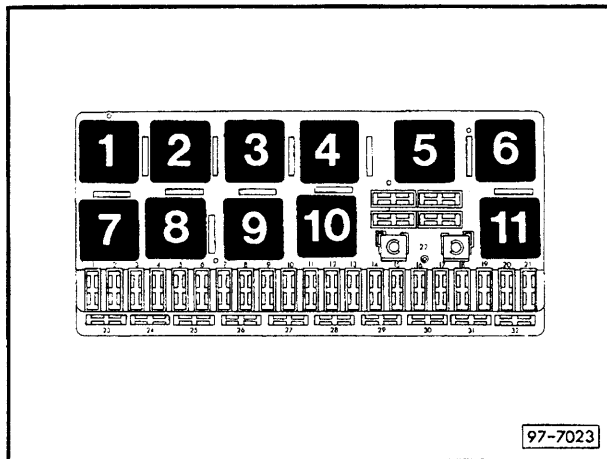

Position of relays:

Auxiliary relay carrier, front  
(under dash panel, left)

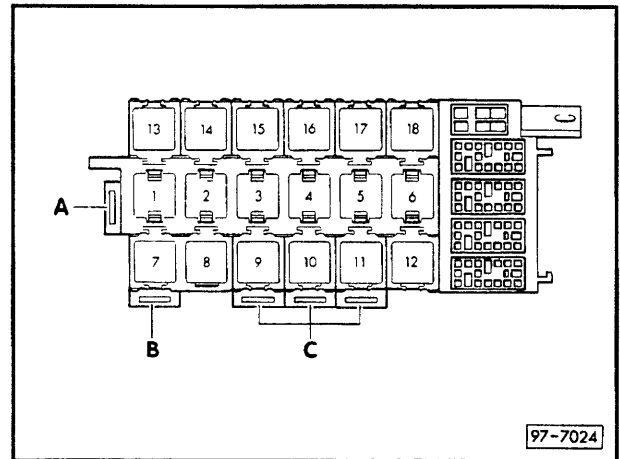


Position of relays:

## Fuse colours


- 30 A – green
- 25 A – white
- 20 A – yellow
- 15 A – blue
- 10 A – red
- 5 A – beige

Auxiliary relay carrier, rear  
(under rear seat bench, left)

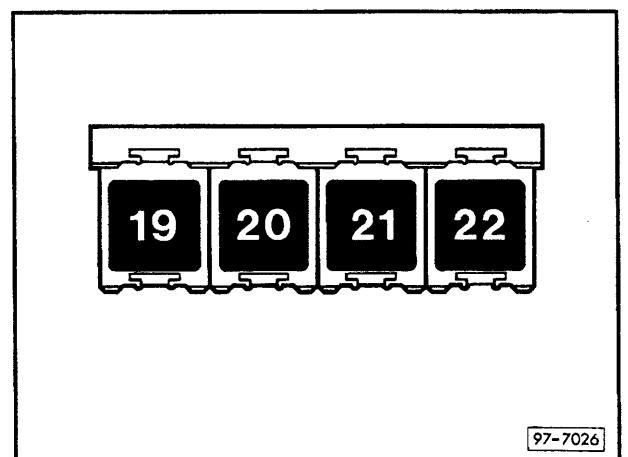

Position of relays:

## Electrically adjustable and heated outside mirrors

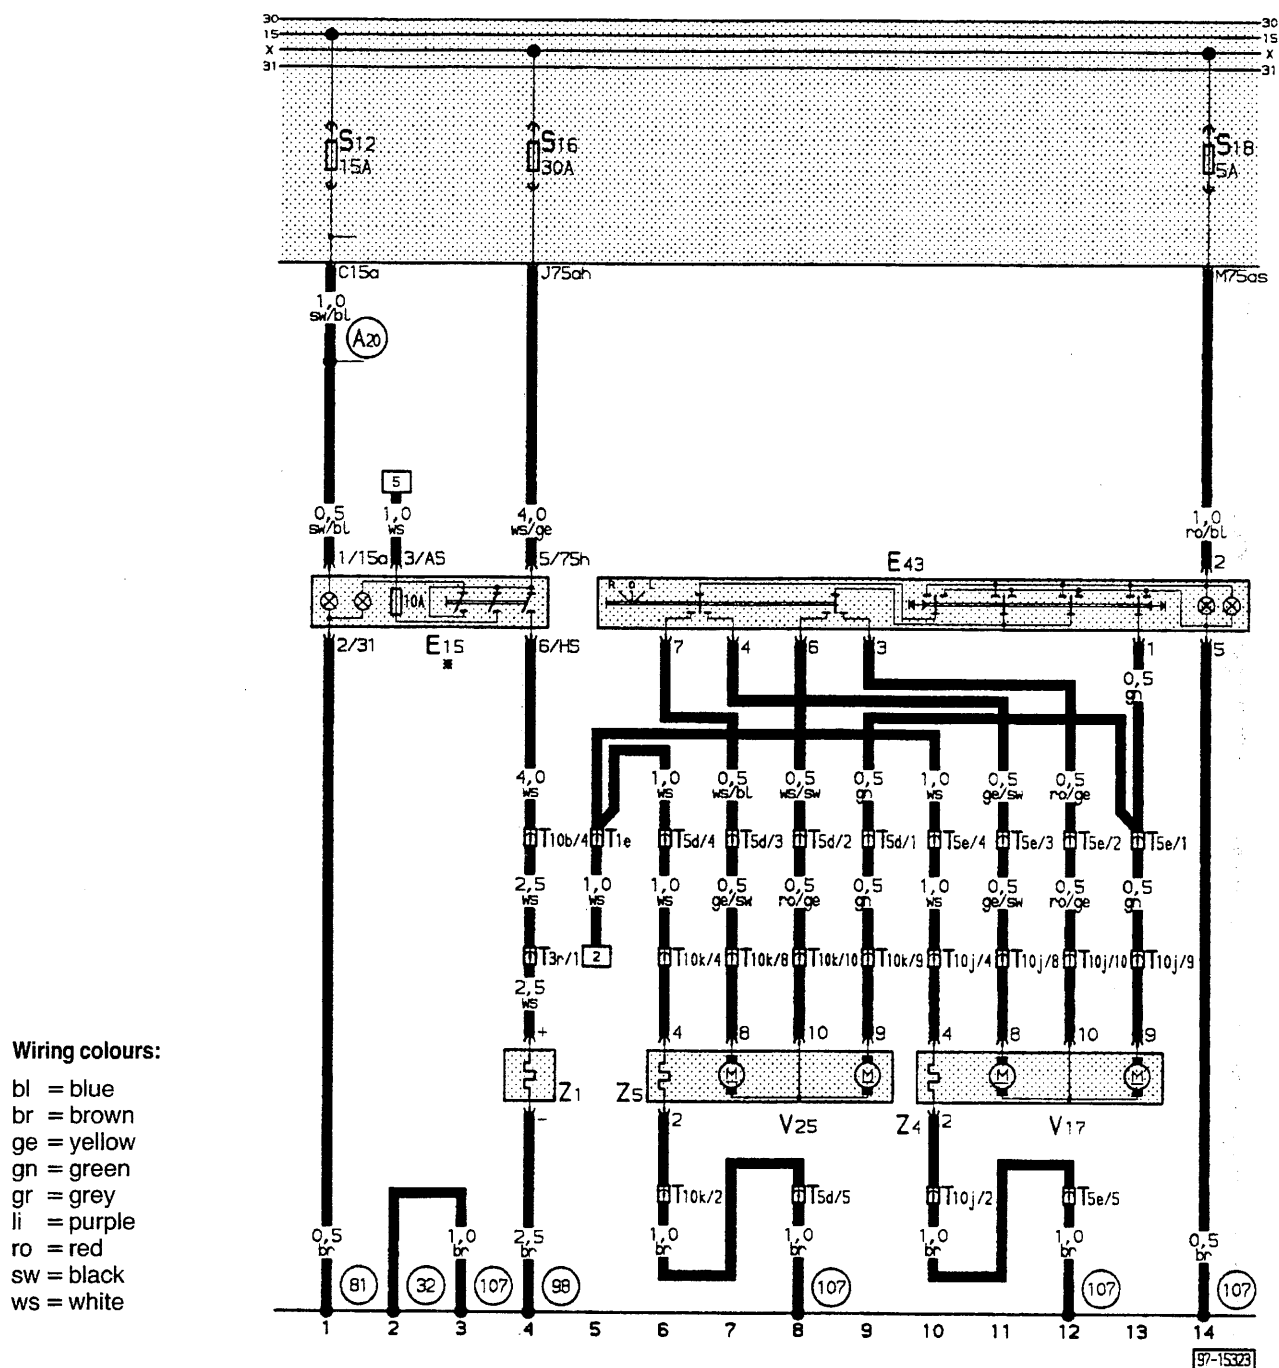

- E 15 – Heated rear window switch
- E 43 – Mirror adjustment switch
- T 1e – Connector single, green, behind dash panel, left
- T 3r – Connector 3 pin, white, in luggage boot, left
- T 5d – Connector 5 pin, on A-pillar, lower right
- T 5e – Connector 5 pin, on A-pillar, lower left
- T 10b – Connector 10 pin, brown, connector point in aux. relay carrier
- T 10j – Connector 10 pin, on driver's mirror
- T 10k – Connector 10 pin, on passenger's mirror
- V 17 – Mirror adjustment motor (driver's side)
- V 25 – Mirror adjustment motor (passenger side)
- Z 1 – Heated rear window
- Z 4 – Heated outer mirror (driver's side)
- Z 5 – Heated outer mirror (passenger side)
- 32 – Earth point, behind dash panel, left
- 81 – Earth connection – 1 –, in dash panel wiring loom

- 98 – Earth connection, in tailgate wiring loom
- 107 – Earth connection in outside mirror wiring loom
- A20 – Connection (15a), in dash panel wiring loom
- \* – Switch only on vehicles without air conditioner
- For switch on vehicles with air conditioner see CFD No. 89, Audi 80 1992, Model Year