


Gamma radio with passive loudspeakers, Audi Coupé

from July 1992


Position of relays –
also see “Fitting Locations”

Relay plate with fuse holder:

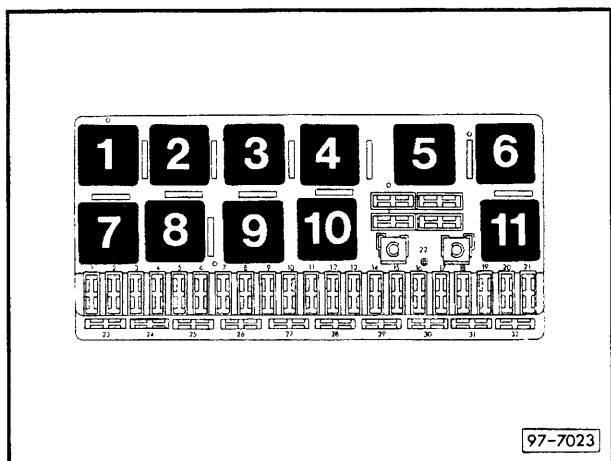

Position of relays:

Auxiliary relay carrier, front
(under dash panel, left)

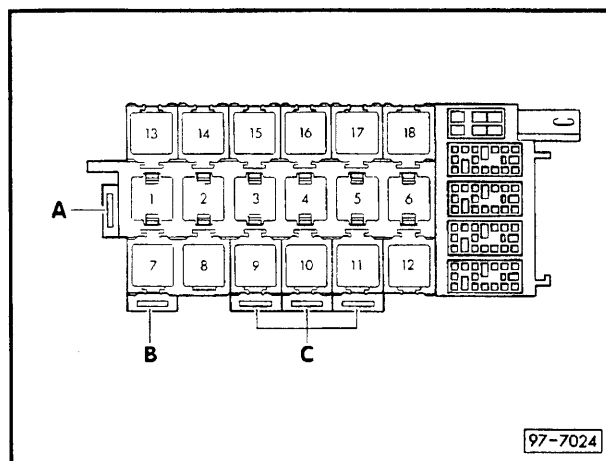


Position of relays:

Fuse colours


- 30 A – green
- 25 A – white
- 20 A – yellow
- 15 A – blue
- 10 A – red
- 5 A – beige

Auxiliary relay carrier, rear
(under rear seat bench, left)

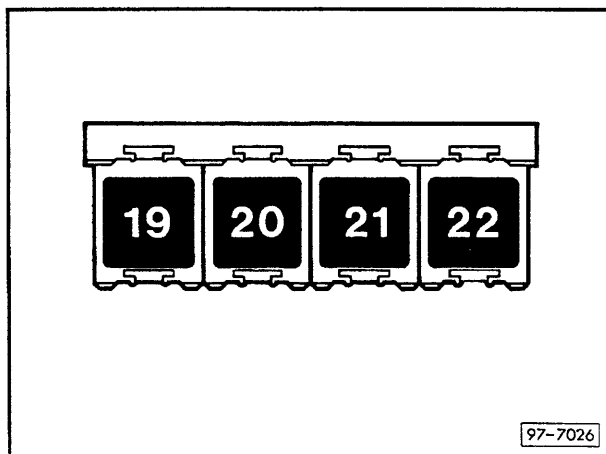

Position of relays:

Gamma radio with passive loudspeakers

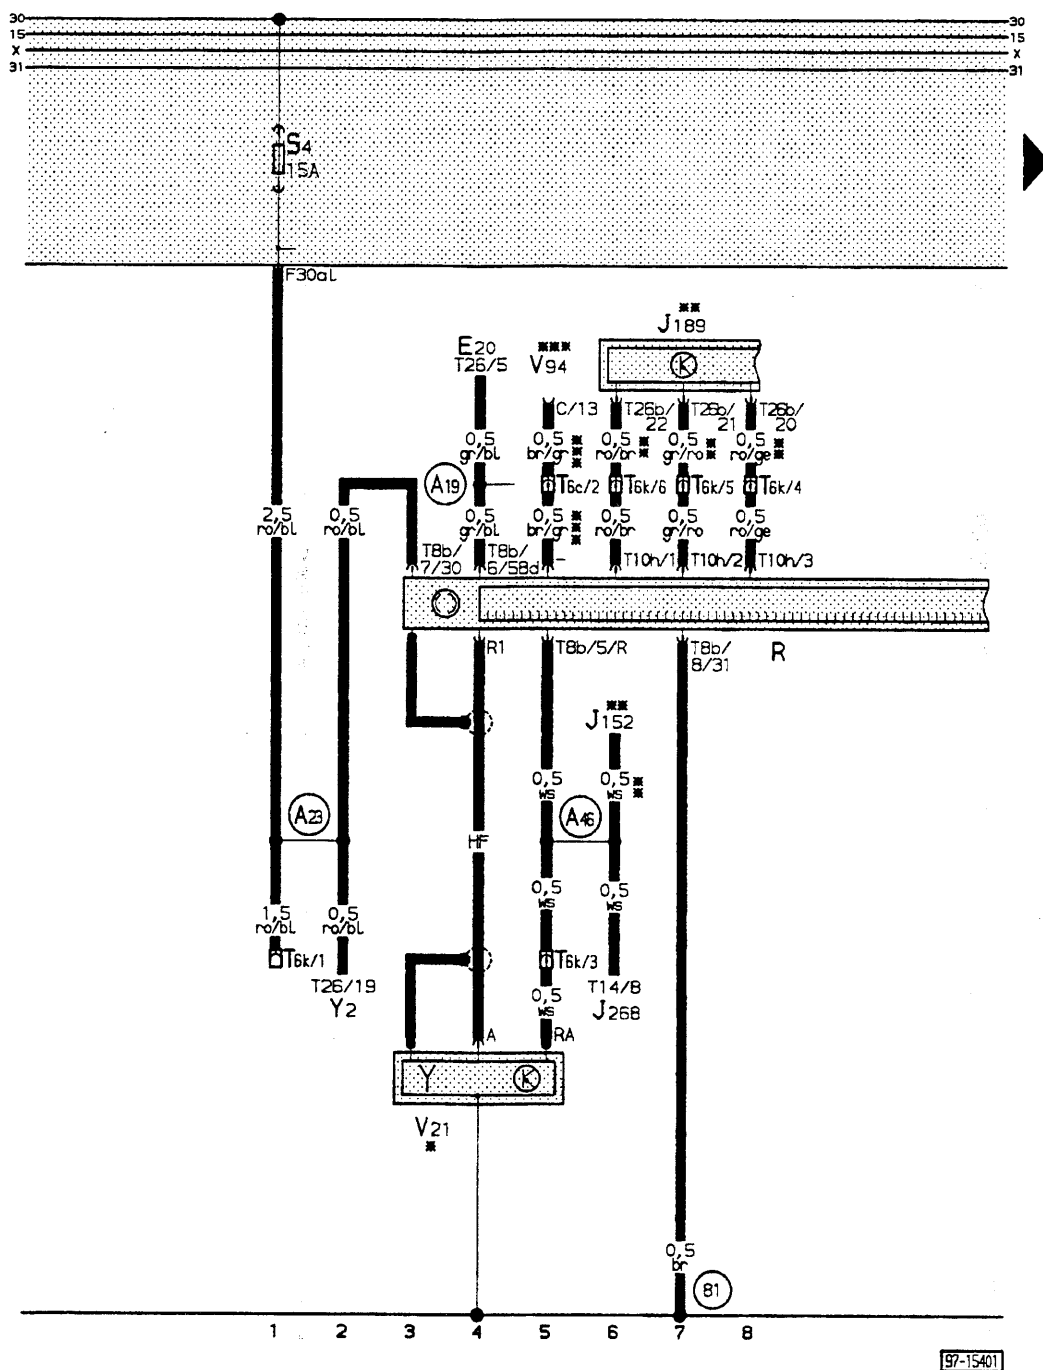

- E 20 – Switches and instruments – lighting control
- J 152 – Buzzer for side lights and radio
- J 189 – Auto-check system
- J 268 – Control unit for mini-check-system
- R – Radio
- T 6c – Connector 6 pin, black, behind dash panel, left
- T 6k – Connector 6 pin, black, behind console
- T 8b – Connector 8 pin, on radio
- T 10h – Connector 10 pin, red, on radio
- T 14 – Connector 14 pin, on dash panel insert (mini-check system)
- T 26 – Connector 26 pin, yellow, on dash panel insert
- T 26b – Connector 26 pin, white, on dash panel insert (auto-check system indicator unit)
- V 21 – Aerial motor
- V 94 – Motor for central locking with control unit for interior lights switch-off delay and anti-theft alarm system

- Y 2 – Digital clock
- (81) – Earth connection – 1 –, in dash panel wiring loom
- (A19) – Connection (58d), in dash panel wiring loom
- (A23) – Connection (30a), in dash panel wiring loom
- (A46) – Positive (+) connection (30 – from radio), in dash panel wiring loom
- * – Diagram shows automatic power aerial
- For roof aerial see CFD for Gamma radio with active loudspeakers
- ** – only with auto-check system
- *** – only with anti-theft alarm

Gamma radio with passive loudspeakers

