


Anti-theft alarm system with central locking, infra-red receiver and interior light with switch-off delay, Audi Coupé

from July 1993

Position of relays, see also "Fitting Locations"

Relay plate with fuse holder:

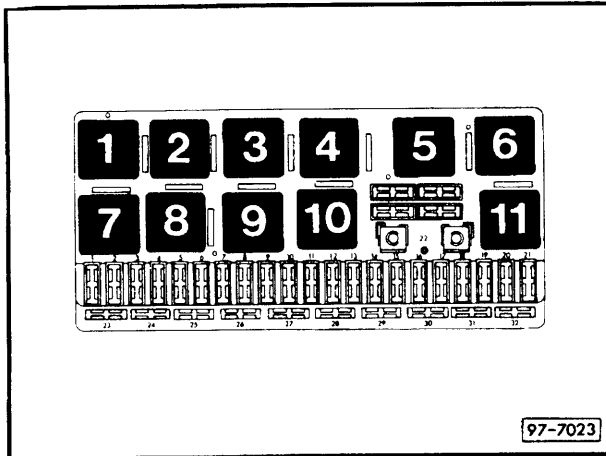


Position of relays:

- 8** – Relay for starter inhibitor and reversing light with manual gearbox/bridge connection with automatic gearbox

Fuse colours


- 30 A – green
- 25 A – white
- 20 A – yellow
- 15 A – blue
- 10 A – red
- 5 A – beige

Auxiliary relay carrier, front (under dash panel, left)

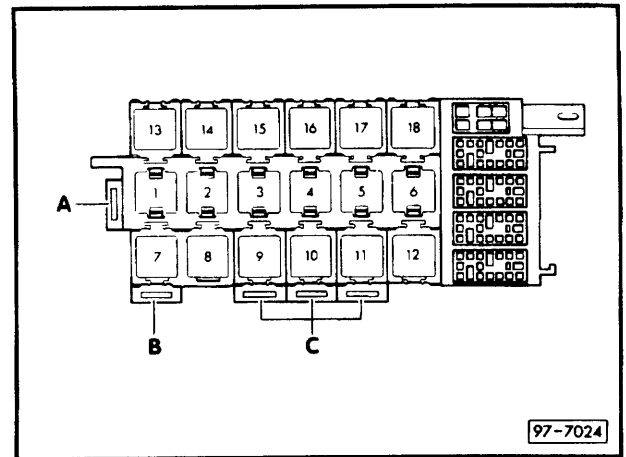


Position of relays:

Auxiliary relay carrier, rear (under rear seat bench, left)

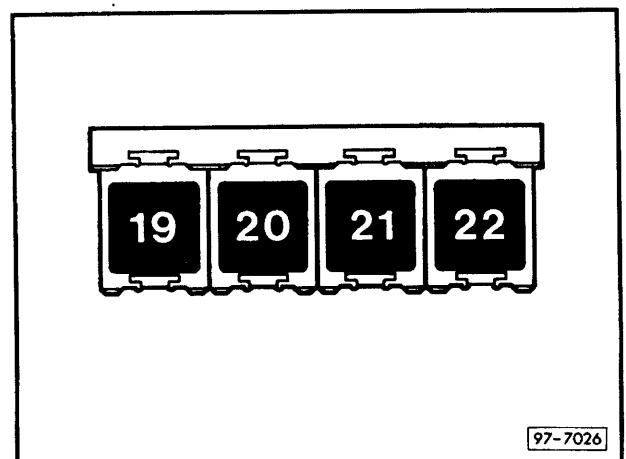

Position of relays:

Anti-theft alarm system with central locking, infra-red receiver and interior light with switch-off delay

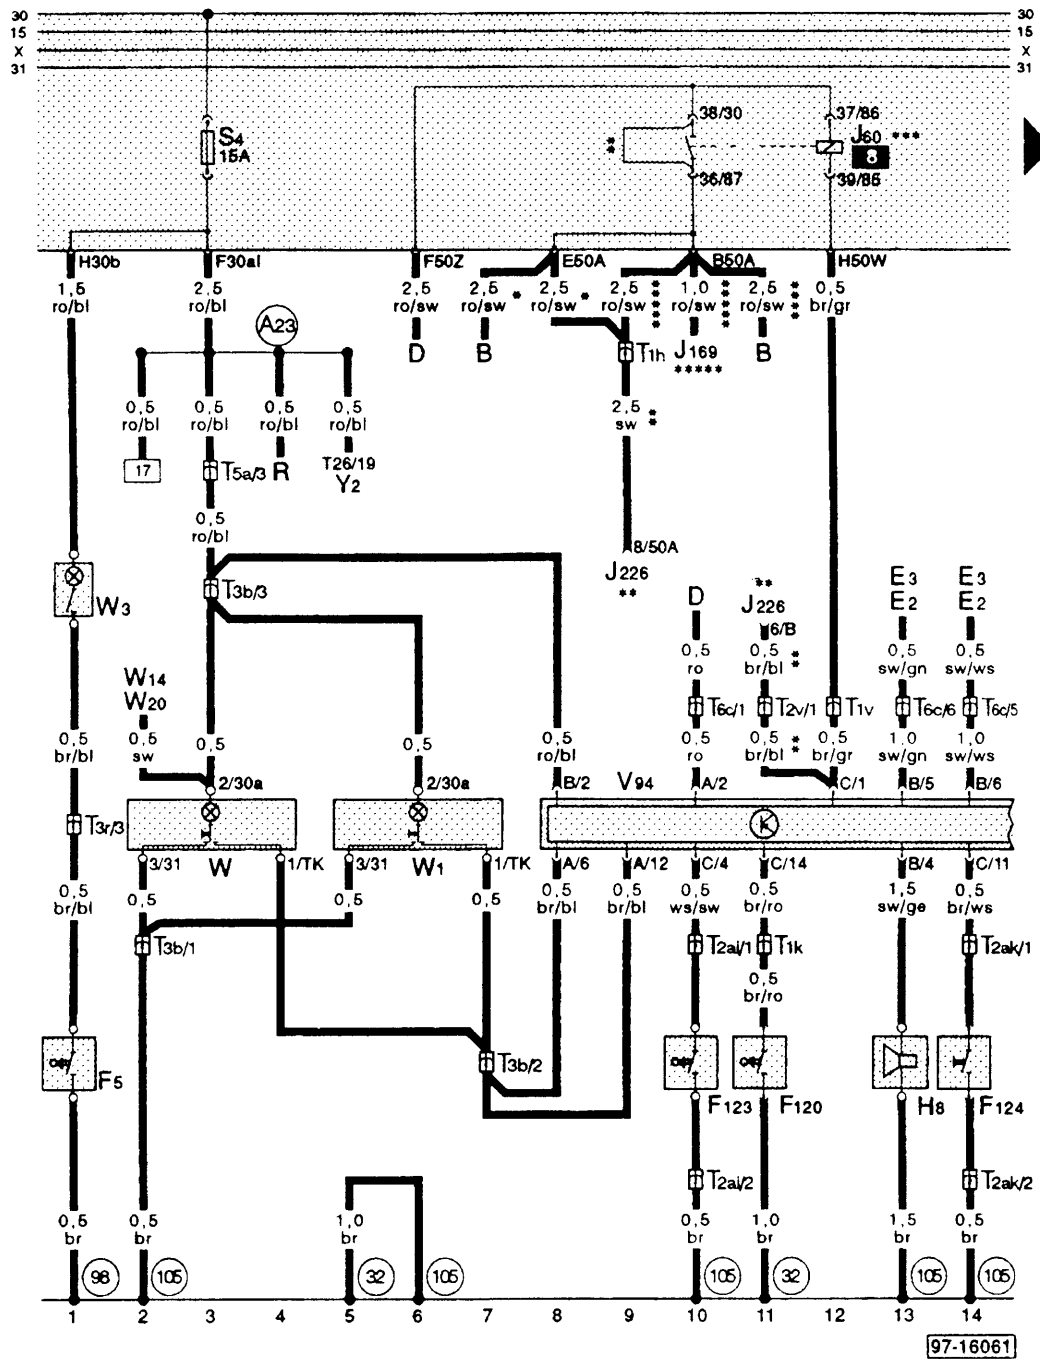


Wiring colours:

- bl = blue
- br = brown
- ge = yellow
- gn = green
- gr = grey
- li = purple
- ro = red
- sw = black
- ws = white

- | | |
|--|--|
| <ul style="list-style-type: none"> B - Starter D - Ignition/starter switch E 2 - Turn signal switch E 3 - Emergency light switch F 5 - Luggage boot light switch F 120 - Contact switch for anti-theft alarm F 123 - Tailgate contact switch for anti-theft alarm F 124 - Contact switch in lock cylinder for tailgate/anti-theft alarm/central locking H 8 - Horn for anti-theft alarm J 60 - Automatic gearbox relay J 169 - Control unit for Digifant J 226 - Relay for starter inhibitor and reversing light R - Radio T 1h - Connector single, red, behind dash panel, left T 1k - Connector single, blue, behind dash panel T 1v - Connector single, black, under rear seat, centre T 2v - Connector 2 pin, white, behind dash panel T 2a1 - Connector 2 pin, black, in tailgate T 2a2 - Connector 2 pin, black, in tailgate T 2ak - Connector 2 pin, black, in tailgate T 3b - Connector 3 pin, green, behind dash panel, left T 3r - Connector 3 pin, white, in luggage boot, left T 5a - Connector 5 pin, brown, connector point in aux. relay carrier T 6c - Connector 6 pin, yellow, behind dash panel, left T 26 - Connector 26 pin, yellow, on dash panel insert | <ul style="list-style-type: none"> V 94 - Motor for central locking with control unit for interior lights switch-off delay and anti-theft alarm system W - Interior light, front W 1 - Interior light, rear W 3 - Luggage boot light W 14 - Illuminated make-up mirror (passenger's side) W 20 - Illuminated make-up mirror (driver's side) Y 2 - Digital clock ⊕ - Earth point, behind dash panel, left ⊕ - Earth connection, in tailgate wiring loom ⊕ - Earth connection - 1 -, in central locking wiring loom ⊕ - Connection (30a1), in dash panel wiring loom · - only with 2.0 litre K-Motronic 103 kW 4-cylinder and 6-cylinder fuel injection engines ·· - only on vehicles with automatic gearbox ···· - only on vehicles with manual gearbox ···· - not on vehicles with 2.0 litre K-Motronic 103 kW 4-cylinder and 6-cylinder fuel injection engines ···· - only on vehicles with 2.0 litre Digifant 85 kW 4-cylinder |
|--|--|


Anti-theft alarm system with central locking, infra-red receiver and interior light with switch-off delay

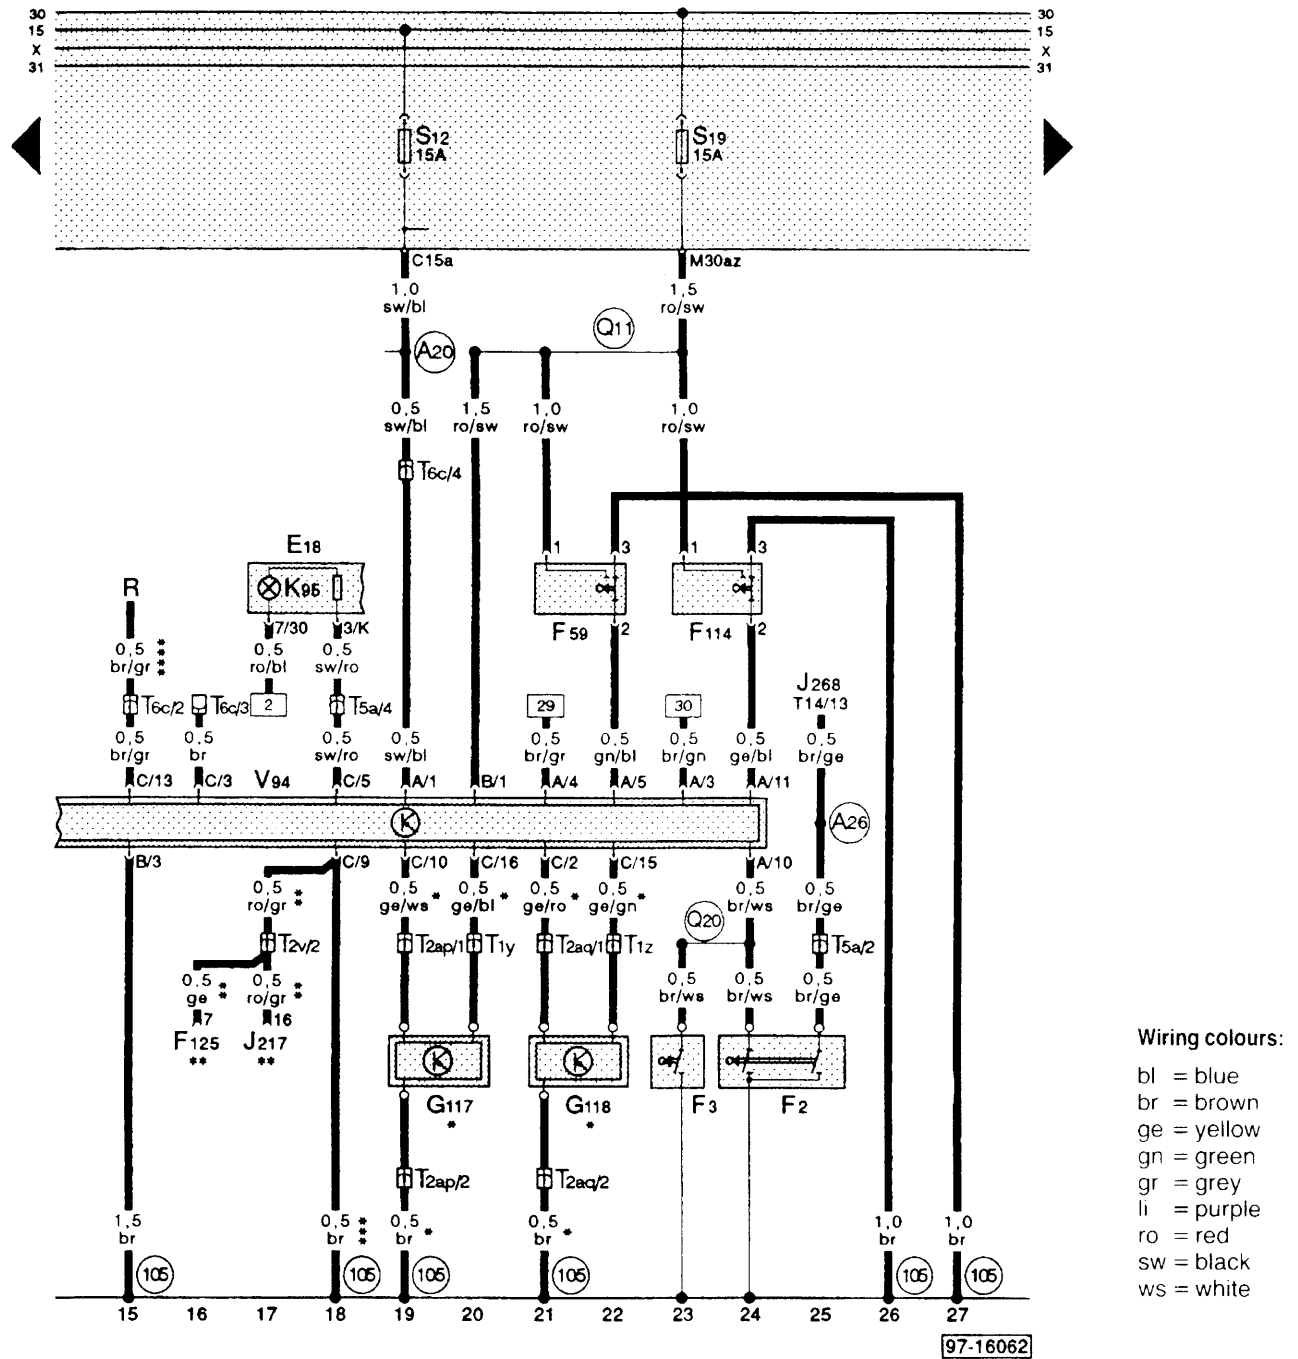

Wiring colours:
 bl = blue
 br = brown
 ge = yellow
 gn = green
 gr = grey
 li = purple
 ro = red
 sw = black
 ws = white


- E 18 – Rear fog light switch
- F 2 – Front left door contact switch
- F 3 – Front right door contact switch
- F 59 – Switch for central locking (driver's side)
- F 114 – Switch for central locking (passenger side)
- F 125 – Multi-function switch
- G 117 – Infra-red sensor, left, for central locking
- G 118 – Infra-red sensor, right, for central locking
- J 217 – Control unit for automatic gearbox
- J 268 – Control unit for mini-check system
- K 95 – Alarm system warning lamp
- R – Radio
- T 1y – Connector single, in driver's door
- T 1z – Connector single, in front passenger door
- T 2v – Connector 2 pin, white, behind dash panel
- T 2ap – Connector 2 pin, in driver's door
- T 2aq – Connector 2 pin, in front passenger door
- T 5a – Connector 5 pin, brown, connector point in aux. relay carrier
- T 6c – Connector 6 pin, yellow, behind dash panel, left
- T 14 – Connector 14 pin, white, on dash panel insert (mini-check system)
- V 94 – Motor for central locking with control unit for interior lights switch-off delay and anti-theft alarm system
- (105) – Earth connection – 1 –, in central locking wiring loom
- (A20) – Connection (15a), in dash panel wiring loom
- (A26) – Connection (door contact switch/driver side), in dash panel wiring loom
- (Q11) – Positive (+) connection (30az), in window lifter/central locking and door contact switch wiring loom
- (Q20) – Connection – 1 – (door contact switch), in window lifter wiring loom
- * – only when equipped with infra-red receiver
- ** – only on vehicles with automatic gearbox
- *** – only on vehicles with manual gearbox
- **** – only when equipped with radio

Anti-theft alarm system with central locking, infra-red receiver and interior light with switch-off delay

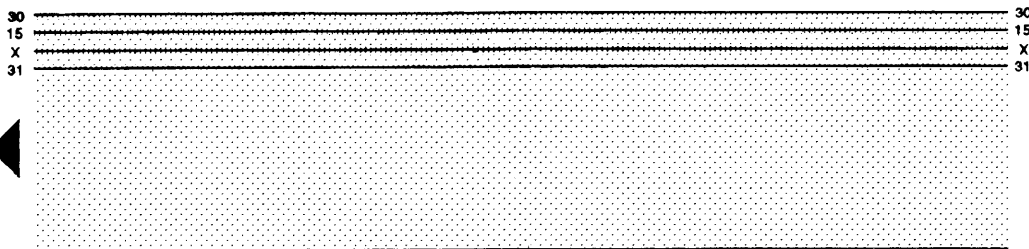

Wiring colours:

- bl = blue
- br = brown
- ge = yellow
- gn = green
- gr = grey
- li = purple
- ro = red
- sw = black
- ws = white

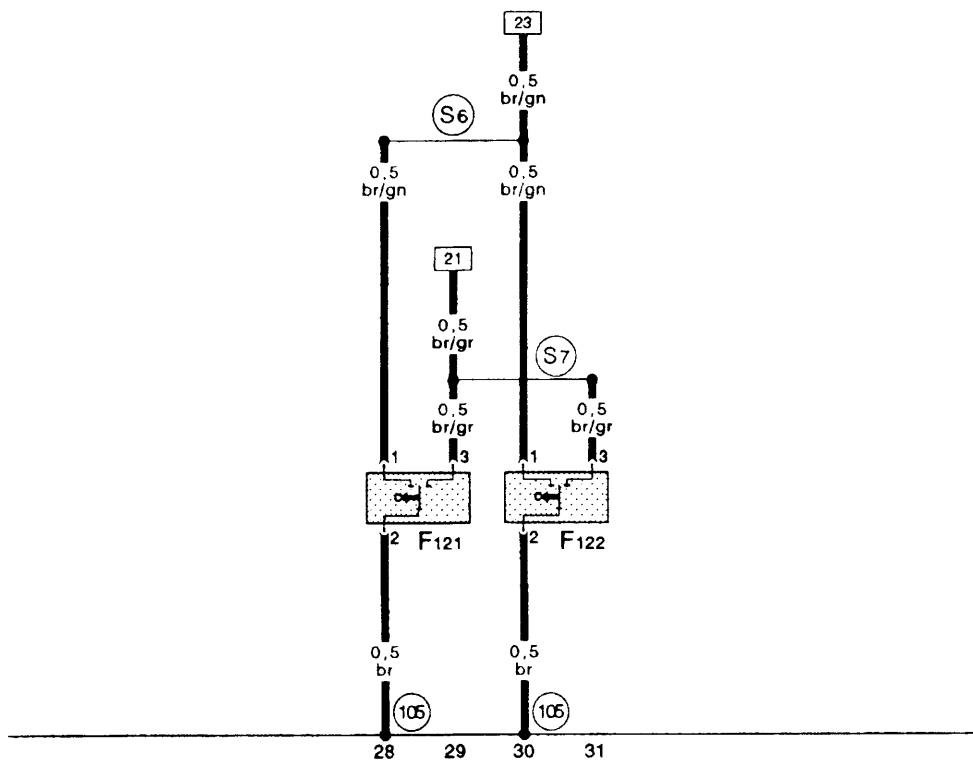

97-16078

- F 121 – Driver's door switch for anti-theft alarm
- F 122 – Passenger door switch for anti-theft alarm
- ⑩⑤ – Earth connection – 1 –, in central locking wiring loom
- ⑥ – Connection (A) – 1 –, in central locking system wiring loom
- ⑦ – Connection (A) – 2 –, in central locking system wiring loom