


Ignition/starter switch, relief relay for X contact

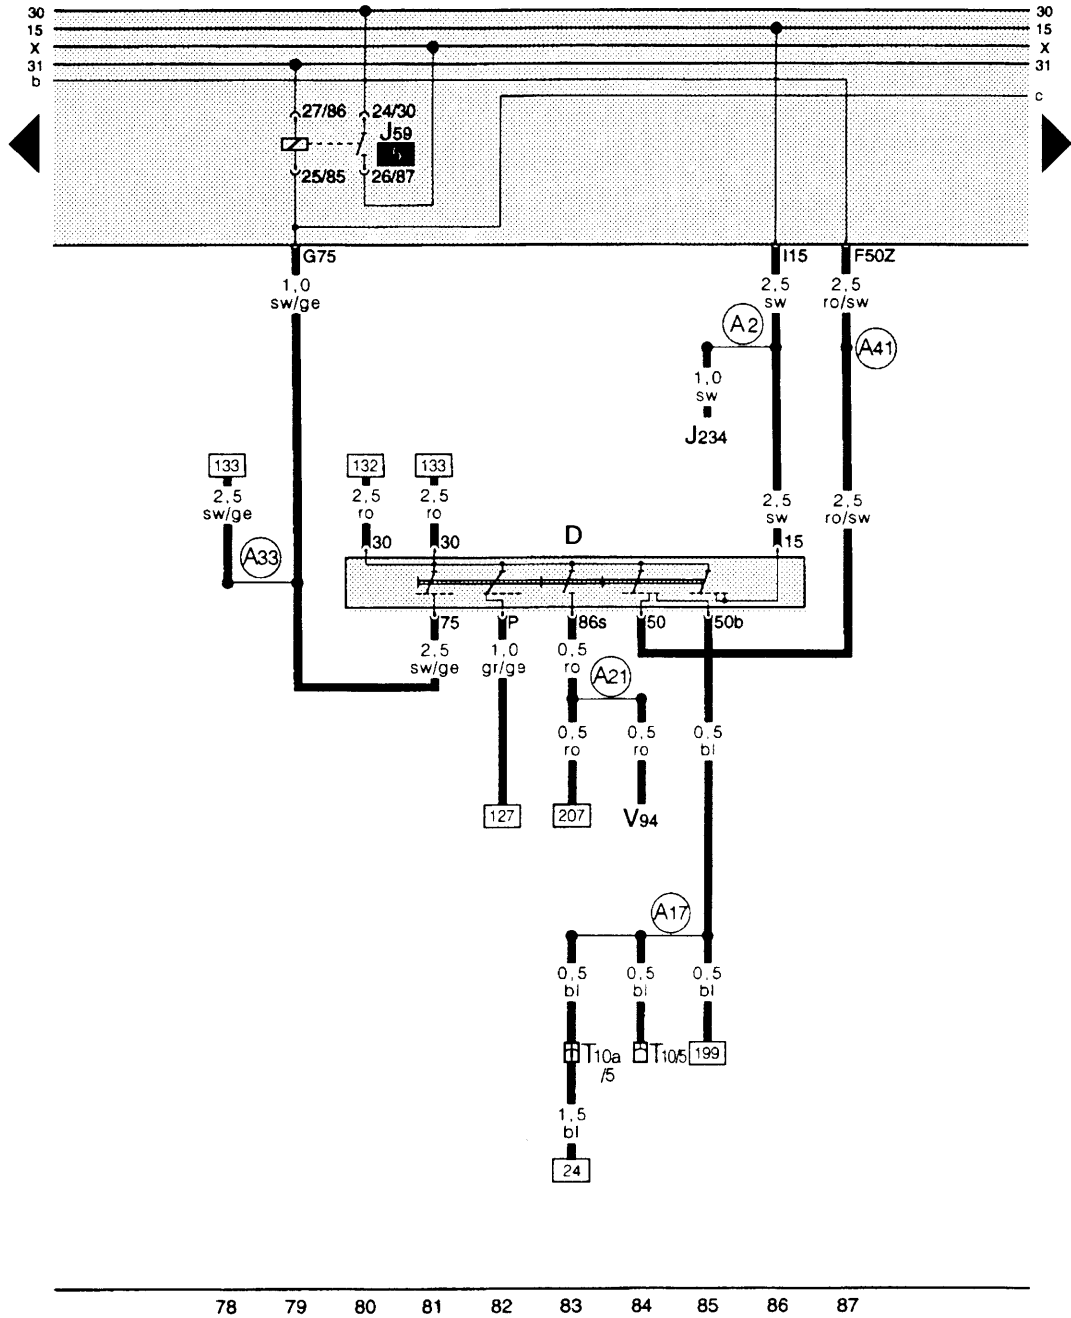

- bl = blue
- br = brown
- ge = yellow
- gn = green
- gr = grey
- li = lilac
- ro = red
- sw = black
- ws = white

97-16618

- D - Ignition/starter switch
- J 59 - Relief relay for X contact
- J 234 - Airbag control unit
- T 10 - Connector, 10-pin, black, on connector point, aux. relay carrier
- T 10 a - Connector, 10-pin, yellow, on connector point, aux. relay carrier
- V 94 - Motor for central locking with control unit for interior lights switch-off delay and anti-theft alarm system

- (199) - Earth connection -3-, in dash panel wiring loom
- (A2) - Positive (+) connection (15), in dash panel wiring loom
- (A17) - Connection (61), in dash panel wiring loom
- (A21) - Connection (86s), in dash panel wiring loom
- (A33) - Connection (75), in dash panel wiring loom
- (A41) - Positive (+) connection (50), in dash panel wiring loom