


Dash panel insert, voltage stabiliser, coolant monitor, fuel gauge, speedometer

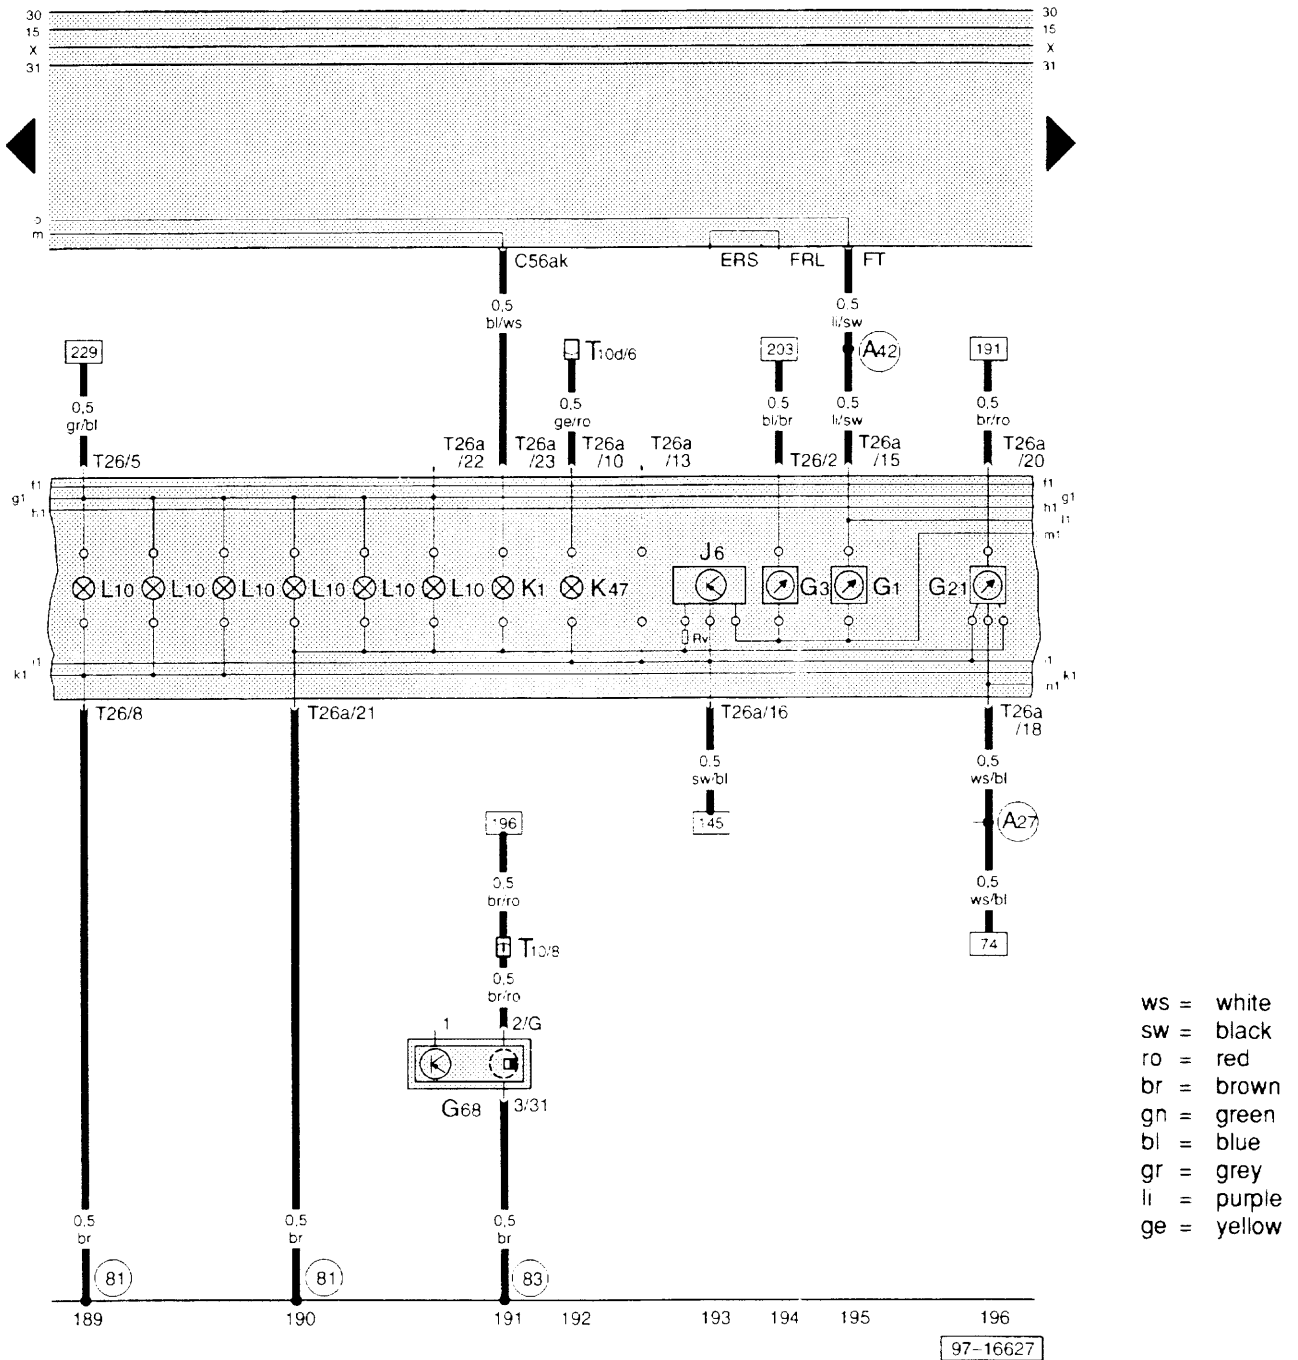

- G 1 - Fuel gauge
- G 3 - Coolant temperature gauge
- G 21 - Speedometer
- G 68 - Road speed sender
- J 6 - Voltage stabiliser
- K 1 - Main beam warning lamp
- K 47 - ABS warning lamp
- L 10 - Dash panel insert light bulb
- T 10 - Connector, 10-pin, black, connector point in auxiliary relay carrier
- T 10 d - Connector, 10 pin, blue, connector point in auxiliary relay carrier
- T 26 - Connector, 26-pin, yellow, on dash panel insert
- T 26 a - Connector, 26-pin, blue, on dash panel insert

- 81 - Earth connection -1-, in dash panel wiring loom
- 83 - Earth connection -1-, in front right wiring loom
- A27 - Connection (speed signal), in dash panel wiring loom
- A42 - Connection (fuel gauge), in dash panel wiring loom