


Electric seat adjustment

from July 1994


Position of relays
also see "Fitting Locations" section

Relay plate with fuse holder:

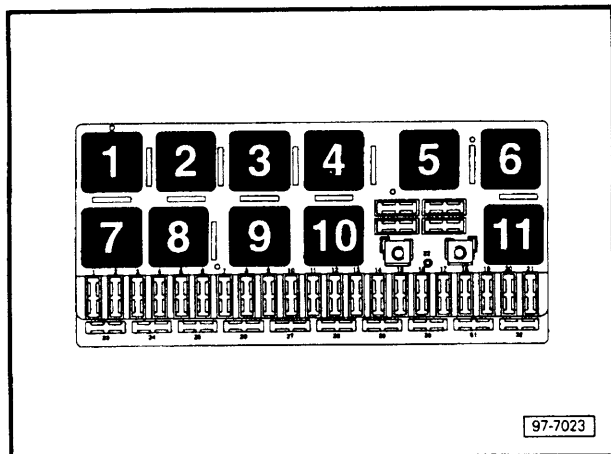


Position of relays:

Auxiliary relay carrier, front
(under dash panel, left)

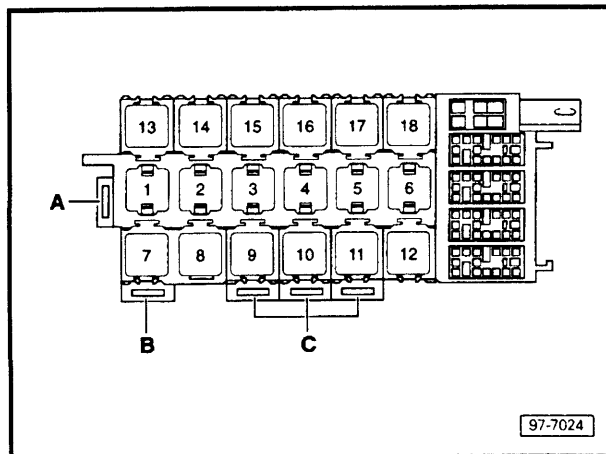

Position of relays:

Auxiliary relay carrier, rear
(under seat bench, left)

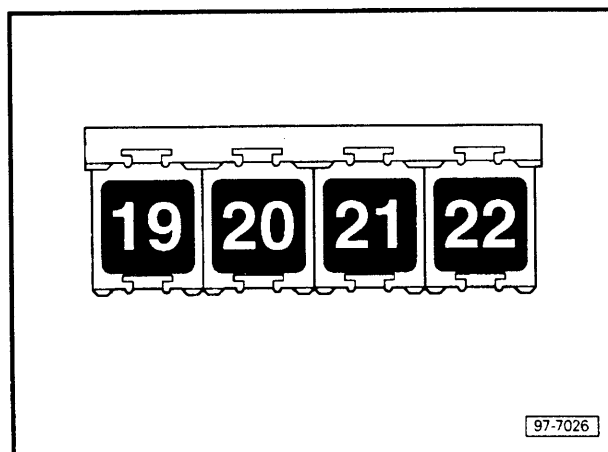


Position of relays:


Fuse colours:

- 30 A - green
- 25 A - white
- 20 A - yellow
- 15 A - blue
- 10 A - red
- 5 A - beige

Electric seat adjustment, driver's seat

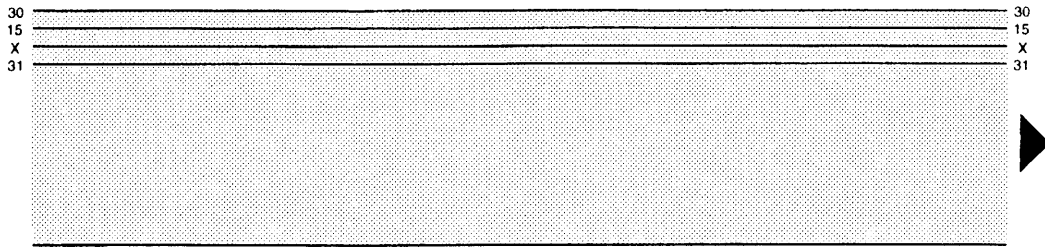

- bl = blue
- br = brown
- ge = yellow
- gn = green
- gr = grey
- li = purple
- ro = red
- sw = black
- ws = white

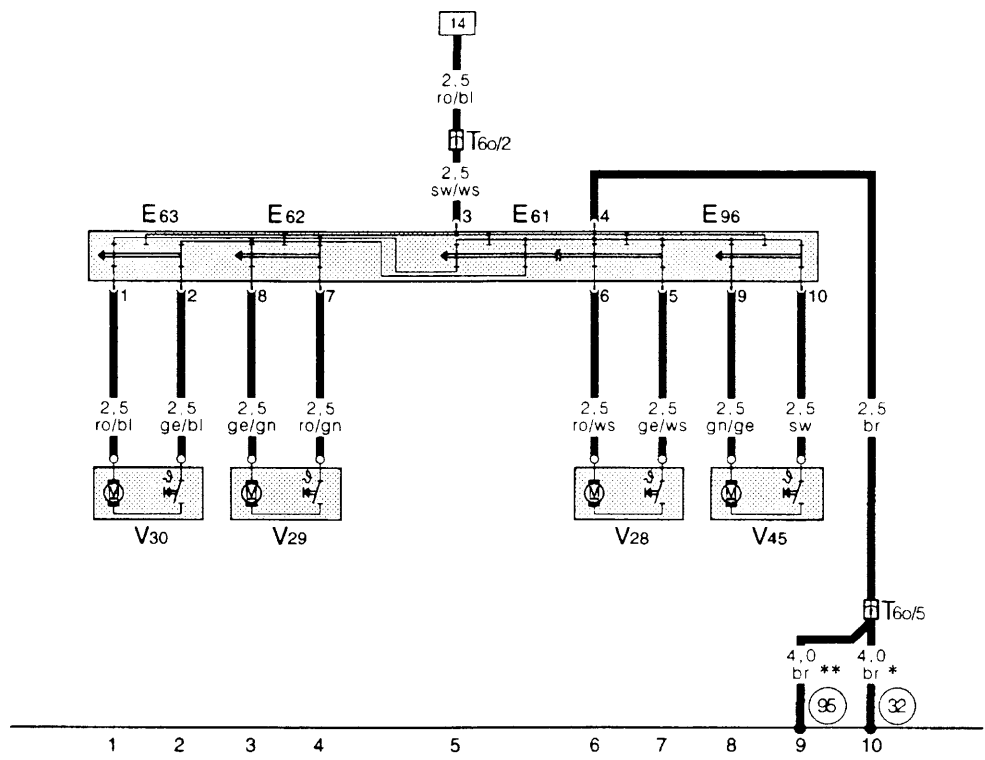


97-17131

- E 61 - Switch for driver's seat height and longitudinal adjustment
- E 62 - Driver's seat front height adjustment switch
- E 63 - Driver's seat rear height adjustment switch
- E 96 - Driver's seat backrest adjustment switch
- T 6 0 - Connector, 6-pin, brown, under driver's seat
- V 28 - Motor for driver's seat fore/aft adjustment
- V 29 - Motor for driver's seat front height adjustment
- V 30 - Motor for driver's seat rear height adjustment
- V 45 - Motor for driver's backrest adjustment

95 - Earth connection -1-, in wiring loom, seat adjuster

- * - only on vehicles without heated seats
- ** - only on vehicles with heated seats

Electric seat adjustment, passenger's seat

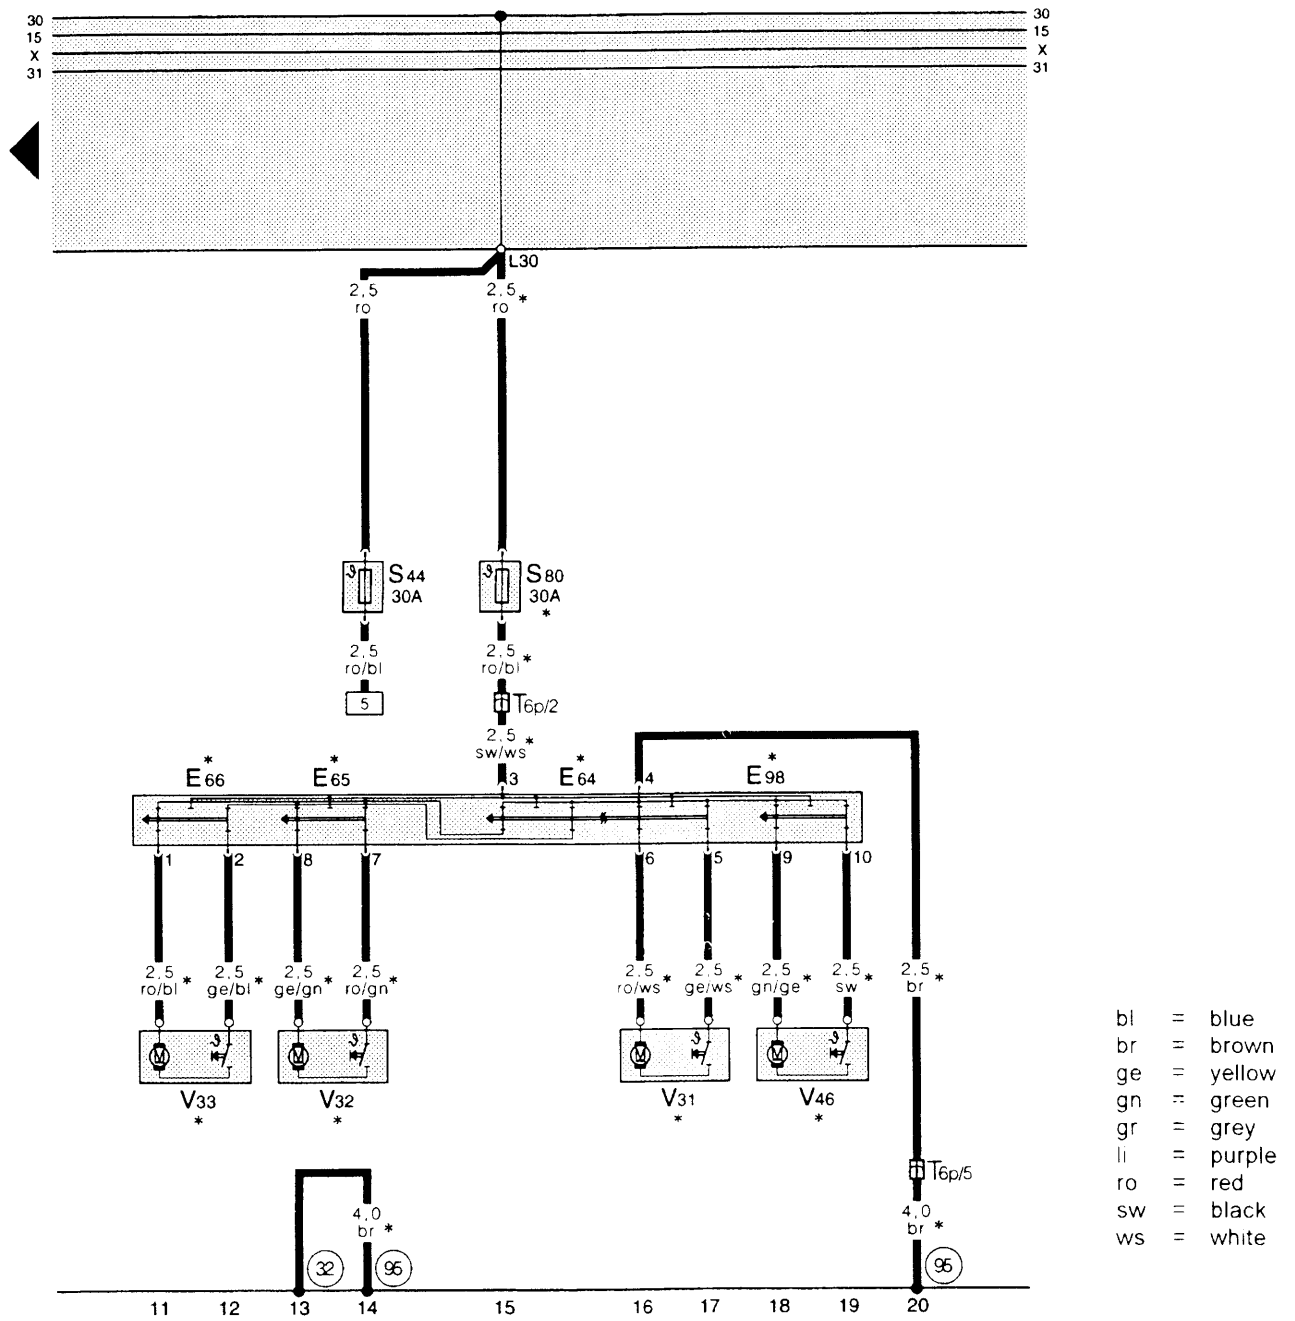

- bl = blue
- br = brown
- ge = yellow
- gn = green
- gr = grey
- li = purple
- ro = red
- sw = black
- ws = white

- E 64 - Passenger seat fore and aft adjustment switch
 - E 65 - Passenger seat front height adjustment switch
 - E 66 - Passenger seat rear height adjustment switch
 - E 98 - Passenger seat backrest adjustment switch
 - S 44 - Thermo fuse 1 for seat adjustment
 - S 80 - Thermo fuse 2 for seat adjustment
 - T 6 p - Connector, 6-pin, brown, under front passenger seat
 - V 31 - Motor for passenger seat fore and aft adjustment
 - V 32 - Motor for passenger seat front height adjustment
 - V 33 - Motor for passenger seat rear height adjustment
 - V 46 - Motor for passenger seat backrest adjustment
-
- 32** - Earth point, behind dash panel, left
 - 95** - Earth connection -1-, in wiring loom, seat adjuster
- * - only with seat adjustment for Recaro

97-17132