


## Switch for heated rear window, preparation for radio

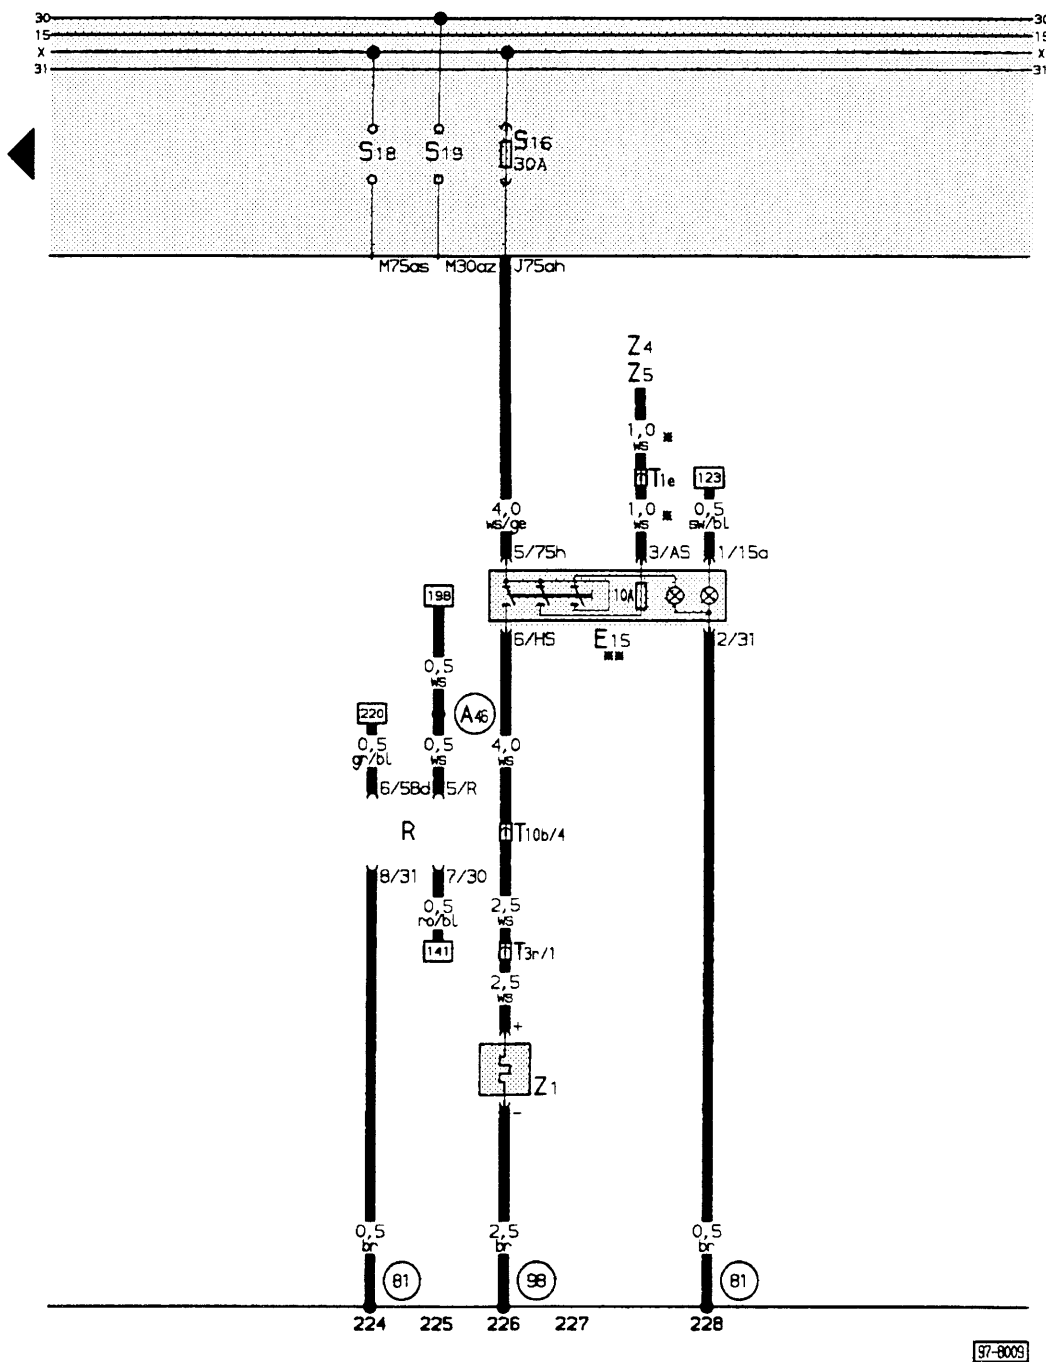

## Wiring colours:

bl = blue  
 br = brown  
 ge = yellow  
 gn = green  
 gr = grey  
 li = purple  
 ro = red  
 sw = black  
 ws = white

- E 15 – Heated rear window switch
- R – Radio
- T 1e – Connector single, green, behind dash panel, left
- T 3r – Connector 3 pin, white, in luggage boot, left
- T 10b – Connector 10 pin, brown, connector point in aux. relay carrier
- Z 1 – Heated rear window
- Z 4 – Heated outer mirror (driver's side)
- Z 5 – Heated outer mirror (passenger side)
- (81) – Earth connection – 1 –, in dash panel wiring loom
- (98) – Earth connection, in tailgate wiring loom
- (A6) – Positive (+) connection (30 – from radio) in dash panel wiring loom
- \* – Only with electrically adjustable and heated outside mirrors
- \*\* – Switch only on vehicles without air conditioner
- For switch (on vehicles with air conditioner) see CFD No. 89, Audi 80, 1992 Model Year