


# Electric window lifters and vent windows, Audi Coupé

From July 1991


Position of relays –  
also see “Fitting Locations”

Relay plate with fuse holder:

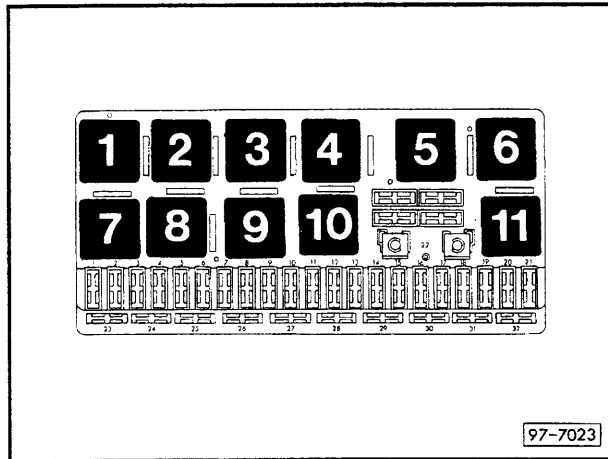

Position of relays:


Auxiliary relay carrier, front  
(under dash panel, left)

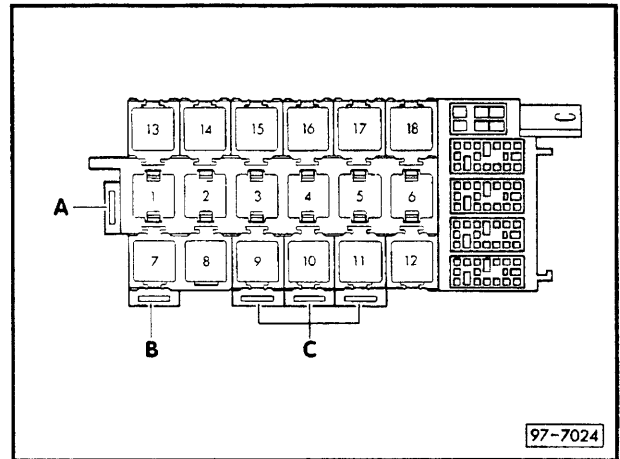

Position of relays:

**5** } Control unit for electric window lifters and vent  
**6** } windows

Auxiliary relay carrier, rear  
(under rear seat bench, left)

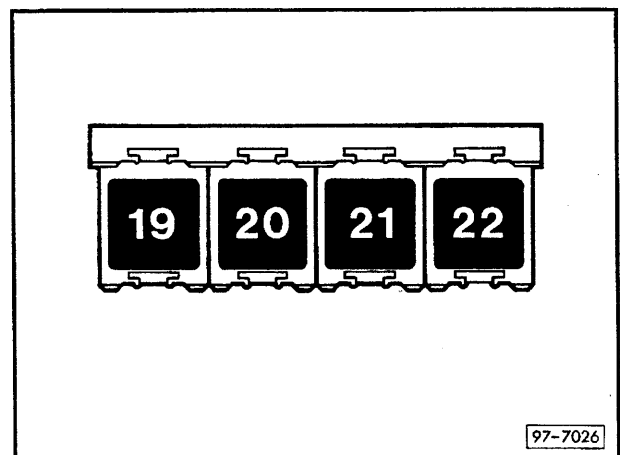


Position of relays:

## Fuse colours

30 A – green  
25 A – white  
20 A – yellow  
15 A – blue  
10 A – red  
5 A – beige

## Electric window lifters and vent windows

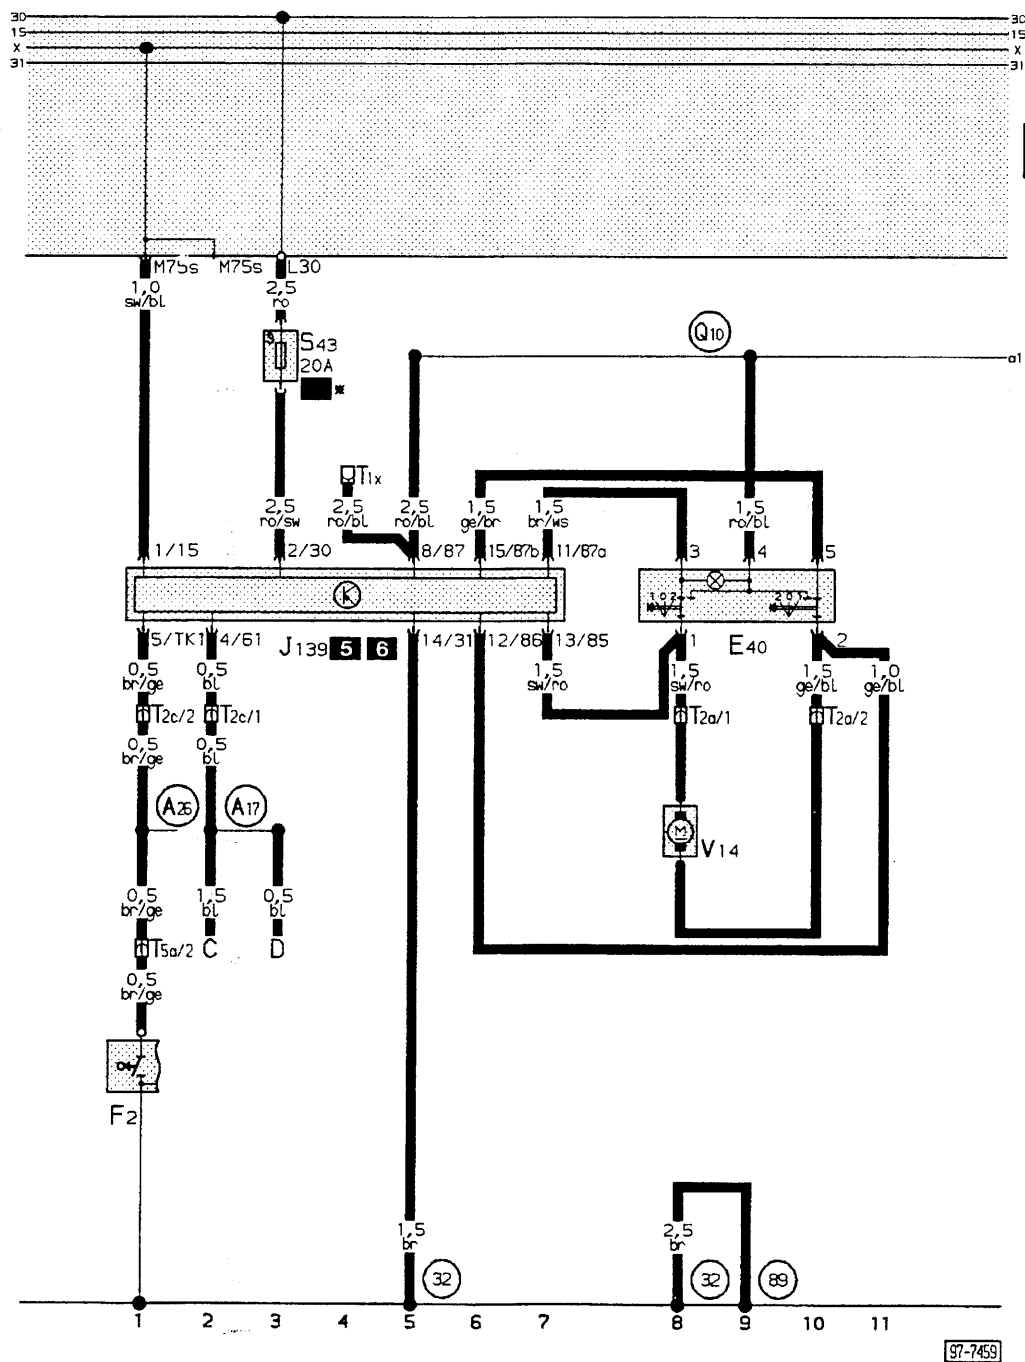


- C – Alternator
- D – Ignition/starter switch
- E 40 – Window lifter switch, front left
- F 2 – Front left door contact switch with buzzer contact
- J 139 – Control unit for window lifter/vent windows and sliding roof
- S 43 – Window lifter thermo fuse (in auxiliary relay carrier)
- T 1x – Connector single, green, behind dash panel, left
- T 2a – Connector 2 pin, in driver's door
- T 2c – Connector 2 pin, white, behind dash panel, left
- T 5a – Connector 5 pin, brown, connector point in aux. relay carrier
- V 14 – Window lifter motor, left
- Ⓣ – Earth point, behind dash panel, left
- Ⓢ – Earth connection – 1 –, in window lifter wiring loom

- Ⓡ – Connection (61), in dash panel wiring loom
- Ⓡ – Connection (door contact switch/driver side), in dash panel wiring loom
- Ⓡ – Positive (+) connection (87), in window lifter wiring loom
- \* – insert in any free relay position


**Note:** From 09/92, chassis No. 8BP A 0002152, automatic close function is no longer provided. In current track 2 wire 0.5 bl from connection A17 is no longer connected to connector T2c/1.

## Electric window lifters and vent windows

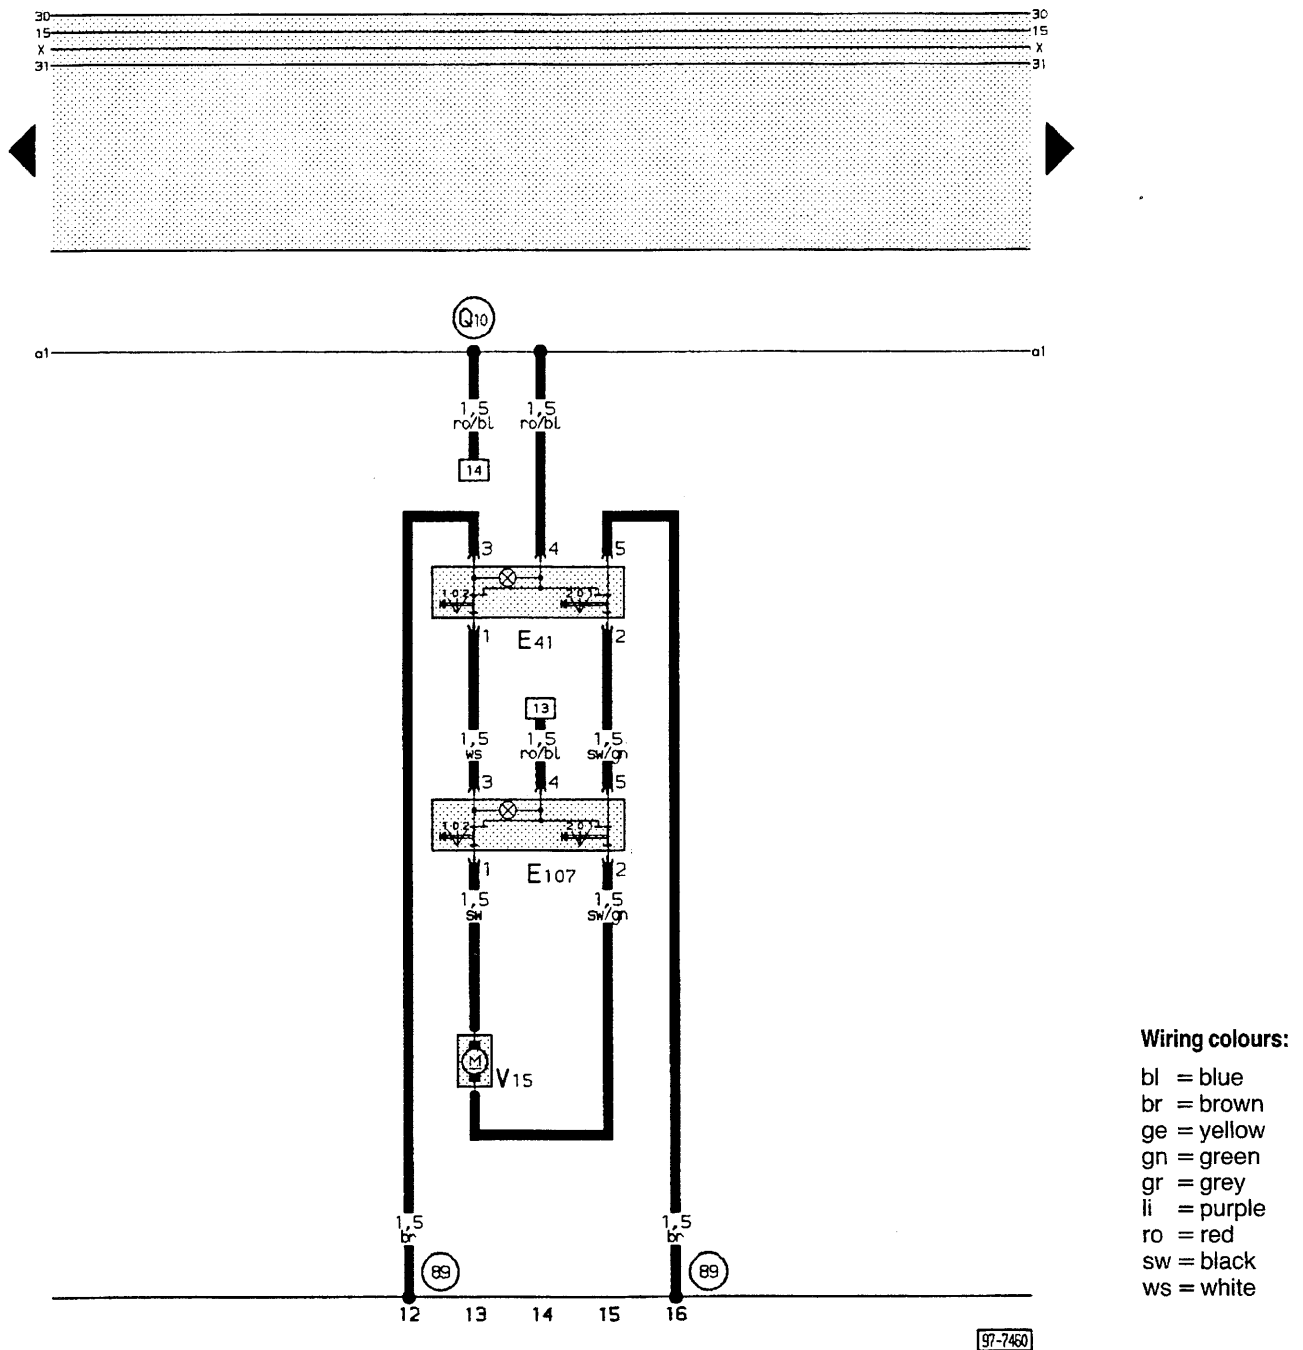

- E 41 – Window lifter switch, front right  
 E 107 – Switch for window lifter (in passengers' door)  
 V 15 – Window lifter motor, right  
 (89) – Earth connection – 1 –, in window lifter wiring loom  
 (Q10) – Positive (+) connection (87), in window lifter wiring loom

## Electric window lifters and vent windows

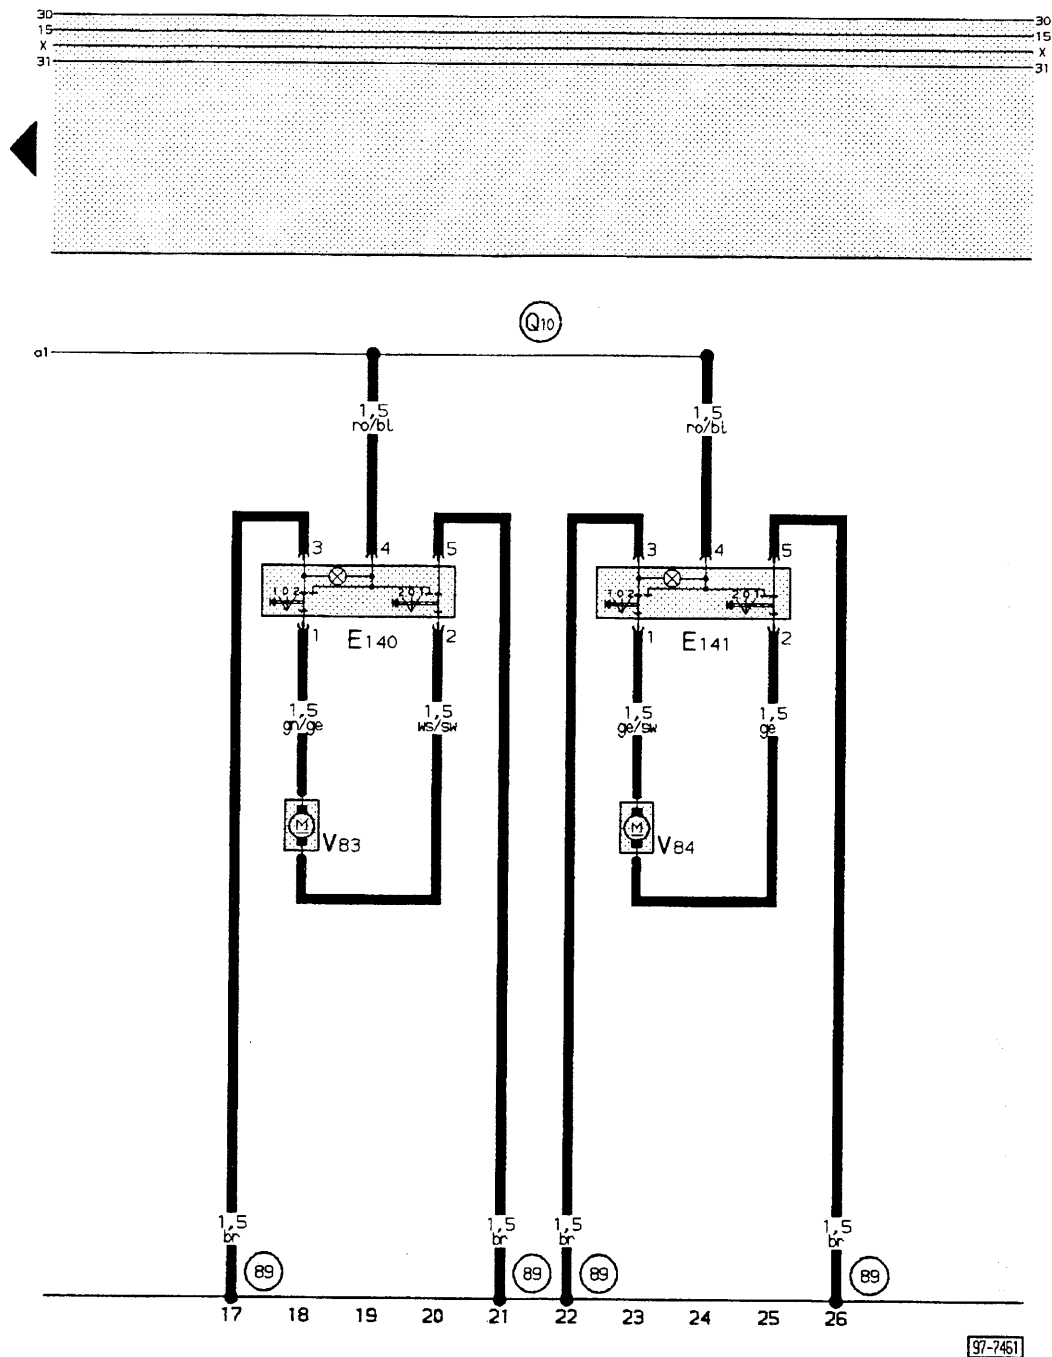

## Wiring colours:

bl = blue  
 br = brown  
 ge = yellow  
 gn = green  
 gr = grey  
 li = purple  
 ro = red  
 sw = black  
 ws = white

- E 140 – Switch for vent window, left  
 E 141 – Switch for vent window, right  
 V 83 – Motor for vent window, left  
 V 84 – Motor for vent window, right  
 (89) – Earth connection – 1 –, in window lifter wiring loom  
 (Q10) – Positive (+) connection (87), in window lifter wiring loom