


Electronic fuel injection, ignition

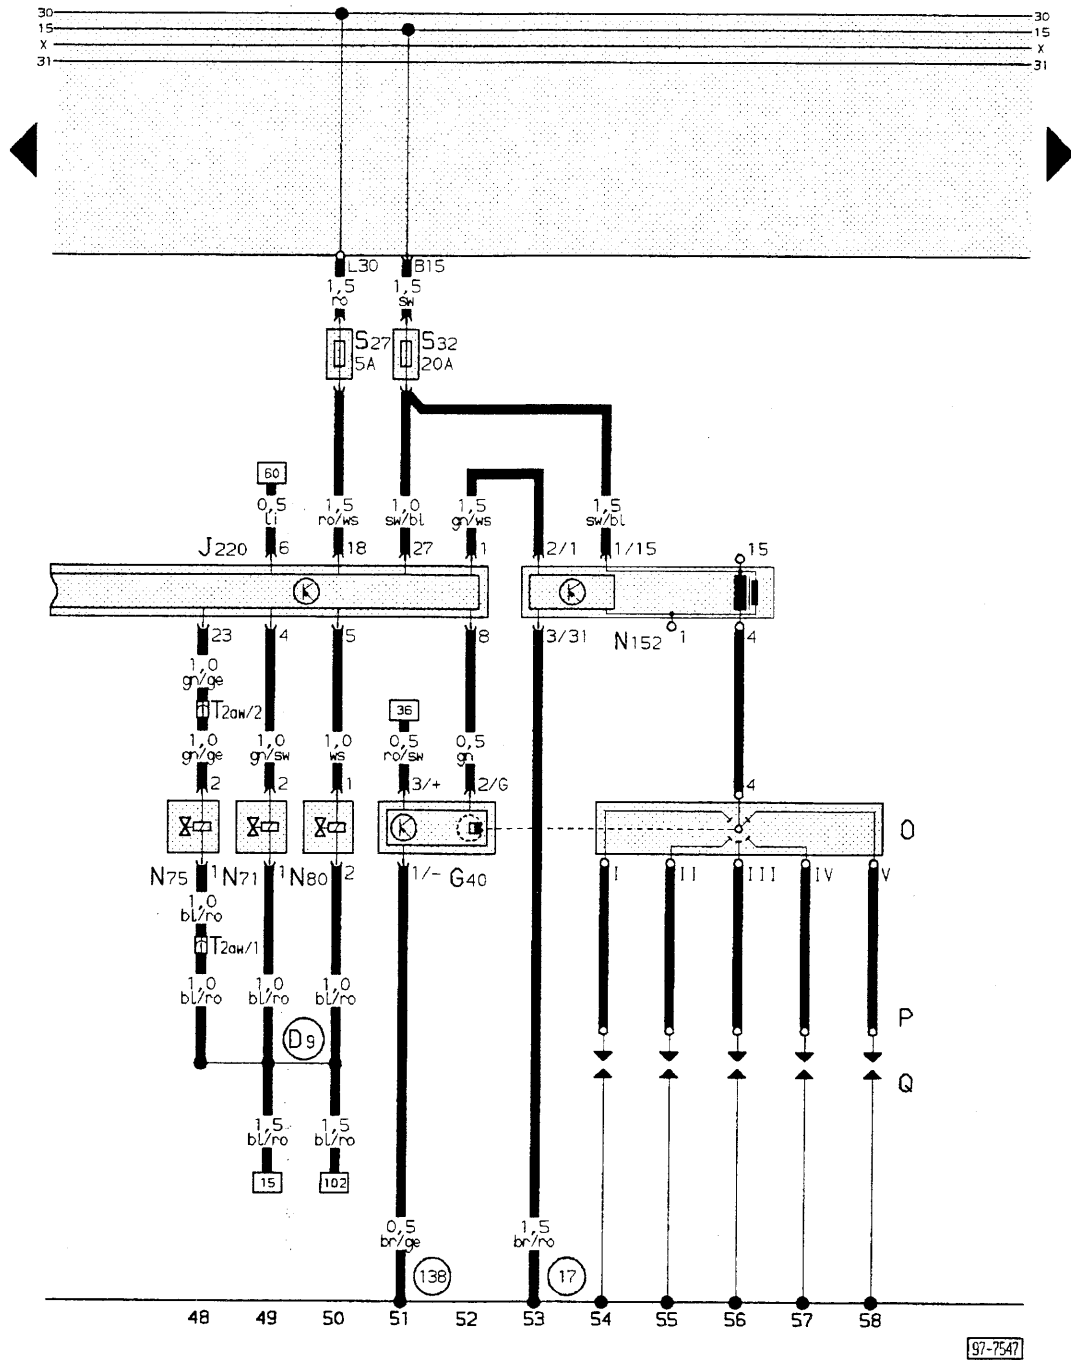

Wiring colours:

- bl = blue
- br = brown
- ge = yellow
- gn = green
- gr = grey
- li = purple
- ro = red
- sw = black
- ws = white

- G 40 – Hall sender
- J 220 – Control unit for motronic
- N 71 – Idling speed stabilization valve
- N 75 – Solenoid valve for boost pressure control
- N 80 – Activated charcoal filter system solenoid valve I (pulsed)
- N 152 – Ignition transformer
- O – Ignition distributor
- P – Spark plug connector
- Q – Spark plugs
- S 27 – Fuse for engine systems I (in additional fuse holder)
- S 32 – Fuse for engine systems I and ignition-coil, electric cut-off valve (in additional fuse holder)
- T 2aw – Connector 2 pin, in engine compartment, right
- ⑰ – Earth point, on intake manifold
- ⑚ – Earth connection (control unit), in Motronic wiring loom
- ① – Positive (+) connection (15a) via fuse 24, in front right wiring loom

97-7547