


Additional instruments, cigarette lighter

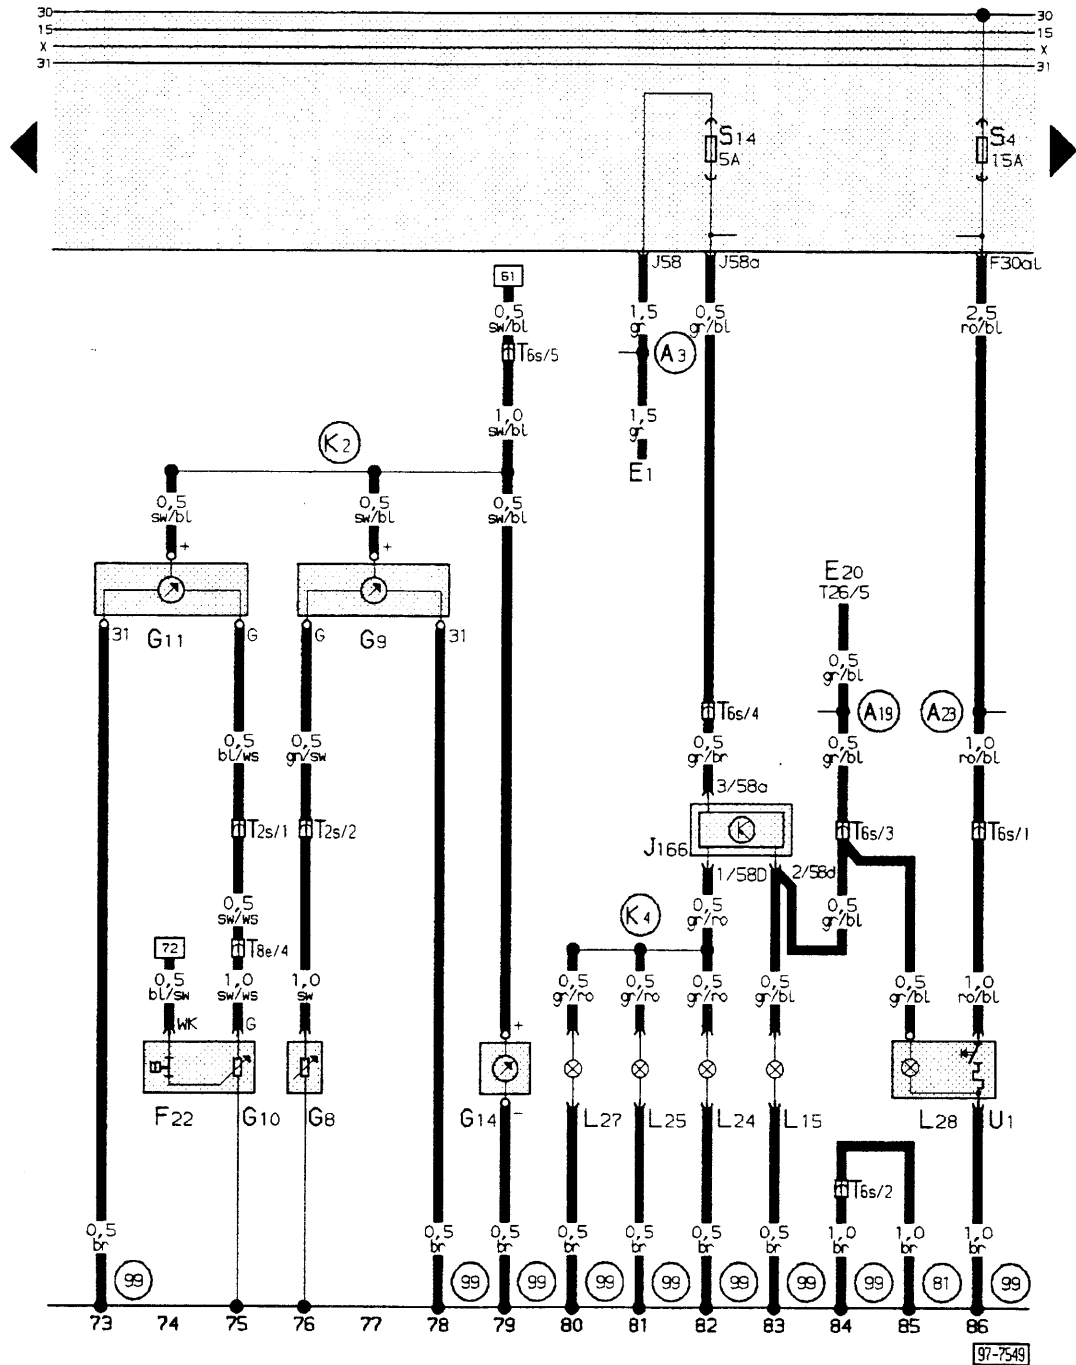

Wiring colours:

- bl = blue
- br = brown
- ge = yellow
- gn = green
- gr = grey
- li = purple
- ro = red
- sw = black
- ws = white

- E 1 – Lighting switch
- E 20 – Switches and instruments – lighting control
- F 22 – Oil pressure switch (0.3 bar)
- G 8 – Oil temperature sender
- G 9 – Oil temperature gauge
- G 10 – Oil pressure sender
- G 11 – Oil pressure gauge
- G 14 – Voltmeter
- J 166 – Instrument lighting amplifier
- L 15 – Ashtray light bulb
- L 24 – Oil temperature gauge light bulb
- L 25 – Voltmeter light bulb
- L 27 – Oil pressure gauge light bulb
- L 28 – Cigarette lighter light bulb
- T 2s – Connector 2 pin, brown, behind console
- T 6s – Connector 6 pin, white, behind dash panel, centre

- T 8e – Connector 8 pin, in engine compartment, right
- T 26 – Connector 26 pin, yellow, on dash panel insert
- U 1 – Cigarette lighter
- (81) – Earth connection – 1 –, in dash panel wiring loom
- (99) – Earth connection, in console wiring loom
- (A3) – Positive (+) connection (58), in dash panel wiring loom
- (A19) – Connection (door contact switch) in dash panel wiring loom
- (A23) – Connection (30a1), in dash panel wiring loom
- (K2) – Positive (+) connection (15a), in console wiring loom
- (K4) – Positive connection (58d2), in console wiring loom