


Electric sliding roof, Audi Coupé

From July 1993


Position of relays –
also see „Fitting Locations”

Relay plate with fuse holder:

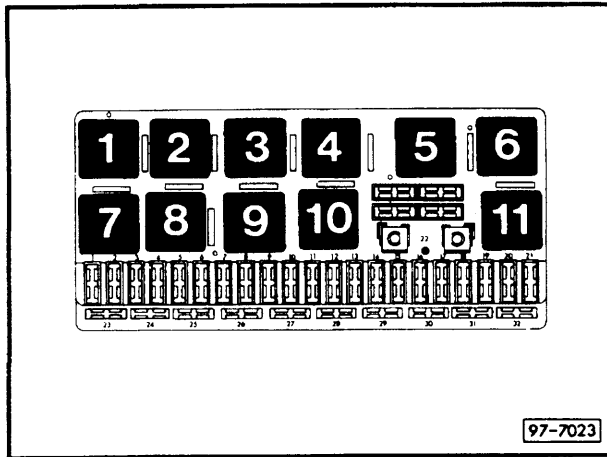

Position of relays:

Auxiliary relay carrier, front
(under dash panel, left)

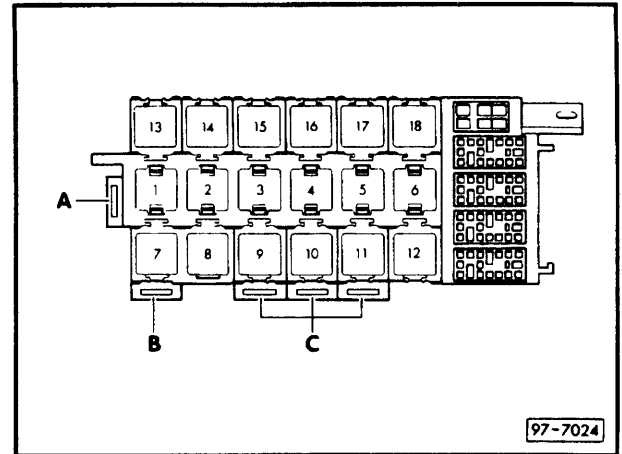


Position of relays:



Fuse colours


- 30 A – green
- 25 A – white
- 20 A – yellow
- 15 A – blue
- 10 A – red
- 5 A – beige

Auxiliary relay carrier, rear
(under rear seat bench, left)

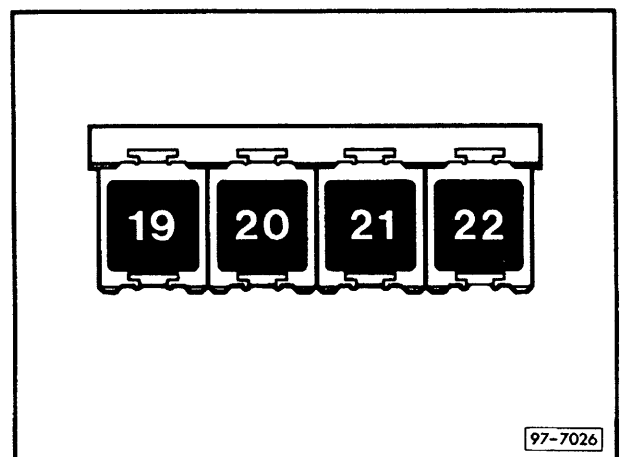

Position of relays:

Electric sliding roof

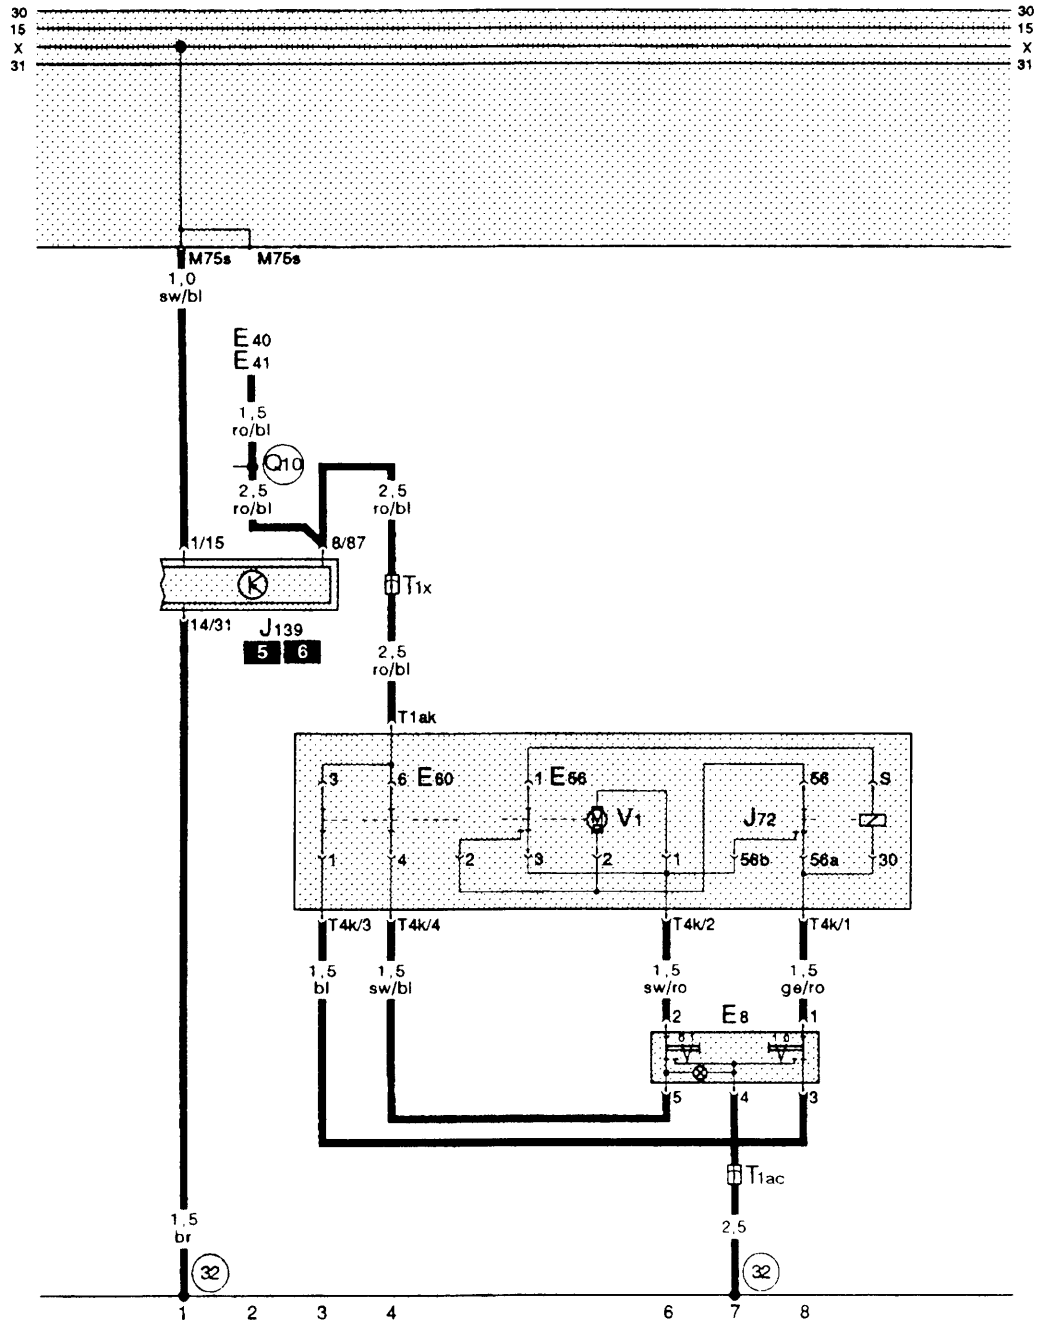

Wiring colours:

- ro = red
- sw = black
- br = brown
- ge = yellow
- gn = green
- bl = blue
- gr = grey
- ws = white
- li = purple

97-16127

- E 8 – Switch for sliding roof
- E 40 – Window lifter switch, front left
- E 41 – Window lifter switch, front right
- E 56 – Sliding roof cut-out switch (closed)
- E 60 – Sliding roof open/closed cut-out switch
- J 72 – Sliding roof relay
- J 139 – Control unit for window lifter/vent wings and sliding roof
- T 1x – Connector single, green, behind dash panel, left
- T 1ac – Connector single, near sliding roof switch
- T 1ak – Connector single, black, near sliding roof switch
- T 4k – Connector 4 pin, black, near sliding roof switch
- V 1 – Sliding roof motor
- ⊕ – Earth point, behind dash panel, left
- ⊕ – Positive (+) connection (87), in window lifter/central locking and door contact switch wiring loom