


Dash panel insert, digital clock, instrument lighting control, rev. counter

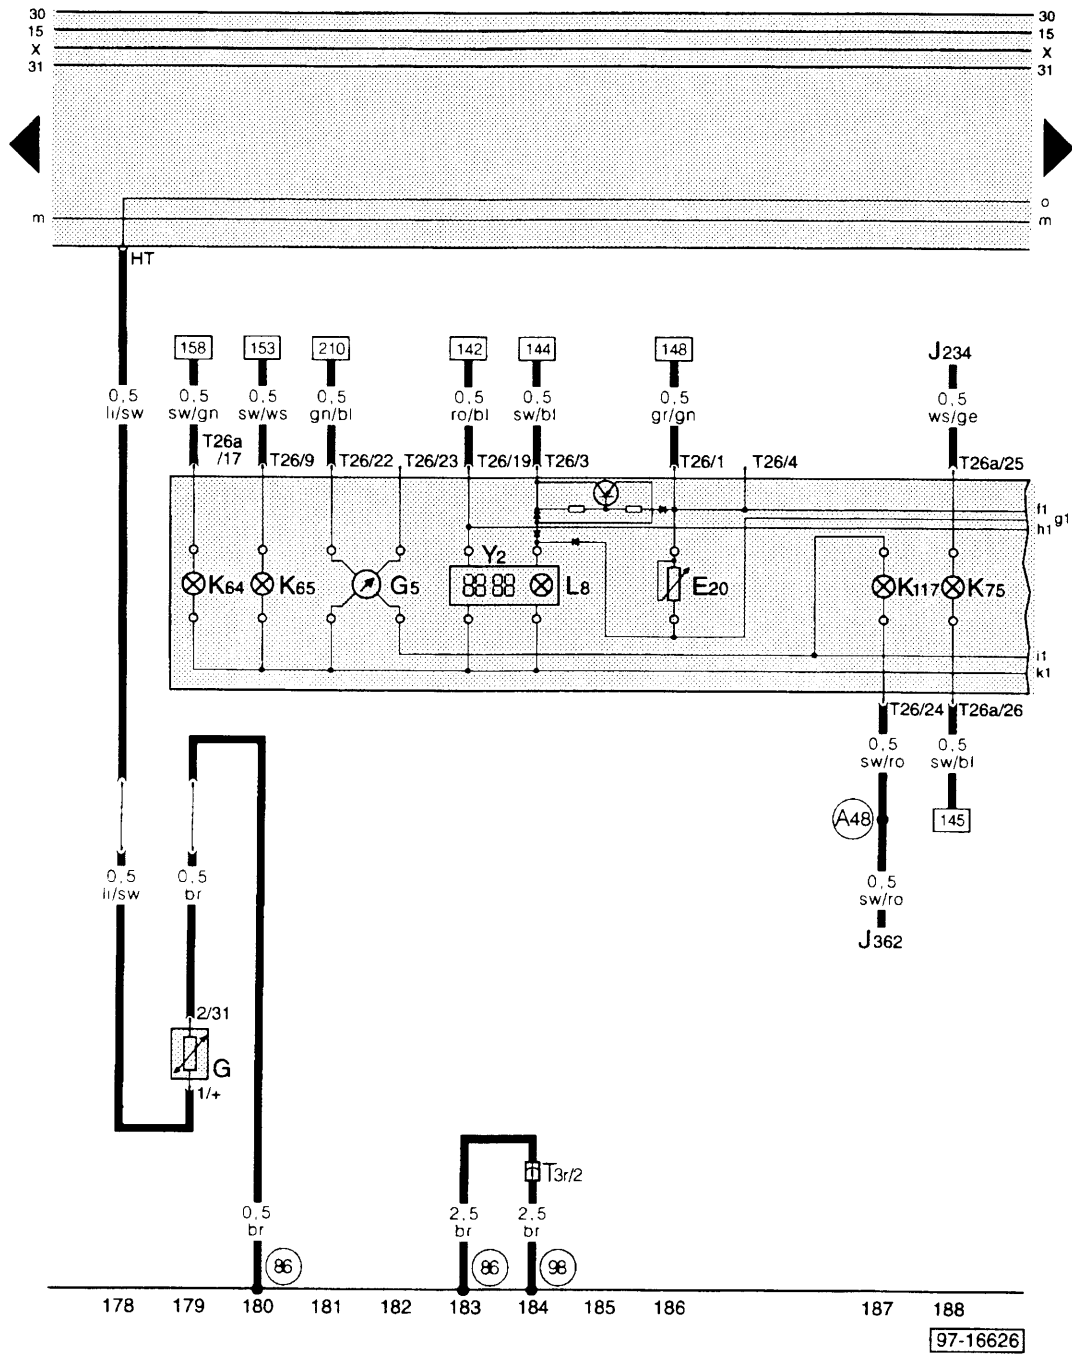

- bl = blue
- br = brown
- ge = yellow
- gn = green
- gr = grey
- li = lilac
- ro = red
- sw = black
- ws = white

- E 20 - Switches and instruments - lighting control
- G - Fuel level sender
- G 5 - Rev counter
- J 234 - Airbag control unit
- J 362 - Immobiliser control unit
- K 64 - Emergency light and right turn signal warning lamp
- K 65 - Left turn signal warning lamp
- K 75 - Airbag warning lamp
- K 117 - Immobiliser warning lamp
- L 8 - Clock light bulb
- T 3 r - Connector, 3-pin, white, in luggage boot, left
- T 26 - Connector, 26-pin, yellow, on dash panel insert
- T 26 a - Connector, 26-pin, blue, on dash panel insert
- Y 2 - Digital clock

- (86) - Earth connection -1-, in rear wiring loom
- (98) - Earth connection, in tailgate wiring loom
- (A48) - Connection (catalyst monitoring), in dash panel wiring loom