## Switch for heated rear window, preparations for radio installation

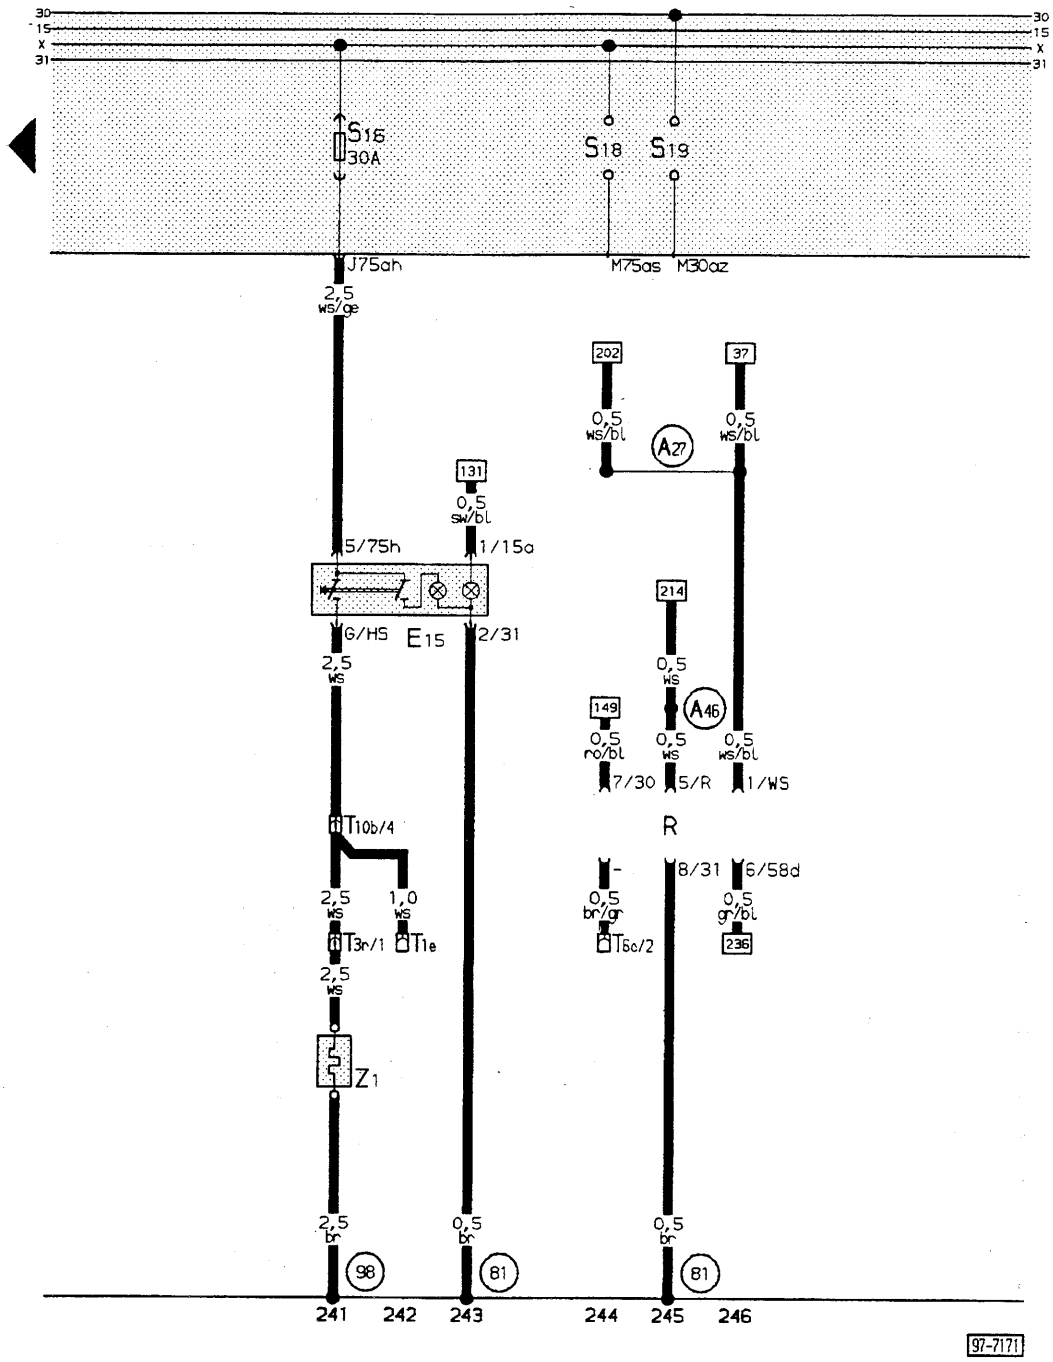


**Wiring colours:**

bl = blue
br = brown
ge = yellow
gn = green
gr = grey
li = purple
ro = red
sw = black
ws = white

E 15 – Heated rear window switch
R – Connection for radio
T 1e – Connector single, green, behind dash panel, left
T 3r – Connector 3 pin, white, in luggage boot, left
T 6c – Connector 6 pin, black, behind dash panel, left
T 10b – Connector 10 pin, brown, connector point in aux. relay carrier
Z 1 – Heated rear window

(81) – Earth connection – 1 –, in dash panel wiring loom

(98) – Earth connection, in tailgate wiring loom

(A27) – Connection (speed signal), in dash panel wiring loom

(A46) – Positive (+) connection (30 – from radio), in dash panel wiring loom